



## Quick Setup Guide

**1. How to activate the batteries** (two AA Alkaline batteries have been pre-installed)

**STEP 1.** Pull the Tab on the back of the Remote Control straight out with one smooth motion.

**STEP 2.** Press the **AT&T** key. The **AT&T** key will light up if the batteries are working properly. If the **AT&T** key does not light up, please refer to the Questions & Answer (Q&A) of this Guide.



Pull Tab on Battery Compartment

**2. Setting up your Remote to control other devices** (TV/DVD/etc)

To control other devices, your Remote Control needs to be programmed. The Remote contains the IR codes to control them.

\*Start with Section 2A (Search for Device Codes) to find the code for your device.  
\*If Section 2A is unsuccessful, please refer to Section 2B (Manually Program the Device Codes).

### 2A. Search for Device Codes

The Search method will scan through all of the IR codes to find one that works with your TV or other device.

**STEP 1.** Power on the device to be programmed.

**STEP 2.** Point the remote control at the selected device.

**STEP 3.** Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **ENTER** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in search mode.



**STEP 4.** Search by pressing the **SCAN** → **FF** key repeatedly until the device turns OFF (the selected mode key will flash once for each press of the **SCAN** → **FF** key). Pause briefly between each key press to allow your device enough time to respond.

**STEP 5.** Press the **POWER** button on the Remote to turn the device back on.

NOTE: If the device does not turn off and you have searched all available codes, the selected mode key will flash 8 times. If this happens, please start over at Step 2 or proceed to 2B (Manually Program the Device Codes).

NOTE: If the device does not turn on, you may have pressed the **SCAN** → **FF** key too many times. Press the **REW** → **SCAN** key to scan backwards and test the **POWER** button again.

**STEP 6.** Check **VOLUME** and **MUTE**. Do not test using **REW** → **SCAN**, **SCAN** → **FF**, **FWD**, **EXIT**. If there is any problem with any of the keys, press the **SCAN** → **FF** button and search until you find a code which will operate all the function properly.

**STEP 7.** Press the **ENTER** key to save the programming. The appropriate mode key will give a long flash indicating successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

If you have an integrated or combination unit such as TV-DVD, TV-DVD-VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV-DVD, search for the device code of TV and program into TV mode key, then search for the Device Code of DVD and program into the DVD mode key.

### 2B. Manually Program the Device Codes

Use the following steps to setup the TV, DVD or AUX mode keys:

**STEP 1.** Each device (TV, DVD, VCR, etc.) has its own "code". A list of these 4-digit device setup codes is provided in the back of this Booklet. Make a note of the codes for your devices for quick reference:

TV \_\_\_\_\_  
DVD \_\_\_\_\_  
VCR \_\_\_\_\_  
OTHER \_\_\_\_\_

The mode keys can only be programmed with codes starting with the number assigned to that device. TV codes must start with "1"; DVD codes "2"; AUX codes "3", "4", "5", or "6".

**STEP 2.** Power on the device to be programmed.

**STEP 3.** Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **OK** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in the programming mode.



**STEP 4.** Enter the 4-digit Device Code from Step 1 for the desired device using the keypad on the remote.

**STEP 5.** The appropriate mode key will give a long flash indicating it received the code.

**STEP 6.** Point the remote control at the selected device and press the **POWER** key to turn off the device and confirm programming. If the device does not turn off, or not all functions work, then start again at Step 1 with the next code in the List. It is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device. Press the **POWER** key again to turn the device back on and check other functions.

NOTE: When an invalid code is entered, the selected mode key will flash eight times and the Remote Control will return to its normal operation.

NOTE: If you press any key other than the number keys, the selected mode key will flash eight times and exit programming mode. The same is true if it is inactive for more than 30 seconds. This indicates the remote has left the programming mode and returned to normal operation without saving any changes. You will have to start over again.

## Function Keys

Mode Keys (AT&T TV DVD AUX)

POWER Key


SCAN BACK - FF

OK Key

CHANNEL UP / DOWN

VOLUME UP / DOWN

ENTER

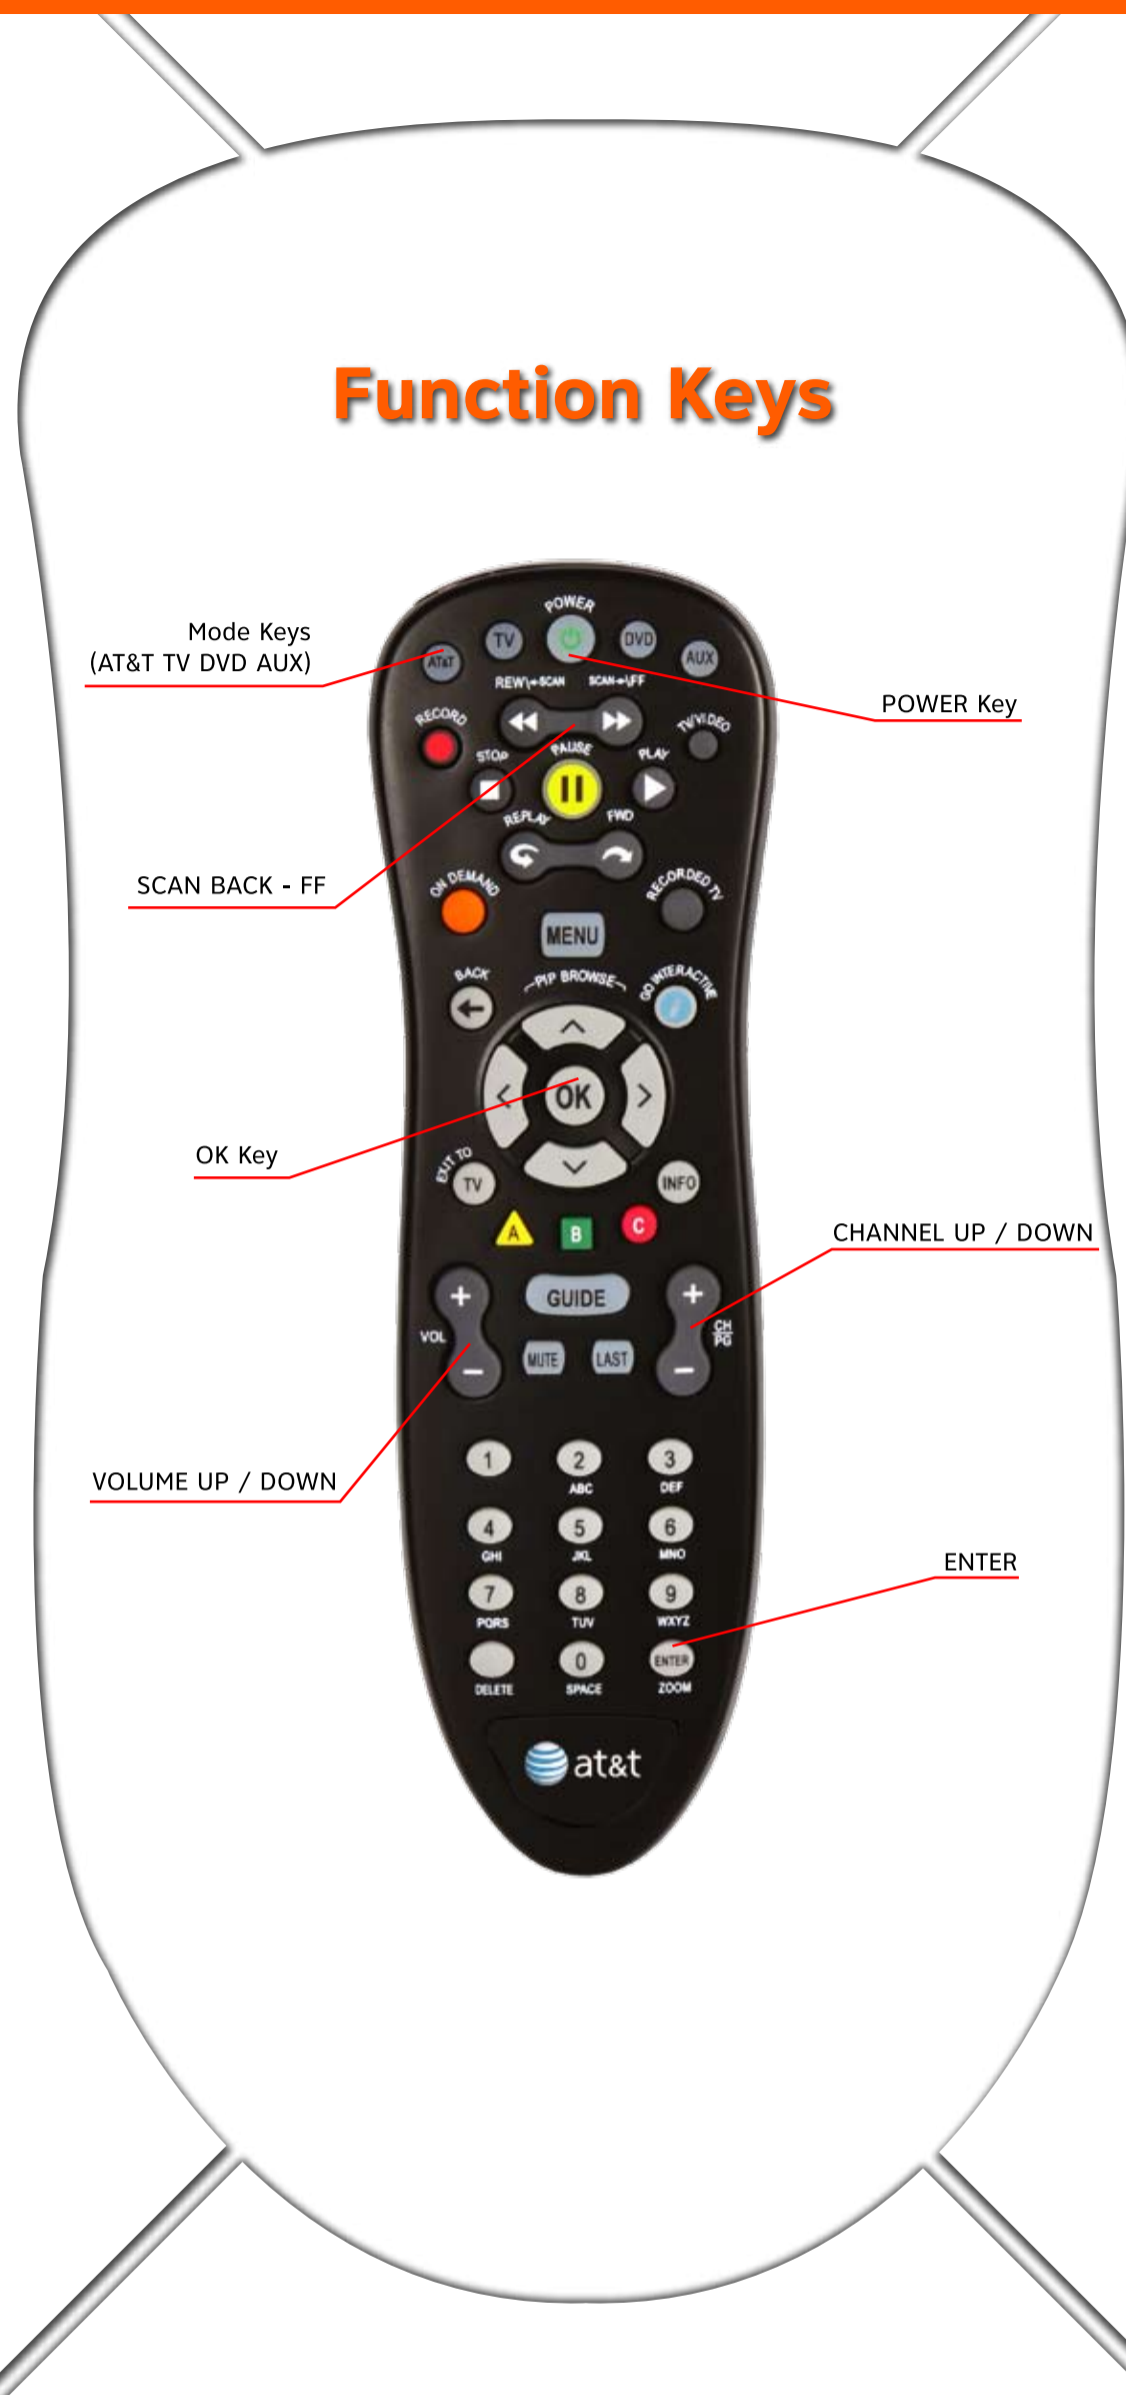

## Advanced Features Setup

### A. Volume or Channel Control Options

By factory default the Volume and Channel commands are sent to the AT&T U-verse Receiver. Once the TV has been programmed, the **POWER** key will control both the U-verse Receiver and the TV; the Volume controls (**VOL+** or **-**, **MUTE**) will go to the TV, and the Channel controls (**CH +** or **-**, **LAST**, number keys) will be sent to the U-verse Receiver. Once you have programmed a device to a mode key, you can send the volume commands to that device rather than the TV or U-verse Receiver (e.g. a home theater receiver). Follow the instructions in Section A1 to have the Volume commands always go to one device. If you want the Volume (or Channel) commands to go to a programmed device when it has been selected using the mode key, follow the instructions in A2.

#### A1. Always Send Volume or Channel Commands to One Device

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

**STEP 3.** Press the mode key (**TV**, **DVD**, or **AUX**) for the device that you want to always control the volume or channel (e.g. **AUX** for your Home Theater).

**STEP 4.** The selected mode key (e.g. **AUX**) will give a long flash to confirm successful programming.

**A2. Send Volume or Channel Commands only to the Device Mode Selected** (e.g. in DVD mode, the DVD player controls the audio, but in TV mode the TV controls the audio)

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

**Question: I programmed my TV and Home Theater system to come on with my U-verse Receiver, but the Home Theater system turns off when I turn the others on.**

Answer: If any of the devices get out of sync so that some turn ON and others turn OFF, you will need to turn all Devices off. (For the device that is out of sync, use the actual device's power button). When all the devices are OFF, use the **POWER** key on the Remote Control to turn all devices back ON. It is important to point the Remote Control directly toward the devices for this to work properly.

**STEP 3.** Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

NOTE: The mode key must first have been programmed for your device.

### B. Power Control Options

By factory default, the **POWER** key only operates the AT&T U-verse Receiver. Once you have programmed the TV mode key, both the TV and the AT&T U-verse Receiver will be powered ON and OFF at the same time. In normal operation, you can turn programmed devices ON or OFF individually by pressing the appropriate mode key, and then the **POWER** key.

#### B1. To Power Multiple Devices On and Off Simultaneously

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

**STEP 3.** Press the **AT&T** key. The **AT&T** key will flash twice indicating correct entry.

**STEP 4.** Press the appropriate mode keys (**TV**, **DVD**, or **AUX**) that you wish to also control. The appropriate mode key will flash twice.

NOTE: The mode key must first have been programmed for your device.

**STEP 5.** Press the **ENTER** key to complete the programming. The last mode key programmed will give a long flash indicating successful programming.

#### B2. To Power Devices On and Off Independently

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

**STEP 3.** Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

### C. Backlight Cancellation Feature

Your Remote Control has the ability to turn the keypad backlighting ON or OFF. If you wish to use this feature to extend battery life, follow these instructions.

#### C1. Turning the Keypad Backlight OFF

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 9 1** using the numeric keypad.

**STEP 3.** The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

#### C2. Turning the Keypad Backlight ON

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 9 1** using the numeric keypad.

**STEP 3.** The **AT&T** key will give a long flash to confirm successful programming.

### D. Restoring Factory Defaults

Return all programmed codes to Factory Default.

**STEP 1.** Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

**STEP 2.** Enter **9 0 0** using the numeric keypad. The **AT&T** key will give a long flash to confirm successful programming. The Remote Control then returns to its normal state.

## Section of Contents

### Quick Setup Guide

- How to activate the batteries
- Setting up your Remote to control other devices (TV/DVD/etc)
- 2A. Search for Device Codes
- 2B. Manually Program the Device Codes

### Advanced Features Setup

- Volume or Channel Control Operations
- Power Control Options
- Backlight Cancellation Feature
- Restoring Factory Defaults

### Specifications & Notice

#### Questions & Answer (Q&A)

#### Care & Maintenance

#### Setup Codes (Back Page)



## Specifications & Notice

**Model: AT&T U-verse TV Standard Remote Control**  
IR Range: up to 30"

\*The range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on conditions, and can be less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: battery strength, infrared interference, and obstructions.

The AT&T U-verse TV Standard Remote Control is intended for use only with AT&T's U-verse TV receivers. The Remote Control may

not be compatible with all devices or capable of accepting every programming code or operating every function for all devices. See this Guide for further information.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Questions & Answer (Q&A)

**Question: I pulled the tab from the battery compartment and pressed the AT&T key, but it did not light up.**

Answer: Remove the battery door (push the tab up - towards the top of the remote). Check to be sure the batteries are seated and properly installed according to the (+ or -) markings inside the battery compartment.

**Question: The remote does not work or the backlighting is dim.**

Answer: Check to be sure the batteries are

installed with the correct polarity (see above). Use only Alkaline batteries. Batteries may be weak and need to be replaced.

**Question: I tried to program using "Search for Device Codes", but it failed.**

Answer: You must press the **ENTER** key to "save" the programmed code. Search may not work for all devices. Please refer to Section 2B - Manually Program the Device Codes.

**Question: What should I do when I replace**

**a device after I programmed the mode key?**

Answer: Simply override the code by reprogramming the mode key for the new device (see Quick Start Guide, Section 2A, or Section 2B).

**Question: I have programmed the codes for a device, but some function keys do not work.**

Answer: Try using Search for Device Codes (Section 2A) and make sure that the functions work before saving. If you entered the 4-digit device code using Section 2B (Manually

Program the Device Codes), it is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device.

**Question: I have programmed the TV mode key. After pressing the TV key, the Channel keys still control the AT&T U-verse receiver and not the TV.**

Answer: By default, the **CHANNEL** keys (**+**, **-**), **Last**, and number keys on the remote control operate the U-verse™ receiver.

## Care & Maintenance

**1.** Keep the remote control dry. If it gets wet, wipe it dry immediately.

**2.** Use and store the remote control only in normal temperature environments.

**3.** Handle the remote control gently and carefully. Don't drop it.

**4.** Wipe the remote control with a clean cloth occasionally to keep it looking new.

**5.** Except for the battery door, do not attempt to open, modify or tamper with the internal components of the remote control. This can cause malfunction and void the warranty.

**6.** Use only Alkaline AA batteries. Do not mix old and new batteries.

**7.** Replace batteries every 9 months.



# AT&T U-verse SETUP CODE List

## TV

Abex	1314
Ace	1316
Action	1391, 1553
Admiral	1293, 1315, 1331, 1337
Advent	1040, 1323, 1324
Adventura	1317, 1361
Aiko	1297, 1330
Aiwa	1155, 1164, 1488, 1512
Akai	1043, 1201, 1202, 1247, 1248, 1257, 1265, 1267, 1294, 1345, 1404, 1405
Akura	1375, 1549
Alaron	1365, 1379, 1382
Albatron	1385, 1388
Allerion	1300
Almark	1040, 1041, 1042, 1046, 1047, 1378
Ambassador	1378
America Pro	1044, 1380
Amtron	1386
Amtron	1045
Anam	1044, 1380
Anon National	1045, 1295
AOC	1041, 1042, 1043, 1046, 1353, 1359, 1368, 1381, 1440, 1442
AOC Envision	1410
Apex	1012, 1106, 1156, 1433, 1489
Apex Digital	1038, 1268, 1332
Archer	1353
Astar	1400, 1460
Audinac	1380
Audiovox	1044, 1045, 1249, 1330, 1336, 1353, 1380, 1384, 1402, 1436, 1334
Aventura	1334
Angion	1161, 1402, 1506
Bang & Olufsen	1807, 1423, 1424
Baysonic	1380
Belcor	1041, 1359, 1442
Best & Howell	1293, 1302, 1343
Benq	1107, 1116
Boxlight	1387
BPL	1382
Bradford	1044, 1045, 1380
Brilliant	1078, 1418
Brookwood	1041, 1359, 1442
Broksonic	1044, 1157, 1267, 1291, 1337, 1353, 1432, 1494
Bydsign	1396, 1450
Candle	1041, 1042, 1043, 1296, 1317, 1361, 1370, 1442
Carnivale	1043
CCE	1364, 1365, 1366, 1447
Celebrity	1027, 1294
Cetera	1038
Centurion	1041
Changhong	1038, 1406, 1407, 1408
Cineral	1384
Citizen	1039, 1041, 1042, 1043, 1045, 1047, 1296, 1297, 1311, 1330, 1361, 1367, 1402, 1442
Clairetone	1381
Claron	1380
Coby	1158, 1250, 1409, 1498
Colortyme	1041, 1042, 1442
Commerical	1326
Concerto	1041, 1042, 1370, 1442
Contec	1044, 1377, 1380, 1381
Contec/Cony	1045, 1049
Craig	1041, 1045, 1380
Crosley	1048, 1425
Crown	1044, 1045, 1306, 1367, 1380
CTX	1108, 1567
Curtis Mathes	1000, 1041, 1042, 1043, 1047, 1048, 1302, 1311, 1326, 1331, 1326, 1331, 1336, 1342, 1343, 1345, 1367, 1370, 1384, 1425, 1442
CXC	1044, 1045, 1420
Cytron	1110, 1398, 1475
Daewoo	1014, 1039, 1041, 1042, 1046, 1047, 1061, 1212, 1277, 1297, 1330, 1336, 1359, 1367, 1384, 1404, 1425, 1442
Daytron	1041, 1042, 1047, 1359, 1442
De Graaf	1382
Dell	1177, 1178, 1416, 1417, 1528, 1529
Denon	1342, 1544
Diamond/Vison	1043, 1478, 1479
Dimensia	1000
Dumont	1041, 1313, 1325, 1359, 1442
Durabrand	1035, 1037, 1041, 1044, 1334, 1337, 1353, 1380
Dwin	1331
Dynex	1040
Electroband	1027, 1294, 1381
Electrograph	1340
Electrohome	1041, 1042, 1294, 1295, 1442
Elite	1481
Emerson	1014, 1017, 1028, 1039, 1041, 1042, 1044, 1045, 1047, 1049, 1051, 1264, 1271, 1291, 1298, 1299, 1300, 1302, 1331, 1334, 1337, 1343, 1359, 1365, 1367, 1378, 1379, 1380, 1381, 1442, 1454, 1468
Emprex	1399, 1466
Envision	1041, 1042, 1043, 1442
ES	1199, 1339
ESA	1334
Finlandia	1382
Finlux	1374
Fisher	1109, 1301, 1302, 1343, 1382
Frontech	1375
Fujitsu	1313, 1228, 1229, 1230, 1231, 1300, 1379, 1570
Funai	1017, 1044, 1045, 1099, 1287, 1300, 1334, 1379, 1380, 1406, 1407, 1408
Futurtec	1044, 1045, 1375, 1380
Gateway	1030, 1103, 1340, 1346, 1472
GE	1040, 1011, 1041, 1042, 1165, 1288, 1289, 1295, 1303, 1305, 1326, 1328, 1336, 1384, 1442, 1516
Go Video	1393
Goldstar	1041, 1042, 1043, 1046, 1047, 1049, 1020, 1314, 1359, 1442, 1369, 1370, 1371, 1372, 1373, 1448
Gradiente	1448
Granada	1382
Great Wall	1028

Grundig	1364
Grundy	1044, 1045, 1300, 1379, 1380
Haier	1037
Hallmark	1041, 1042, 1442
Hannspree	1482, 1483, 1484
Harley Davidson	1287, 1379
Harman/Kardon	1043, 1362
Harvard	1044, 1045, 1380
Havermy	1331
Helios	1300, 1532, 1533
Helio Kitty	1336, 1384
Hewlett Packard	1429, 1435, 1438, 1480
Himitsu	1355, 1368
Hisenese	1179, 1338, 1530
Hitachi	1013, 1041, 1042, 1049, 1054, 1132, 1166, 1207, 1222, 1232, 1238, 1287, 1327, 1333, 1342, 1370, 1374, 1442
HP	1395, 1435, 1438, 1480
Hypson	1375, 1517, 1559, 1573
Hyundai	1350, 1351, 1352
ICE	1375, 1534, 1562
iLO	1020, 1032, 1453, 1457, 1464
IMA	1045
INET-TV	1033, 1499, 1519, 1520
Infinity	1048, 1306, 1425
Infocus	1381, 1473
Initial	1020
Insial	1034, 1035, 1040, 1398, 1465
Inteq	1325
Intervention	1375
JBL	1048, 1306, 1425
JC Penney	1041, 1042, 1043, 1046, 1047, 1296, 1303, 1305, 1311, 1314, 1442
JCB	1027, 1294
Jensen	1041, 1042, 1110, 1324, 1442
JVC	1008, 1049, 1053, 1062, 1111, 1112, 1113, 1114, 1115, 1159, 1167, 1168, 1180, 1181, 1182, 1208, 1305, 1307, 1329, 1369
Jawasho	1041, 1042, 1294, 1442
Kaypani	1368
KEC	1044, 1380
Kenwood	1041, 1042, 1043, 1240, 1359, 1442
KLH	1038
Kloss	1360, 1361, 1362
Kloss Novabeam	1445, 1317
Konka	1341
KTV	1043, 1044, 1045, 1047, 1365, 1367, 1380, 1381
Levyco	1380
LG	1009, 1024, 1036, 1041, 1046, 1160, 1200, 1370, 1385, 1428, 1442
Lloyd's	1287, 1500, 1548
Local India TV	1382
Loewe	1306, 1535, 1554, 1556, 1558
Logik	1367
Luxman	1041, 1042, 1370, 1442
LXI	1000, 1041, 1042, 1048, 1302, 1306, 1326, 1332, 1343, 1376, 1425
M Electronic	1045
Magnasonic	1039
Magnavox	1020, 1041, 1042, 1043, 1048, 1103, 1117, 1118, 1119, 1129, 1183, 1203, 1264, 1278, 1279, 1281, 1287, 1296, 1306, 1360, 1379, 1425, 1440, 1442
Magnin	1041, 1042, 1043, 1045, 1049, 1299, 1300, 1359, 1379, 1380, 1288, 1555
Majestic	1293, 1504, 1526
Manesth	1375
Marantz	1041, 1042, 1043, 1048, 1306, 1322, 1364, 1425, 1442, 1445, 1470
Matsui	1470
Matsushita	1353, 1531, 1561
Maxent	1340, 1455
Megapower	1385
Megatron	1041, 1042, 1342, 1353
MEI	1381
Memorex	1017, 1041, 1042, 1046, 1123, 1260, 1296, 1298, 1299, 1302, 1337, 1343, 1379
MGA	1041, 1042, 1043, 1046, 1288, 1359, 1442
Midland	1047, 1305, 1313, 1314, 1325, 1326, 1328, 1367
Mintek	1020
Minuts	1033, 1536, 1537
Mitsubishi	1016, 1041, 1042, 1046, 1063, 1046, 1065, 1120, 1205, 1206, 1289, 1331, 1359, 1442
Monivision	1385, 1388
Monitormy Ward	1293
Motorola	1295, 1315, 1331
MTC	1041, 1042, 1043, 1046, 1311, 1359, 1370, 1381, 1442
Multitech	1044, 1045, 1365, 1380
Multivision	1308
NAD	1041, 1042, 1318, 1332, 1364, 1370, 1374
NEC	1041, 1042, 1043, 1046, 1184, 1295, 1332, 1359, 1370, 1371, 1442, 1469
Netsat	1364, 1539
NET-TV	1096, 1103, 1340, 1455
Nikkai	1375
Nikko	1041, 1042, 1043, 1297, 1330
Norcent	1090, 1338, 1440, 1540, 1560
Noshi	1358
NTC	1297, 1330, 1541, 1564
Olivia	1029, 1419, 1420, 1421, 1439, 1443
Onvia	1044, 1045, 1380
Opko	1477, 1563, 1568, 1569
Optimus	1286, 1318, 1335, 1343
Optoma	1474
Optonica	1309, 1315, 1331
Orion	1035, 1291, 1299, 1320, 1337, 1379
Osaki	1375
Panama	1375, 1542, 1545
Panasonic	1003, 1022, 1050, 1051, 1055, 1056, 1059, 1066, 1067, 1121, 1122, 1185, 1215, 1224, 1235, 1236, 1239, 1241, 1243, 1244, 1245, 1246, 1252, 1253, 1261, 1266, 1270, 1274, 1275, 1276, 1285, 1286, 1292, 1295, 1304, 1305, 1306, 1310, 1328, 1335, 1344
Panavision	1280, 1485, 1506, 1507, 1521, 1522
Penney	1031, 1043, 1288, 1290, 1326, 1328, 1332, 1353, 1358, 1359, 1367, 1376
Philco	1041, 1042, 1043, 1046, 1048, 1049, 1123, 1295, 1296, 1306, 1359, 1425, 1442
Philips	1041, 1020, 1021, 1041, 1048, 1049, 1058, 1068, 1069, 1099, 1124, 1125, 1126, 1127, 1128, 1129, 1186, 1209, 1278, 1281, 1295, 1296, 1306, 1356, 1357, 1364, 1425, 1442

Philips Magnavox	1364, 1425, 1442
Pilot	1001, 1048, 1117, 1118, 1126, 1127, 1128, 1129, 1130
Pioneer	1041, 1043, 1047, 1359, 1367, 1442
Plasmajync	1018, 1041, 1042, 1070, 1217, 1218, 1219, 1318, 1321, 1347, 1426, 1427, 1434, 1442, 1481
Polaroid	1322, 1470
Portland	1038, 1187, 1188, 1225, 1258, 1273, 1390, 1398, 1422, 1437, 1444
Price Club	1041, 1042, 1046, 1047, 1297, 1330, 1359, 1367, 1442
Prima	1311, 1486, 1490, 1491
Princeton	1237, 1323, 1324, 1446, 1449, 1476
Prism	1385
Prism	1305, 1328, 1492, 1493, 1524, 1525
Proscan	1000, 1326
Protech	1375
Proton	1041, 1042, 1049, 1353, 1363, 1368, 1442
Prottron	1397, 1431, 1462
Proview	1039, 1422, 1463
Pulsar	1041, 1313, 1325, 1359, 1442
Pye	1356, 1546, 1557, 1574
Quasar	1274, 1285, 1286, 1295, 1305, 1328, 1335
Radio Shack	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1287, 1302, 1309, 1041, 1323, 1326, 1343, 1359, 1367, 1370, 1380, 1442
RCA	1000, 1002, 1041, 1042, 1046, 1133, 1134, 1161, 1162, 1169, 1170, 1269, 1288, 1289, 1295, 1321, 1326, 1347, 1358, 1359, 1442
Realistic	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1302, 1309, 1314, 1343, 1359, 1367, 1370, 1381, 1442
Rex	1375, 1497, 1501
Rhapsody	1365, 1381, 1494, 1508
Roadstar	1440
Runco	1043, 1313, 1325
Saisho	1375
Sampo	1041, 1042, 1043, 1047, 1060, 1103, 1135, 1314, 1340, 1367, 1368, 1442, 1452
Samsung	1047, 1049, 1041, 1042, 1043, 1045, 1047, 1049, 1081, 1082, 1083, 1084, 1085, 1100, 1136, 1137, 1138, 1139, 1171, 1176, 1189, 1214, 1223, 1311, 1314, 1345, 1359, 1364, 1366, 1370, 1375, 1442
Samsung	1367
Sansel	1384, 1547, 1550, 1551, 1572
Sansui	1035, 1157, 1163, 1257, 1267, 1287, 1291, 1320, 1337
Sanyo	1025, 1041, 1109, 1288, 1301, 1302, 1343, 1382, 1442
Sceptre	1367
Schneider	1375, 1495, 1496
Schmitt	1359
Scotch	1041, 1042, 1502, 1503, 1543, 1552, 1571
Scott	1041, 1042, 1044, 1045, 1049, 1299, 1300, 1359, 1379, 1380, 1403, 1442, 1482
Sears	1000, 1041, 1042, 1048, 1078, 1287, 1290, 1300, 1301, 1302, 1303, 1319, 1326, 1332, 1334, 1347, 1370, 1376, 1379, 1425, 1442
SEG	1442
Semivox	1380
Semp	1376, 1505, 1509, 1510
Sharp	1007, 1041, 1042, 1047, 1049, 1107, 1072, 1086, 1097, 1131, 1190, 1191, 1192, 1221, 1242, 1282, 1309, 1315, 1331, 1367, 1377, 1442
Sheng Chia	1041, 1359, 1442
Shogun	1293
Signature	1293
Simpson	1296, 1511, 1513, 1518
SKY	1364
CAVS	1382, 1487, 1514
Centrex	2435
Centrum	2439
Changhong	2447
ChongKong	2018
Cinetic	2439
cineULTRA	2437
CineVision	2413, 2414, 2453
Citizen	2436
Clarion	2034, 2495, 2496
Classic	2035, 2174
Clatronic	2435, 2445, 2562, 2564
Clayton	2439
Coby	2117, 2138, 2139, 2217, 2218, 2448
Comia	2435
Contel	2445
Creative	2432
Crown	2439
Curtis Mathes	2426, 2548, 2551, 2556
CyberHome	2006, 2417, 2427
Metz	2449, 2480
MICO	2440
Micromedia	2432
Micromega	2432
Microsoft	2062
Minax	2439, 2554, 2557, 2558, 2559
Mintek	2003, 2013, 2056, 2069, 2220, 2221, 2222, 2223, 2224, 2225, 2452
Mitsubishi	2011, 2146, 2148, 2274, 2275, 2439
Momitsu	2425
Mx Onda	2434
NAD	2035, 2044, 2441
Nakamichi	2045
NEC	2000, 2441
Nesa	2152
Next Base	2410
NexTech	2428, 2460
Norcent	2027, 2138, 2276, 2277, 2513, 2514
Norcent	2385, 2386, 2387, 2388, 2389
Olidata	2435
Orion	2