



Section of Contents

Quick Setup Guide
1. How to activate the batteries
2. Setting up your Remote to control other devices (TV/DVD/etc)
2A. Search for Device Codes
2B. Manually Program the Device Codes

Advanced Features Setup
A. Volume or Channel Control Operations
B. Power Control Options
C. Backlight Cancellation Feature
D. Restoring Factory Defaults

Specifications & Notice

Questions & Answer (Q&A)

Care & Maintenance

Setup Codes (Back Page)



Quick Setup Guide

1. How to activate the batteries (two AA Alkaline batteries have been pre-installed for your convenience)

STEP 1. Pull the Tab on the back of the Remote Control straight out with one smooth motion.

STEP 2. Press the **AT&T** key. The **AT&T** key will light up if the batteries are working properly. If the **AT&T** key does not light up, please refer to the Questions & Answer (Q&A) of this Guide.



Pull Tab on Battery Compartment

2. Setting up your Remote to control other devices (TV/DVD/etc)

To control other devices, your Remote Control needs to be programmed. The Remote contains the IR codes to control them.

*Start with Section 2A (Search for Device Codes) to find the code for your device.
*If Section 2A is unsuccessful, please refer to Section 2B (Manually Program the Device Codes).

2A. Search for Device Codes

The Search method will scan through all the IR codes to find one that works with your TV or other device.

STEP 1. Power on the device to be programmed.

STEP 2. Point the remote control at the selected device.

STEP 3. Press and hold the mode key that matches the device you want to program (TV, DVD, or AUX) along with the **ENTER** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in search mode.



STEP 4. Search by pressing the **SCAN** key repeatedly until the device turns OFF (the selected mode key will flash once for each press of the **SCAN** key). Pause briefly between each key press to allow your device enough time to respond.

STEP 5. Press the **POWER** button on the Remote to turn the device back on.

NOTE: If the device does not turn off and you have searched all available codes, the selected mode key will flash 8 times. If this happens, please start over at Step 2 or proceed to 2B (manually Program the Device Codes).

NOTE: If the device does not turn on, you may have pressed the **SCAN** key too many times. Press the **REW** key to scan backwards and test the **POWER** button again.

STEP 6. Check **VOLUME** and **MUTE**. Do not test using **REW**, **SCAN**, **FWD**, **EXIT**. If there is any problem with any of the keys, press the **SCAN** button and search until you find a code which will operate all the function properly.

STEP 7. Press the **ENTER** key to save the programming. The appropriate mode key will give a long flash indicating successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

If you have an integrated or combination unit such as TV-DVD, TV-DVD-VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV-DVD, search for the device code of TV and program into TV mode key, then search for the Device Code of DVD, and program into the DVD mode key.

2B. Manually Program the Device Codes

Use the following steps to setup the TV, DVD or AUX mode keys:

STEP 1. Each device (TV, DVD, VCR, etc.) has its own "code". A list of these 4-digit device setup codes is provided in the back of this Booklet. Make a note of the codes for your devices below for quick reference:

TV _____
DVD _____
VCR _____
OTHER _____

The mode keys can only be programmed with codes starting with that device. TV codes must start with "1"; DVD codes "2"; AUX codes "3", "4", "5", or "6".

STEP 2. Power on the device to be programmed.

STEP 3. Press and hold the mode key that matches the device you want to program (TV, DVD, or AUX) along with the **OK** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash to indicate you are in the programming mode.



STEP 4. Enter the 4-digit Device Code from Step 1 for the desired device using the keypad on the remote.

STEP 5. The appropriate mode key will give a long flash indicating it received the code.

STEP 6. Point the remote control at the selected device and press the **POWER** key to turn off the device and confirm programming. If the device does not turn off, or not all functions work, then start again at Step 1 with the next code in the List. It is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device. Press the **POWER** key again to turn the device back on and check other functions.

NOTE: When an invalid code is entered, the selected mode key will flash eight times and the Remote Control will return to its normal operation.

NOTE: If you press any key other than the number keys, the selected mode key will flash eight times and exit programming mode. The same is true if it is inactive for more than 20 seconds. This indicates the remote has left the programming mode and returned to normal operation without saving any changes. You will have to start over again.

Function Keys



Advanced Features Setup

A. Volume or Channel Control Options

By factory default the Volume and Channel commands are sent to the AT&T U-verseSM Receiver. Once the TV has been programmed, the **POWER** key will control both the U-verseSM Receiver and the TV; the Volume controls (**VOL+** or **-**, **MUTE**) will go to the TV, and the Channel controls (**CH +** or **-**, **LAST**, number keys) will be sent to the U-verseSM Receiver. Once you have programmed a device to a mode key, you can send the volume commands to that device rather than the TV or U-verseSM Receiver (e.g. a home theatre receiver). Follow the instructions in Section A1 to have the Volume commands always go to one device. If you want the Volume (or Channel) commands to go to a programmed device when it has been selected using the mode key, follow the instructions in A2.

A1. Always Send Volume or Channel Commands to One Device

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the mode key (TV, DVD, or AUX) for the device that you want to always control the volume or channel (e.g. **AUX** for your Home Theater).

STEP 4. The selected mode key (e.g. **AUX**) will give a long flash to confirm successful programming.

A2. Send Volume or Channel Commands only to the Device Mode Selected (e.g. in DVD mode, the DVD player controls the audio, but in TV mode the TV controls the audio)

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

NOTE: The mode key must first have been programmed for your device.

B. Power Control Options

By factory default, the **POWER** key only operates the AT&T U-verseSM Receiver. Once you have programmed the TV mode key, both the TV and the AT&T U-verseSM Receiver will be powered ON and OFF at the same time. In normal operation, you can turn programmed devices ON or OFF individually by pressing the appropriate mode key, and then the **POWER** key.

B1. To Power Multiple Devices On and Off Simultaneously

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

STEP 3. Press the **AT&T** key. The **AT&T** key will flash twice indicating correct entry.

STEP 4. Press the appropriate mode keys (TV, DVD, or AUX) that you wish to also control. The appropriate mode key will flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

B2. To Power Devices On and Off Independently

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C. Backlight Cancellation Feature

Your Remote Control has the ability to turn the keypad backlighting ON or OFF. If you wish to use this feature to extend battery life, follow these instructions.

C1. Turning the Keypad Backlight OFF

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C2. Turning the Keypad Backlight ON

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

D. Restoring Factory Defaults

Return all programmed codes to Factory Default

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 0 0** using the numeric keypad. The **AT&T** key will give a long flash to confirm successful programming. The Remote Control then returns to its normal state.

Specifications & Notice

Model: AT&T U-verseSM TV Standard Remote Control
IR Range: up to 30'

*The range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on conditions, and can be less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: battery strength, infrared interference, and obstructions.

The AT&T U-verseSM TV Standard Remote Control is intended for use only with AT&T's U-verseSM TV receivers. The Remote Control may

not be compatible with all devices or capable of accepting every programming code or operating every function for all devices. See this Guide for further information.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Questions & Answer (Q&A)

Question: I pulled the tab from the battery compartment and pressed the AT&T key, but it did not light up.

Answer: Remove the battery door (push the tab up - towards the top of the remote). Check to be sure the batteries are seated and properly installed according to the (+ or -) markings inside the battery compartment.

Question: The remote does not work or the backlighting is dim

Answer: Check to be sure the batteries are

installed with the correct polarity (see above). Use only Alkaline batteries. Batteries may be weak and need to be replaced.

Question: I tried to program using "Search for Device Codes", but it failed.

Answer: You must press the **ENTER** key to "save" the programmed code. Search may not work for all devices. Please refer to Section 2B - Manually Program the Device Codes.

Question: What should I do when I replace

a device after I programmed the mode key?

Answer: Simply override the code by reprogramming the mode key for the new device (see Quick Start Guide, Section 2A, or Section 2B).

Question: I have programmed the codes for a device, but some function keys do not work

Answer: Try using Search for Device Codes (Section 2A) and make sure that the functions work before saving. If you entered the 4-digit device code using Section 2B (Manually

Program the Device Codes), it is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device.

Question: I have programmed the TV mode key. After pressing the TV key, the Channel keys still control the AT&T U-verseSM receiver and not the TV.

Answer: By default, the **CHANNEL** keys (**CH +**, **CH -**, **LAST**, number keys) on the remote control operate the U-verseSM receiver.

Question: I programmed my TV and Home Theater system to come on with my U-verseSM Receiver, but the Home Theater system turns off when I turn the others on.

Answer: If any of the devices get out of sync so that some turn ON and others turn OFF, you will need to turn all Devices off. (For the device that is out of sync, use the actual device's power button). When all the devices are OFF, use the **POWER** key on the Remote Control to turn all devices back ON. It is important to point the Remote Control directly toward the devices for this to work properly.

Care & Maintenance

1. Keep the remote control dry. If it gets wet, wipe it dry immediately.

2. Use and store the remote control only in normal temperature environments.

3. Handle the remote control gently and carefully. Don't drop it.

4. Wipe the remote control with a clean cloth occasionally to keep it looking new.

5. Except for the battery door, do not attempt to open, modify or tamper with the internal components of the remote control. This can cause malfunction and void the warranty.

6. Use only Alkaline AA batteries. Do not mix old and new batteries.

7. Replace batteries every 9 months.



AT&T U-verseSM SETUP CODE List

TV

Abex	1314
Acer	1396
Action	1391, 1553
Admiral	1293, 1315, 1331, 1337
Advent	1040, 1323, 1324
Adventura	1317, 1361
Aiko	1297, 1330
Alwa	1155, 1164, 1488, 1512
Akai	1043, 1201, 1202, 1247, 1248, 1257, 1265, 1267, 1294, 1345, 1404, 1405
Akura	1375, 1549
Alarion	1365, 1379, 1382
Albatron	1385, 1388
Allegion	1300
A-Mark	1353
Ambassador	1378
America Action	1044, 1380
Ampro	1386
Amtron	1045
Anam	1044, 1380
Anam National	1045, 1295
AOC	1041, 1042, 1043, 1046, 1353, 1359, 1368, 1381, 1440, 1442
AOC Envision	1410
Apex	1012, 1106, 1156, 1433, 1489
Apex Digital	1382, 1268, 1332
Archer	1353
Astar	1400, 1460
Audinac	1380
Audiovox	1044, 1045, 1249, 1330, 1336, 1353, 1380, 1384, 1402, 1436
Aventura	1384
Axion	1161, 1402, 1506
Bang & Olufsen	1401, 1423, 1424
Baysonic	1380
Belcor	1041, 1359, 1442
Bell & Howell	1293, 1302, 1343
Bentl	1116
Bowlright	1387
BPL	1382
Bradford	1044, 1045, 1380
Brilliant	1078, 1418
Brockwood	1041, 1359, 1442
Broksonic	1041, 1042, 1267, 1291, 1337, 1353, 1432, 1494
Bydsign	1396, 1450
Candle	1041, 1042, 1043, 1296, 1317, 1361, 1370, 1442
Carnivale	1384
CCCE	1364, 1365, 1366, 1447
Celebrity	1027, 1294
Celera	1038
Centurion	1041
Changhong	1038, 1406, 1407, 1408
Cineral	1039, 1041, 1042, 1043, 1045, 1047, 1296, 1297, 1311, 1330, 1361, 1367, 1370, 1442, 1470
Citizen	1041, 1042, 1043, 1046, 1302, 1361, 1367, 1370, 1442, 1470
Clairtone	1044, 1380
Clarion	1158, 1250, 1409, 1498
Coby	1041, 1042, 1442
Colortyme	1041, 1042, 1442
Commercial Solutions	1326
Concerto	1041, 1042, 1370, 1442
Contec	1044, 1377, 1380, 1381
Conley/Cony	1045, 1049
Craig	1041, 1042, 1380
Crosley	1048, 1425
Crown	1044, 1045, 1306, 1367, 1380
CTX	1108, 1567
Curtis Mathes	1000, 1041, 1042, 1043, 1046, 1048, 1302, 1311, 1326, 1331, 1336, 1342, 1343, 1345, 1367, 1384, 1442, 1470
Dayton	1041, 1042, 1047, 1359, 1442
De Graaf	1382
Dell	1177, 1178, 1416, 1417, 1528, 1529
Denon	1041, 1042, 1043, 1046, 1380, 1384, 1385, 1386, 1387, 1388, 1389
Dwin	1333
Dynex	1040
Electrograph	1027, 1294, 1381
Electrohome	1041, 1042, 1294, 1295, 1442
Elite	1481
Emerson	1014, 1017, 1028, 1039, 1041, 1042, 1044, 1045, 1047, 1049, 1251, 1264, 1271, 1291, 1298, 1299, 1300, 1302, 1320, 1334, 1337, 1343, 1359, 1365, 1367, 1378, 1379, 1380, 1381, 1442, 1454, 1468
Emprex	1399, 1466
Envision	1041, 1042, 1043, 1442
Epson	1199, 1339
ESA	1382
Finlandia	1384
Fisher	1099, 1301, 1302, 1343, 1382
Frontech	1107, 1213, 1228, 1229, 1230, 1231, 1232, 1233, 1314, 1345, 1442
Fujitsu	1213, 1228, 1229, 1230, 1231, 1232, 1233, 1314, 1345, 1442
Funai	1017, 1044, 1045, 1099, 1287, 1300, 1334, 1379, 1380, 1406, 1407, 1408
Futuretek	1044, 1045, 1375, 1380
Gateway	1030, 1103, 1340, 1346, 1472
GE	1288, 1289, 1295, 1303, 1305, 1326, 1328, 1336, 1384, 1442, 1516
Go Video	1393
Goldstar	1041, 1042, 1043, 1046, 1047, 1049, 1293, 1314, 1359, 1442
Gradiente	1379, 1370, 1371, 1372, 1373, 1448
Granada	1382
Great Wall	1028

Grundig	1364
Grundig	1044, 1045, 1300, 1379, 1380
Haier	1031
Hallmark	1041, 1042, 1442
Hannspree	1482, 1483, 1484
Harvey Davidson	1287, 1379
Harman/Kardon	1048, 1362
Harvard	1044, 1045, 1380
Hawemey	1330, 1379, 1570
Hellios	1390, 1532, 1533
Helly Kitty	1336, 1384
Hewlett Packard	1429, 1435, 1438, 1480
Himitsu	1355, 1380
Hisense	1179, 1338, 1530
Hitachi	1013, 1041, 1042, 1049, 1054, 1132, 1166, 1207, 1222, 1232, 1238, 1287, 1327, 1333, 1342, 1370, 1374, 1442
HP	1395, 1435, 1438, 1480
Hypson	1375, 1517, 1559, 1573
Hyundai	1350, 1351, 1352
ICE	1375, 1534, 1562
ILO	1020, 1032, 1453, 1457, 1464
IMA	1045
INET-TV	1033, 1499, 1519, 1520
Infinity	1048, 1306, 1425
Infocus	1041, 1473
Intex	1020
Insignia	1034, 1035, 1040, 1398, 1465
Inteq	1325
Intervision	1375
JBL	1048, 1306, 1425
JC Penney	1000, 1041, 1042, 1046, 1047, 1296, 1303, 1305, 1311, 1314, 1442
JCB	1027, 1294
Jensen	1041, 1042, 1110, 1324, 1442
JVC	1038, 1049, 1053, 1062, 1111, 1112, 1113, 1114, 1115, 1159, 1167, 1168, 1180, 1181, 1182, 1208, 1305, 1307, 1329, 1369
Kawasho	1041, 1042, 1294, 1442
Kaypani	1368
Kenwood	1041, 1042, 1043, 1240, 1359, 1442
KLH	1038
Kloss	1360, 1361, 1362
Kloss Novabem	1045, 1317
Konca	1384
KTV	1043, 1044, 1045, 1047, 1365, 1367, 1380, 1381
Lyco	1375
LG	1009, 1024, 1036, 1041, 1046, 1160, 1200, 1370, 1385, 1428, 1442
Lloyd's	1287, 1500, 1548
Logik	1041, 1042, 1382, 1383
Lowee	1036, 1535, 1554, 1556, 1558
Logix	1293
Luxman	1041, 1042, 1370, 1442
LXI	1041, 1042, 1043, 1048, 1302, 1306, 1326, 1332, 1343, 1376, 1425
M Electronic	1374
Magnasonic	1039
Magnavox	1041, 1042, 1043, 1048, 1103, 1117, 1118, 1119, 1129, 1183, 1203, 1264, 1278, 1279, 1281, 1287, 1296, 1306, 1360, 1379, 1425, 1440, 1442
Magnin	1288, 1555
Majestic	1373, 1504, 1526
Manhest	1041, 1042, 1043, 1046, 1306, 1361, 1367, 1370, 1442, 1470
Marantz	1041, 1042, 1043, 1046, 1302, 1322, 1364, 1425, 1442, 1445, 1470
Matsui	1382
Matsushita	1315, 1531, 1561
Megatron	1041, 1042, 1342, 1353
MEI	1381
Memorex	1017, 1041, 1042, 1046, 1123, 1048, 1286, 1290, 1293, 1302, 1307, 1343, 1379
MGA	1041, 1042, 1043, 1046, 1288, 1359, 1442
Midland	1047, 1305, 1313, 1314, 1325, 1326, 1328, 1367
Mintek	1336, 1342
Minut	1303, 1536, 1537
Mitsubishi	1016, 1041, 1042, 1046, 1063, 1064, 1065, 1120, 1205, 1206, 1289, 1331, 1359, 1442
Monivision	1041, 1042, 1043, 1046, 1302, 1306, 1326, 1332, 1343, 1376, 1442
Montgomery Ward	1293
Motorola	1041, 1042, 1043, 1046, 1311, 1359, 1370, 1381, 1442
MTC	1041, 1042, 1043, 1046, 1311, 1359, 1370, 1381, 1442
Multitec	1044, 1045, 1365, 1380
Multivision	1041, 1042, 1318, 1332, 1364, 1370, 1376
NAD	1041, 1042, 1043, 1046, 1184, 1295, 1322, 1359, 1370, 1371, 1442, 1469
Natsat	1096, 1103, 1340, 1455
NET-TV	1096, 1103, 1340, 1455
Nikkal	1375
Nikko	1041, 1042, 1043, 1297, 1330
Norcent	1090, 1338, 1440, 1540, 1560
Noshi	1358
NTC	1297, 1310, 1541, 1564
Olevia	1029, 1419, 1420, 1421, 1439, 1443
Onwa	1044, 1045, 1380
Optimo	1477, 1563, 1568, 1569
Optus	1286, 1318, 1335, 1343
Optoma	1378, 1379, 1380, 1381, 1442, 1454, 1468
Optonica	1309, 1315, 1331
Orion	1035, 1291, 1299, 1320, 1337, 1379
Osaki	1375
Panama	1375, 1542, 1545
Panasonic	1000, 1022, 1050, 1051, 1055, 1056, 1059, 1066, 1067, 1121, 1122, 1185, 1215, 1224, 1235, 1236, 1239, 1241, 1243, 1244, 1245, 1246, 1252, 1253, 1261, 1262, 1274, 1275, 1276, 1286, 1292, 1295, 1304, 1305, 1306, 1310, 1328, 1335, 1344
Panavision	1280, 1485, 1506, 1507, 1521, 1522
Penney	1041, 1042, 1288, 1290, 1326, 1328, 1332, 1353, 1358, 1359, 1367, 1376
Philco	1041, 1042, 1043, 1046, 1048, 1049, 1123, 1295, 1296, 1306, 1359, 1425, 1442
Philips	1039, 1425, 1442
Philips	1041, 1042, 1043, 1046, 1048, 1049, 1058, 1068, 1069, 1099, 1124, 1125, 1126, 1127, 1128, 1129, 1186, 1209, 1278, 1281, 1295, 1296, 1306, 1356, 1357, 1375

Philips Magnavox	1364, 1425, 1442
Philips	1001, 1048, 1117, 1118, 1126, 1127, 1128, 1129, 1130
Pilot	1041, 1043, 1047, 1359, 1367, 1442
Pioneer	1018, 1041, 1042, 1070, 1217, 1218, 1219, 1318, 1321, 1347, 1426, 1427, 1434, 1442, 1481
Plasmasynd	1321, 1470
Polaroid	1036, 1187, 1188, 1225, 1258, 1273, 1390, 1398, 1422, 1437, 1444
Portland	1041, 1042, 1046, 1047, 1297, 1330, 1359, 1367, 1442
Price Club	1237, 1323, 1324, 1446, 1449, 1476
Princeton	1385
Prism	1305, 1328, 1492, 1493, 1524, 1525
Proscan	1000, 1326
Protech	1375
Proton	1041, 1042, 1049, 1353, 1363, 1368, 1442
Protron	1397, 1431, 1462
Proview	1033, 1422, 1463
Pulsar	1041, 1042, 1309, 1359, 1442
Pye	1356, 1546, 1557, 1574
Quasar	1274, 1285, 1286, 1295, 1305, 1328, 1335
Radio Shack	1000, 1302, 1343
Radio Shack/Realistic	1000, 1041, 1042, 1045, 1047, 1049, 1302, 1309, 1314, 1442
RadioShack	1041, 1043, 1044, 1287, 1326, 1359, 1367, 1370, 1380
RCA	1000, 1002, 1041, 1042, 1046, 1133, 1134, 1161, 1162, 1169, 1170, 1269, 1288, 1289, 1295, 1321, 1326, 1347, 1358, 1359, 1442
Realistic	1000, 1041, 1043, 1044, 1032, 1343, 1359, 1367, 1370, 1380
Rex	1375, 1497, 1501
Rhapsody	1365, 1381, 1494, 1508
Roadstar	1375
Rancho	1041, 1043, 1313, 1325
Saisho	1037
Sampo	1041, 1042, 1043, 1047, 1060, 1103, 1135, 1314, 1340, 1367, 1368, 1442
Samsung	1006, 1026, 1041, 1042, 1043, 1046, 1047, 1049, 1081, 1082, 1083, 1084, 1085, 1100, 1116, 1136, 1137, 1138, 1139, 1171, 1176, 1189, 1214, 1223, 1311, 1314, 1345, 1359, 1364, 1366, 1370, 1375, 1442
Samsux	1367
Sansel	1384, 1547, 1550, 1551, 1572
Sansui	1035, 1157, 1163, 1257, 1267, 1287, 1291, 1320, 1337
Sanyo	1021, 1041, 1109, 1288, 1301, 1302, 1343, 1382, 1442
Sceptre	1392, 1467
Schneider	1357, 1495, 1496
Scrimtus	1359
Scotch	1041, 1042, 1502, 1503, 1543, 1552, 1571
Scott	1041, 1042, 1044, 1045, 1049, 1299, 1300, 1359, 1379, 1380, 1403, 1442, 1458
Sears	1000, 1041, 1042, 1048, 1078, 1287, 1300, 1301, 1302
Sharp	1037, 1319, 1326, 1332, 1334, 1343, 1370, 1376, 1379, 1425, 1470
SEG	1380
Semivox	1315, 1505, 1509, 1510
Shinco	1376, 1382
Sharp	1007, 1041, 1042, 1047, 1049, 1071, 1072, 1086, 1097, 1131, 1190, 1191, 1192, 1211, 1242, 1282, 1309, 1315, 1331, 1367, 1377, 1442
Sheng Chia	1041, 1359, 1442
Shogun	1293
Signature	1296, 1511, 1513, 1518
Sigmatone	1364
Sonitron	1382, 1487, 1514
Sonolux	1382
Sony	1004, 1023, 1027, 1073, 1074, 1075, 1079, 1080, 1140, 1141, 1142, 1143, 1144, 1145, 1193, 1198, 1220, 1227, 1233, 1234, 1259, 1287, 1294, 1348, 1349
Soundesign	1041, 1042, 1044, 1045, 1296, 1300, 1379, 1380, 1442
Sova	1397
Soyo	1411
Spectron	1353
Squareview	1319, 1334
SSS	1041, 1044, 1045, 1359, 1380, 1442
Starlite	1041, 1042, 1043, 1046, 1184, 1295, 1322, 1359, 1370, 1371, 1442, 1469
Studio Experience	1388
SuperScan	1088, 1226, 1264, 1331, 1413
Supre-Macy	1027, 1294, 1538, 1566
Supreme	1027, 1294, 1538, 1566
SVA	1240, 1390
Sylvania	1017, 1041, 1042, 1043, 1048, 1090, 1128, 1146, 1172, 1255, 1262, 1264, 1271, 1279, 1284, 1296, 1306, 1394, 1425, 1442, 1454
Symphonic	1015, 1044, 1045, 1287, 1298, 1319, 1334, 1380
Syntax	1029, 1419, 1420, 1421
Symat-Brilliant	1078
Tandberg	1315, 1331
Tatung	1030, 1295, 1346, 1353, 1456, 1471
Teac	1375
Technics	1305, 1328, 1335
Technol Ace	1379
Technowood	1041, 1042, 1035, 1328, 1353, 1370, 1442
Teco	1394
Teknika	1041, 1042, 1044, 1045, 1046, 1047, 1048, 1049, 1293, 1296, 1297, 1300, 1311, 1330, 1359, 1367, 1370, 1379, 1380, 1425, 1442
Telecapion	1312
Telefunken	1345, 1370
Techno	10