



Quick Setup Guide

1. How to activate the batteries (two AA Alkaline batteries have been pre-installed)

STEP 1. Pull the Tab on the back of the Remote Control straight out with one smooth motion.

STEP 2. Press the AT&T key. The AT&T key will light up if the batteries are working properly. If the AT&T key does not light up, please refer to the Questions & Answer (Q&A) of this Guide.



Pull Tab on Battery Compartment

2. Setting up your Remote to control other devices (TV/DVD/etc)

To control other devices, your Remote Control needs to be programmed. The Remote contains the IR codes to control them.

*Start with Section 2A (Search for Device Codes) to find the code for your device.
*If Section 2A is unsuccessful, please refer to Section 2B (Manually Program the Device Codes).

2A. Search for Device Codes

The Search method will scan through all of the IR codes to find one that works with your TV or other device.

STEP 1. Power on the device to be programmed.

STEP 2. Point the remote control at the selected device.

STEP 3. Press and hold the mode key that matches the device you want (TV, DVD, or AUX) along with the ENTER key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in search mode.



STEP 4. Search by pressing the SCAN → VFF key repeatedly until the device turns OFF (the selected mode key will flash once for each press of the SCAN → VFF key). Pause briefly between each press to allow your device enough time to respond.

STEP 5. Press the POWER button on the Remote to turn the device back on.

NOTE: If the device does not turn off and you have searched all available codes, the selected mode key will flash 8 times. If this happens, please start over at Step 2 or proceed to 2B (Manually Program the Device Codes).

NOTE: If the device does not turn on, you may have pressed the SCAN → VFF key too many times. Press the REW → SCAN key to scan backwards and test the POWER button again.

STEP 6. Check VOLUME and MUTE. Do not test using REW → SCAN, SCAN → VFF, FWD, EXIT. If there is any problem with any of the keys, press the SCAN → VFF button and search until you find a code which will operate all the function properly.

STEP 7. Press the ENTER key to save the programming. The appropriate mode key will give a long flash indicating successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

If you have an integrated or combination unit, such as TV-DVD, TV-DVD-VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV-DVD, search for the device code of TV and program into TV mode key, then search for the Device Code of DVD and program into the DVD mode key.

2B. Manually Program the Device Codes

Use the following steps to setup the TV, DVD or AUX mode keys:

STEP 1. Each device (TV, DVD, VCR, etc.) has its own "code". A list of these 4-digit device setup codes is provided in the back of this Booklet. Make a note of the codes for your devices for quick reference:

TV _____
DVD _____
VCR _____
OTHER _____

The mode keys can only be programmed with codes starting with the number assigned to that device. TV codes must start with "1"; DVD codes "2"; AUX codes "3", "4", "5", or "6".

STEP 2. Power on the device to be programmed.

STEP 3. Press and hold the mode key that matches the device you want to program (TV, DVD, or AUX) along with the OK key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in the programming mode.



STEP 4. Enter the 4-digit Device Code from Step 1 for the desired device using the keypad on the remote.

STEP 5. The appropriate mode key will give a long flash indicating it received the code.

STEP 6. Point the remote control at the selected device and press the POWER key to turn off the device and confirm programming. If the device does not turn off, or not all functions work, then start again at Step 1 with the next code in the List. It is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device. Press the POWER key again to turn the device back on and check other functions.

NOTE: When an invalid code is entered, the selected mode key will flash eight times and the Remote Control will return to its normal operation.

NOTE: If you press any key other than the number keys, the selected mode key will flash eight times and exit programming mode. The same is true if it is inactive for more than 30 seconds. This indicates the remote has left the programming mode and returned to normal operation without saving any changes. You will have to start over again.

Function Keys



Advanced Features Setup

A. Volume or Channel Control Options

By factory default the Volume and Channel commands are sent to the AT&T U-verse Receiver. Once the TV has been programmed, the POWER key will control both the U-verse Receiver and the TV; the Volume controls (VOL+ or -, MUTE) will go to the TV, and the Channel controls (CH + or -, LAST, number keys) will be sent to the U-verse Receiver. Once you have programmed a device to a mode key, you can send the volume commands to that device rather than the TV or U-verse Receiver (e.g. a home theater receiver). Follow the instructions in Section A1 to have the Volume commands always go to one device. If you want the Volume (or Channel) commands to go to a programmed device when it has been selected using the mode key, follow the instructions in A2.

A1. Always Send Volume or Channel Commands to One Device

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 5 5 for volume, or 9 6 6 for channel using the numeric keypad. The AT&T key will flash twice to confirm the correct entry.

STEP 3. Press the mode key (TV, DVD, or AUX) for the device that you want to always control the volume or channel (e.g. AUX for your Home Theater).

STEP 4. The selected mode key (e.g. AUX) will give a long flash to confirm successful programming.

A2. Send Volume or Channel Commands Only to the Device Mode Selected (e.g. in DVD mode, the DVD player controls the audio, but in TV mode the TV controls the audio)

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 5 5 for volume, or 9 6 6 for channel using the numeric keypad. The AT&T key will flash twice to confirm the correct entry.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

NOTE: The mode key must first have been programmed for your device.

NOTE: If you have programmed the TV and Home Theater system to come on with your U-verse Receiver, but the Home Theater system turns off when I turn the others on.

NOTE: If you have programmed the TV mode key, the Channel keys still control the AT&T U-verse receiver and not the TV.

STEP 3. Press the ENTER key. The AT&T key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

B. Power Control Options

By factory default, the POWER key only operates the AT&T U-verse Receiver. Once you have programmed the TV mode key, both the TV and the AT&T U-verse Receiver will be powered ON and OFF at the same time. In normal operation, you can turn programmed devices ON or OFF individually by pressing the appropriate mode key, and then the POWER key.

B1. To Power Multiple Devices On and Off Simultaneously

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 7 7 using the numeric keypad. The AT&T key flashes twice.

STEP 3. Press the AT&T key. The AT&T key will flash twice indicating correct entry.

STEP 4. Press the appropriate mode keys (TV, DVD, or AUX) that you wish to also control. The appropriate mode key will flash twice.

NOTE: The mode key must first have been programmed for your device.

STEP 5. Press the ENTER key to complete the programming. The last mode key programmed will give a long flash indicating successful programming.

B2. To Power Devices On and Off Independently

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 7 7 using the numeric keypad. The AT&T key flashes twice.

STEP 3. Press the ENTER key. The AT&T key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C. Backlight Cancellation Feature

Your Remote Control has the ability to turn the keypad backlighting ON or OFF. If you wish to use this feature to extend battery life, follow these instructions.

C1. Turning the Keypad Backlight OFF

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 9 1 using the numeric keypad.

STEP 3. The AT&T key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 30 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C2. Turning the Keypad Backlight ON

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 9 1 using the numeric keypad.

STEP 3. The AT&T key will give a long flash to confirm successful programming.

D. Restoring Factory Defaults

Return all programmed codes to Factory Default.

STEP 1. Press and hold the AT&T key along with the OK key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter 9 0 0 using the numeric keypad. The AT&T key will give a long flash to confirm successful programming. The Remote Control then returns to its normal state.

Section of Contents

Quick Setup Guide
1. How to activate the batteries
2. Setting up your Remote to control other devices (TV/DVD/etc)
2A. Search for Device Codes
2B. Manually Program the Device Codes

Advanced Features Setup
A. Volume or Channel Control Operations
B. Power Control Options
C. Backlight Cancellation Feature
D. Restoring Factory Defaults

Specifications & Notice

Questions & Answer (Q&A)

Care & Maintenance

Setup Codes (Back Page)



Specifications & Notice

Model: AT&T U-verse TV Standard Remote Control
IR Range: up to 30'

*The range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on conditions, and can be less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: battery strength, infrared interference, and obstructions.

The AT&T U-verse TV Standard Remote Control is intended for use only with AT&T's U-verse TV receivers. The Remote Control may

not be compatible with all devices or capable of accepting every programming code or operating every function for all devices. See this Guide for further information.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: The remote does not work or the backlighting is dim.

Answer: Check to be sure the batteries are

Questions & Answer (Q&A)

Question: I pulled the tab from the battery compartment and pressed the AT&T key, but it did not light up.

Answer: Remove the battery door (push the tab up - towards the top of the remote). Check to be sure the batteries are seated and properly installed according to the (+ or -) markings inside the battery compartment.

Question: The remote does not work or the backlighting is dim.

Answer: Check to be sure the batteries are

installed with the correct polarity (see above). Use only Alkaline batteries. Batteries may be weak and need to be replaced.

Question: I tried to program using "Search for Device Codes", but it failed.

Answer: You must press the ENTER key to "save" the programmed code. Search may not work for all devices. Please refer to Section 2B - Manually Program the Device Codes.

Question: What should I do when I replace

a device after I programmed the mode key?

Answer: Simply override the code by reprogramming the mode key for the new device (see Quick Start Guide, Section 2A, or Section 2B).

Question: I have programmed the codes for a device, but some function keys do not work.

Answer: Try using Search for Device Codes (Section 2A) and make sure that the functions work before saving. If you entered the 4-digit device code using Section 2B (Manually

Program the Device Codes), it is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device.

Question: I have programmed the TV mode key. By default, the CHANNEL keys (, , Last, and number keys) on the remote control operate the U-verse receiver.

Answer: If you have programmed the TV and Home Theater system to come on with your U-verse Receiver, but the Home Theater system turns off when I turn the others on.

Answer: If any of the devices get out of sync so that some turn ON and others turn OFF, you will need to turn all Devices off. For the device that is out of sync, use the actual device's power button. When all the devices are OFF, use the POWER key on the Remote Control to turn all devices back ON. It is important to point the Remote Control directly toward the devices for this to work properly.

Care & Maintenance

1. Keep the remote control dry. If it gets wet, wipe it dry immediately.
2. Use and store the remote control only in normal temperature environments.

3. Handle the remote control gently and carefully. Don't drop it.
4. Wipe the remote control with a clean cloth occasionally to keep it looking new.

5. Except for the battery door, do not attempt to open, modify or tamper with the internal components of the remote control. This can cause malfunction and void the warranty.

6. Use only Alkaline AA batteries. Do not mix old and new batteries.
7. Replace batteries every 9 months.



