

Silver remote control Setup Instructions

Program using auto code search

To use the U-verse TV remote control with your TV, DVD, or auxiliary equipment, you'll need to program one or more of the equipment buttons (TV, DVD, or AUX) at the top of the remote control.

1. Turn on the equipment you want to program, such as the TV, DVD player, or auxiliary equipment, and point the remote control at the equipment.
2. **Press and hold** the appropriate **mode key** you want to assign to the equipment (TV, DVD, or AUX) on the remote control.
3. While holding the mode key, press the **OK** key for about one second, then **release both buttons**. All the mode keys should flash twice, indicating you're in the programming mode. You'll now have **10 seconds** to start the next step.
4. Enter the numbers **9-2-2** by pressing the number keys on the remote control. The selected mode key will flash twice, indicating correct entry.
5. For **TV** or **DVD** modes, press and release the **PLAY** key.
6. For **AUX** mode only, press and release the **PLAY** key, and then press:
 - **1** for VCR.
 - **2** for Receiver/Tuner.
 - **3** for Amplifier.
 - **4** for Home Theater In A Box (HTIB).
 - The AUX mode keys will flash twice indicating correct entry.
7. Press the **FF** button multiple times until the device turns off.
8. Press the **ENTER** key (bottom right) to complete programming the remote.

Helpful Tips

- Ensure successful programming by pressing the **mode** key, then the **power** button, to turn the equipment back on. If this does not work, start again at step 1, **point the remote control at the equipment**.
- Once your remote control is programmed, you can **press** the appropriate mode key on the remote to work with the selected equipment. To use the remote control for your AT&T U-verse TV receiver, **press** the **AT&T mode** key.
- The AUX button may be programmed to operate a VCR, Home Theater In a Box (HTIB), receiver or amplifier.

Program by manually entering manufacturer code

Use the following steps to program the TV, DVD, or AUX mode keys:

1. Power on the device you want to program.
2. Locate the **4-digit** setup code for the device you want to program from the [Manufacture Code List](http://www.att.com/support_media/images/pdf/uverse/set-up-code-list.pdf). (If link does not work, copy and paste this URL into your browser: http://www.att.com/support_media/images/pdf/uverse/set-up-code-list.pdf)

If there are multiple codes listed for your device, you may need to repeat steps 2 through 7 to find the correct one.

3. **Press and hold** the appropriate mode key you want to assign to this device (TV, DVD, or AUX) on the remote control.
4. While **holding** the **mode** key, **press** the **OK** key.
5. **Release** both the **mode** key and the **OK** key.
 - All the mode keys should flash twice.
 - You'll now have 10 seconds to start step 6.
6. Enter the appropriate 4-digit setup code for your device (from the Manufacture Code List) by pressing the number keys (0-9) on the remote control.
 - If the mode key flashes three times, then a correct code has been entered.
 - If the mode key gives a long flash, then an invalid code has been entered. Start over at step 3.
 - If all the mode keys give a long flash, then the remote control has timed-out. Start over at step 3.
7. Point the remote control at the programmed device and **press** the **power key** once.
 - The device should turn off.
 - If it does not turn off, repeat steps 2 through 6 trying each code for your brand until you find the correct code.
 - Repeat steps 1 through 7 to program another device.

Important Note: If you are interrupted while you are programming, the remote control may time-out before you complete the code setup and you will need to start over. This is indicated by a red flash of the mode keys.

Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your U-verse TV receiver again, press the AT&T mode key.

Important Note: Combination Devices: If you have an integrated or combination unit, such as a TV/DVD unit, each component of the unit needs to be programmed separately. In the Manufacture Code List for these devices, there will be codes for all components of the combination unit. They can be distinguished as follows:

- TV codes start with a 1.
- DVD codes start with a 2.
- AUX codes start with a 3.

For some combination devices, the original remote control may be required to switch between the components.

Important Note: The U-verse remote control can be programmed to work with **most** TV equipment. You'll first need to find the 4-digit programming code for your TV, DVD, or auxiliary equipment in the user guide. If you cannot find your equipment and code on the list, you may be unable to program the U-verse remote, and will need to use the remote control that originally came with your equipment.