

# Contents

## Getting started.....6

Assembly.....6

Turning on the phone.....6

Help.....7

Charging the battery.....8

Phone overview.....9

Menu overview.....11

Navigation.....13

Memory.....15

Phone language.....16

Entering text.....16

## Music player.....17

Stereo portable handsfree.....17

Audio books.....18

TrackID™ and MusicID™ .....19

Video player.....19

FM radio .....19

MusicDJ™.....20

Record sound.....20

AT&T Music.....20

## Cyber-shot™ .....21

Using the camera.....21

More camera features.....22

Camera tips and tricks.....24

Viewing and tagging photos.....25

Working with photos.....26

Printing photos.....27

## Transferring and handling content.....28

Handling content in the phone.....28

Sending content to another phone.....29

Transferring content to and from a computer.....29

Using a USB cable.....31

Phone name.....33

Using Bluetooth™ wireless technology.....33

Backing up and restoring.....34

## Calling.....36

Making and receiving calls.....36

Address Book .....38

Speed dial.....42

More calling features.....42

## Messaging.....45

Text and multimedia messages.....45

Voice messages.....	47
Mobile Email.....	47
Instant Messaging (IM).....	48

## **MEdia™ Net.....49**

Setting up MEdia Net.....	49
Bookmarks.....	49
More browser features.....	50
Internet keypad shortcuts.....	50
Internet security and certificates.....	51
Podcasts.....	51

## **GPS.....51**

Using GPS.....	51
----------------	----

## **Synchronizing.....53**

Synchronizing using a computer.....	53
-------------------------------------	----

## **More features.....54**

Flight mode.....	54
Alarms.....	54
Calendar.....	55
Notes.....	56
Tasks.....	57
Profiles.....	57
Time and date.....	57
Theme.....	58
Main menu layout.....	58

Ringtones.....	58
Screen orientation.....	58
Games.....	59
Applications.....	59
Locks.....	59

## **Troubleshooting.....62**

Common questions.....	62
Error messages.....	65

## **Index.....67**

## Sony Ericsson C905a Cyber-shot™

UMTS/HSPA band 1/2/5 GSM/GPRS/EDGE  
850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2008

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Important information* before you use your phone.

Your phone has the capability to download, store and forward additional content, for example ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, BestPic, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Cyber-shot is a trademark or registered trademark of Sony Corporation.

PLAYSTATION is a trademark or registered trademark of Sony Computer Entertainment, Inc.

Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

MEdia is a trademark or registered trademark of ATT Mobility.

Yahoo! Is a trademark or a registered trademark of Yahoo! Inc.

AOL and AIM are trademarks or registered trademarks of AOL LLC.

AT&T is a registered trademark of AT&T Corporation.

XM Radio is a trademark or registered trademark of XM Satellite Radio Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, Windows Media and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content.

Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and

licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Java, JavaScript and Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun Java Platform, Micro Edition.

1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

2. Export Regulations: Software including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. 3. Restricted rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) and FAR 52.227-19(c) (2) as applicable.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.


Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.


## Instruction symbols

These symbols may appear in the User guide.

 Note

 Tip

 Warning

 A service or function is network- or subscription-dependent. Contact your network operator for details.

> Use a selection or navigation key to scroll and select. See *Navigation* on page 13.

# Getting started

## Assembly

Before you start using your phone, you need to insert a SIM card and the battery.

### *To insert the SIM card*



- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the gold-colored contacts facing down.

### *To insert the battery*






- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Slide the battery cover into place.

## Turning on the phone

### *To turn on the phone*




- 1 Press and hold down .
- 2 Enter your SIM card PIN, if requested, and select **OK**.
- 3 Select a language.
- 4 Follow the instructions to use the setup wizard for basic settings and useful tips.

 *If you want to correct a mistake when you enter your PIN, press .*

## SIM card


When you register as a subscriber with AT&T, you get a SIM (Subscriber Identity Module) card, which contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

 *You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 40.**

## PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by AT&T. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and

call an emergency number without entering a PIN.

 *If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 59.**

## Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

## Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services, outside your home network (roaming), may incur additional costs. Contact AT&T for more information.

## Help

In addition to this User guide, Feature guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Help and information are also available in your phone.

### To view tips and tricks

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select **Tips and tricks**.

### To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.


### To view the phone status

- From standby select **Menu** > **Settings** > **General** > **Phone status**.

## Charging the battery

The phone battery is partly charged when you buy it.

### To charge the battery

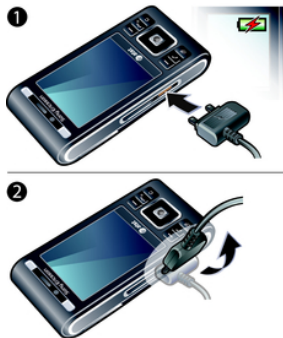

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
  - 2 Remove the charger by tilting the plug upwards.
- *You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.*



## Phone overview

- 1 Photo key, gaming key B
- 2 Photo key, gaming key A
- 3 Light sensor
- 4 Screen
- 5 Selection keys
- 6 MEdia Net key / Center selection key
- 7 Memory card slot
- 8 Call key
- 9 Activity menu key
- 10 Connector for charger, handsfree and USB cable
- 11 Ear speaker
- 12 End, on/off key
- 13 C key (Clear)
- 14 Navigation key



- 15 Self-portrait mirror
- 16 Volume, digital zoom keys
- 17 Camera lens
- 18 Flash
- 19 Camera view key
- 20 Camera mode key
- 21 Camera key
- 22 Strap holder



## Menu overview



**AT&T GPS**  
AT&T Navigator  
Where  
Shop GPS Apps



**MEdia Net**



**Cyber-shot™**



**My Stuff**  
Camera album  
Music  
Pictures  
Video  
Themes  
Web pages  
Games  
Applications  
Other



**Messaging**  
Write new  
Inbox  
Mobile Email  
IM\*  
Call voicemail  
Sent messages  
Drafts  
Saved messages  
Templates  
Manage messages  
Settings



**MEdia Mail**



**Address Book**  
Myself  
New contact



**Tools & Apps**  
Applications  
Tools  
Organizer  
Alarms  
FM Radio  
Record sound  
Recent Calls



**Yellow Pages**



**AT&T Music**  
Music player  
Shop Music  
Music ID  
XM Radio  
Music Videos  
Music Sync  
Community  
Music Apps



**Entertainment**  
Photo\*  
Music  
Video  
Games  
Settings



**Settings\*\***



**General**  
Profiles  
Time & date  
Language  
Software Update \*\*\*  
Voice control  
New events  
Shortcuts  
Flight mode  
Security  
Setup wizard  
Accessibility\*  
Phone status  
Master reset



**Sounds & alerts**  
Ring volume  
Ringtone  
Silent mode  
Increasing ring  
Vibrating alert  
Message alert  
Key sound



**Display**  
Wallpaper  
Main menu layout  
Theme  
Screen saver  
Clock size  
Brightness



## Calls

- Speed dial
- Smart search
- Forward calls
- Manage calls
- Video Share\*
- Time & cost\*
- Show/hide my no.
- Handsfree
- Open to answer
- Close to end call



## Connectivity

- Bluetooth
- USB
- GPS
- Phone name
- Network sharing
- Mobile networks\*\*\*
- Internet settings
- Streaming settings
- Message settings\*
- SIP settings
- IMS settings
- Accessories

\*\*\* Menu appears only when available.

\* Some menus are operator-, network- and subscription-dependent.

\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 13.

## Navigation

### *To navigate the phone menus*



- 1 From standby select **Menu**.
- 2 Use the navigation key to move through the menus.

### *To select actions on the screen*

- Press the left, center or right selection key.

### *To view options for an item*

- Select **Options** to, for example, edit.

### *To end a function*

- Press .

### *To return to standby*


- Press .

### *To navigate your media*

- 1 From standby select **Menu** > **Entertainment**.
- 2 Scroll to a menu item and press the navigation key right.

- 3 To go back, press the navigation key left.

### *To delete items*

- Press  to delete items such as numbers, letters, pictures and sounds.

### Tabs

Tabs may be available. For example, **Settings** have tabs.



### *To scroll between tabs*

- Press the navigation key left or right.

### Status bar icons

You may see icons in the standby screen of your phone.

#### Icon Description



GSM network signal strength



GPRS network is within range and can be used





EDGE network is within range and can be used




HSDPA network is within range and can be used


 Battery strength indicator


 Battery is charging


 Missed incoming call


 Voicemail waiting


 Alarm is set and turned on


 Text messaging waiting

 Bluetooth is turned on

 Headphones are attached

 Internet session is active





 Key lock is on

 Silent mode is on

## Shortcuts

You can use keypad shortcuts to go directly to functions.

### *To use navigation key shortcuts*

- From standby press , ,  or  to go directly to a function.

### *To edit a navigation key shortcut*








- 1 From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.

- 3 Scroll to a menu option and select **Shortc..**

## Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

### *To go directly to a main menu*


- From standby select **Menu** and press  – ,  ,  or  .
- ! *The **Main menu layout** must be set to **Grid**. See *To change the main menu layout on page 58*.*

## Activity menu

The activity menu allows you to multitask and gives you a quick access to:

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favorite functions to access them quickly.
- **Internet** – quick access to the Internet.

### *To open the activity menu*

- Press .

## Memory

You can save content on a memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.

### Memory card

**!** You may have to purchase a memory card separately.

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.


You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 28.

### To insert a memory card



- Open the cover and insert a memory card with the gold-colored contacts facing up.

### To remove a memory card

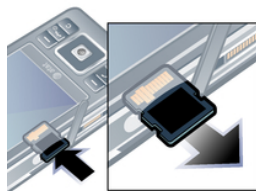

- Open the cover and press the edge of the memory card to release and remove it.

## Phone language

You can select a language to use in your phone.

### *To change the phone language*

- 1 From standby select **Menu > Settings > the General tab > Language > Phone language**.
- 2 Select an option.

## Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

### *To change text input method*

- When you enter text, press and hold down **(\*)**.

### *To shift between capitals and lower-case letters*

- When you enter text, press **(\*)**.

### *To enter numbers*

- When you enter text, press and hold down **(0\*) - (9)**.

### *To enter periods and commas*

- When you enter text, press **(,)**.

### *To enter a symbol*

- 1 When you enter text, select **Options > Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

### *To enter text using T9™ Text Input*

- 1 From standby select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is not displayed, press and hold down **(\*)** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **▲** or **▼** to view suggestions.
- 5 Press **(↵)** to accept a suggestion.

### *To enter text using multitap*

- 1 From standby select, for example, **Menu > Messaging > Write new > Message**.
- 2 If **T9** is displayed, press and hold down **(\*)** to change to multitap text input.
- 3 Press **(2) - (9)** repeatedly until the desired letter appears.
- 4 When a word is written, press **(↵)** to add a space.



### *To add words to the built-in dictionary*

- 1 When you enter text using T9 Text Input, select **Options** > **Spell word**.
- 2 Write the word using multitap input and select **Insert**.

## Music player

### Stereo portable handsfree



### *To use a handsfree*

- Connect a portable handsfree. Music stops when you receive a call and resumes when the call has ended.
- ! *If headphones are not included with the phone, you may purchase them separately.*

### *To play music*

- 1 From standby select **Menu** > **AT&T Music** > **Music player**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and select **Play**.

### *To stop playing music*

- Press the center selection key.

### ***To fast forward and rewind***

- Press and hold down **▶** or **◀**.

### ***To move between tracks***

- Press **▶** or **◀**.

### ***To change the volume***

- Press the side volume key up or down.

### ***To minimize the player***

- Select **Options > Minimize**.

### ***To return to the player***

- From standby select **Menu > Entertainment**.

## **Playlists**

You can create playlists to organize your music. You can add tracks to more than one playlist.

Deleting a playlist, or a track from a playlist, does not delete the track from the memory, just the reference to the track in that list.

- ! *It may take a few minutes for the phone to create a playlist.*

### ***To create a playlist***

- 1 From standby select **Menu > AT&T Music > Music player > Playlists**.
- 2 Scroll to **New playlist** and select **Add**.
- 3 Enter a name and select **OK**.

- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

### ***To add tracks to a playlist***

- 1 From standby select **Menu > AT&T Music > Music player > Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the marked tracks to the playlist.

## **Audio books**

You can listen to audio books you have transferred to your phone from a computer using *Sony Ericsson Media Manager*.

- ! *It may take a few minutes before a transferred audio book appears in the list of available audio books.*
- ! *You can download the Sony Ericsson Media Manager software from [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

## To access audio books

- From standby select **Menu** > **AT&T Music** > **Music player** > **Audio books**.
- 💡 You can find audio books in formats other than M4B and those that do not have ID3v2 chapter tags in the **Tracks** folder.

## TrackID™ and MusicID™

TrackID™ and MusicID™ are music recognition services. You can search for title, artist and album name for a track you hear playing on the radio. TrackID can be used for songs playing on the phone's built-in FM Radio. MusicID can be used for songs playing on an external music source.

### To search for track information

- When the built-in FM radio is playing select **Options** > **TrackID™**.
- When an external music source is playing, select **Menu** > **AT&T Music** > **MusicID™**.
- 💡 For best results, use **TrackID™** in a quiet area.

## Video player

### To play videos

- 1 From standby select **Menu** > **Entertainment** > **Video** > **Videos**.

- 2 Scroll to a title and select **Play**.

### To stop playing videos

- Press the center selection key.

## FM radio

- ! Do not use your phone as a radio in places where this is prohibited.

### To turn on the radio

- 1 Connect a handsfree to the phone.
- 2 From standby select **Menu** > **Tools & Apps** > **FM Radio**.

- ! If headphones are not included with the phone, you may purchase them separately.

### To search for channels automatically

- Select **Search**.

### To search for channels manually

- Press **⏪** or **⏩**.

### To change the volume

- Press the side volume key up or down.

### To minimize the FM radio

- Select **Options** > **Minimize**.

### To return to the FM radio

- From standby select **Menu** > **Tools & Apps** > **FM Radio**.

## Saving channels

You can save up to 20 preset channels.

### To save channels

- 1 When you have found a radio channel, select **Options > Save**.
- 2 Scroll to a position and select **Insert**.

### To select saved channels

- 1 Select **Options > Channels**.
- 2 Select a radio channel.

### To switch between saved channels

- Press **▲** or **▼**.

## MusicDJ™

You can compose and edit your own melodies to use as ringtones. Pre-arranged sounds with different characteristics are available.

### To compose a melody

- 1 From standby select **Menu > Tools & Apps > Tools > MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** sounds.
- 3 Use **▲**, **▶**, **▲** or **▼** to scroll between the sounds.
- 4 Select **Options > Save melody**.

## Record sound

You can record a voice memo or a call. Recorded sounds can also be set as ringtones.

- ! *In some countries or states it is required by law that you inform the other person before recording the call.*

### To record a sound

- From standby select **Menu > Tools & Apps > Record sound > Record**.

### To record a call

- 1 During an ongoing call, select **Options > Record**.
- 2 Select **Save** to save the recording.

### To listen to a recording

- 1 From standby select **Menu > Entertainment**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

## AT&T Music

Go to AT&T Music to access your music player, purchase ringtones or to access other music applications.

### AT&T Music options

- **Music player** – a music and video player all in one.

- **Shop Music** – discover, sample and download songs directly from your phone.
- **MusicID** – identify the song title, artist or album in a flash by holding your phone up to the music. MusicID can identify millions of songs.
- **XM Radio** – XM Mobile Radio® offers commercial-free music stations.
- **Music Videos** – stream your favorite mobile videos straight to your phone.
- **Music Sync** – transfer music between your phone and PC using an Over-the-Air (OTA) connection.
- **Community** – access a hot user community where you can chat with your friends about the latest music.
- **Music Apps** – purchase music related applications.


### To access AT&T Music

- From standby select **Menu** > **AT&T Music** and select an option.

## Cyber-shot™

You can take photos and record video clips to view, save or send. You find saved photos and video clips in **Entertainment** and in **My Stuff**.

### Using the camera

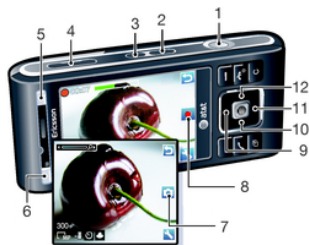

- 1 Take photos/Record video
- 2 Select camera mode (Still camera/ Video recorder)
- 3 View photos and videos
- 4 Zoom in or out
- 5 Photo: **Scenes** Video: **Night mode**
- 6 Photo: **Shoot mode** Video: **Video length**

- 
- 7 Still camera (indicator)
- 
- 8 Video recorder (indicator)
- 
- 9 Focus
- 
- 10 Self-timer
- 
- 11 Photo: Flash Video: Light
- 
- 12 Exposure / brightness
- 

### *To activate the camera*



- Open the retractable lens cover.

### *To take a photo*

- 1 Activate the camera and press **[CAM]** to select **[CAM]**.
- 2 Press **[O]** halfway down to use auto focus.

- 3 When the dot and focus frame are green, press **[O]** fully down to take a photo. The photo is automatically saved.

### *To record a video clip*

- 1 Activate the camera and press **[CAM]** to select **[CAM]**.
- 2 Press **[O]** fully down to start recording.
- 3 To stop recording, press **[O]** fully down. The video clip is automatically saved.

### *To use zoom*

- Press the volume key.

### *To adjust brightness*

- Press **[M]** and then **[L]** or **[R]**.

### *To view photos and video clips*

- 1 Activate the camera and press **[CAM]**.
- 2 Scroll to the item.
- 3 To view a video clip, press the center selection key.

## **More camera features**

### *To change settings*

- Activate the camera and select **[CAM]**.

### *To view information about settings*

- Scroll to a setting and select **[CAM]**.

### *To improve a photo with Photo fix*

- 1 Activate the camera and press **⏻** to select **📷**.
- 2 Make sure **Review** is set to **On**. Select **📷** > **Settings** and scroll to **Review** > **On**.
- 3 Take a photo.
- 4 During review, select **Options** > **Photo fix**.

### **Face detection**

You can use face detection to bring an off-center face into focus. The camera automatically detects up to three faces, indicated by white frames. A green frame shows which face has been selected when auto-focus is used. Focus is set to the face closest to the camera.

### *To set face detection*

- 1 Activate the camera and press **⏻** to select **📷**.
- 2 Select **📷** > **Focus** > **Face detection**.

### **BestPic™**

You can take a series of photos with one press of the camera key. Then you can save the best photo, or all of them. BestPic™ uses a flash when lighting conditions are poor.

### *To use BestPic™*

- 1 Activate the camera and press **⏻** to select **📷**.
- 2 Select **📷** > **Shoot mode** > **BestPic™**.
- 3 Press **⏻** halfway down to use auto focus.
- 4 When the dot and focus frame are green, press **⏻** fully down to complete the shot.
- 5 Select **Options** > **Save all** or press the navigation key left or right to choose the best photo and select **Save**.

### **Red-eye reduction**

Reduce the red-eye effect by making the flash fire before the shot is taken and again during the shot.




### *To adjust red-eye reduction*

- 1 Activate the camera and press **⏻** to select **📷**.
- 2 From standby select **Menu** > **Cyber-shot™** > **📷** > **Flash** > **Red-eye reduct.**

### **Smart contrast**









Taking images of scenes with bright parts and dark shadows is a problem in photography. Smart contrast improves your photo by automatically balancing the contrast between the bright and dark parts of your photo.







## To adjust smart contrast

- 1 Activate the camera and press  to select .
- 2 From standby select **Menu > Cyber-shot™ >  > Shoot mode > Smart contrast.**

## Camera icons and settings

Icons on the screen inform what the current setting is. More camera settings are available in **Settings**.

	<b>Video length.</b> For picture messages, the length is limited
	<b>Microphone</b>
	<b>Night mode</b>
	<b>Video: recording</b>
	<b>Zoom</b>
	<b>Auto focus</b>
	<b>Focus frame</b>
<b>300+</b>	<b>Camera: remaining photos</b>
	<b>Geo tagging is turned on</b>

Icon	Description
	<b>Shoot mode</b>
	<b>Scenes.</b> Predefined settings for common photo situations, including landscape, portrait and sport
	<b>Picture size</b>
	<b>Focus/Face detection</b>
	<b>Metering mode.</b> Determines a well-balanced exposure by measuring the light in the viewfinder.
	<b>White balance.</b> To adjust color tones to the lighting conditions

## Camera tips and tricks

### Rule of thirds

Don't place your subject in the middle of the frame. By placing it a third of the way in, you will achieve a better result.

### Hold it steady

Avoid blurry pictures by holding the camera steady. Try to steady your hand by leaning it against a solid object.



### Get closer

By getting as close as possible to your subject you won't have to rely on the zoom. Try to fill your viewfinder with your subject.

### Stay within the flash range

Pictures taken beyond the maximum flash range will be too dark. The maximum flash range is about four steps away.

### Consider variety

Think different angles, move towards the object. Take some vertical pictures. Try different positions.

### Use a plain background

A plain background will help to highlight your subject.

### Keep your lens clean

Phones are used in all manner of weather and places and carried in pockets and bags. This results in the camera lens becoming dirty and covered with fingerprints. Use a soft cloth to clean the lens.

## Viewing and tagging photos

### To view photos on a TV

- 1 Connect the TV-out cable to the phone and the TV.
- 2 From standby select **Menu > Entertainment > Photo > Camera album**.
- 3 Select a month.
- 4 Scroll to a photo and select **View**.

! *You may have to purchase a TV-out cable ITC-60 separately. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*


### To view photos in a slide show

- 1 From standby select **Menu > Entertainment > Photo > Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options > Slide show**.
- 5 Select a mood.


### Photo tags

You can tag photos to categorize them in **Photo tags**. For example, you can create a tag called vacation and add it to all your vacation photos.

### **To create a new photo tag**

- 1 From standby select **Menu** > **Entertainment** > **Photo** > **Camera** album.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press  and select **Options** > **New tag**.
- 5 Enter a name and select **OK**.
- 6 Select an icon.
- 7 To tag the photo, select **Options** > **Tag this photo**.

### **To tag photos**

- 1 From standby select **Menu** > **Entertainment** > **Photo** > **Camera** album.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Press  and scroll to a tag.
- 5 Select **Options** > **Tag this photo**.
- 6 For each photo you want to tag, scroll to the photo and select **Options** > **Tag this photo**.

### **Using photos**

You can add a photo to a contact.

### **To use photos**

- 1 From standby select **Menu** > **Entertainment** > **Photo** > **Camera** album.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.

- 4 Select **Options** > **Use as**.
- 5 Select an option.

### **To set a Java™ application as a wallpaper**

- 1 From standby select **Menu** > **Settings** > the **Display** tab.
- 2 Select **Wallpaper** > **Application**.
- 3 Select a Java application.

! You can only see the Java applications that have support for wallpaper.

### **Working with photos**

You can view, enhance and organize your photos and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Use *Sony Ericsson Media Manager* to transfer content to and from your phone. For more information, see *Transferring content to and from a computer* on page 29.

### **PhotoDJ™ and VideoDJ™**

You can edit photos and video clips.

### ***To edit and save a photo***

- 1 From standby select **Menu** > **Entertainment** > **Photo** > **Camera album**.
- 2 Select a month.
- 3 Scroll to a photo and select **View**.
- 4 Select **Options** > **Edit in PhotoDJ™**.
- 5 Edit the photo.
- 6 Select **Options** > **Save picture**.

### ***To edit and save a video clip***

- 1 From standby select **Menu** > **Tools & Apps** > **Tools** > **VideoDJ™**.
- 2 Select **Add** > **Video clip** and scroll to a video clip.
- 3 Select **Edit** and choose an option.
- 4 Edit the video clip.
- 5 Select **Options** > **Save**.

### ***To trim a video clip***

- 1 From standby select **Menu** > **Organizer** > **My Stuff** > **Videos**.
- 2 Scroll to a video clip and select **Options** > **Edit in VideoDJ™** > **Edit** > **Trim**.
- 3 Select **OK** > **Set** > **Start** to set the starting point.
- 4 Select **Set** > **End** to set the ending point.
- 5 Select **Trim** > **Options** > **Save**.

## **Printing photos**

You can print your photos by transferring them to a computer that is connected to a standard printer. For more information, see *Transferring content to and from a computer* on page 29. You can also print photos without a computer by connecting your phone directly to a printer that accepts USB, Bluetooth, or Memory Stick Duo connections.

### ***To print photos using a USB cable***

- 1 Connect a USB cable to the phone.
- 2 Connect the USB cable to the printer.
- 3 From standby select **Menu** > **Settings** > the **Connectivity** tab > **USB** > **USB mode**.
- 4 Disconnect and reconnect the cable to the phone.
- 5 Select **Print**.
- 6 Select a month.
- 7 Scroll to a photo and select **Options** > **Print**.

💡 *You should disconnect and re-connect the USB cable if there is a printer error.*

### ***To print photos via memory stick***

- 1 Save the photos on your phone to M2 Memory Stick.
- 2 Insert the M2 Memory Stick into a Memory Stick Duo adaptor.

- 3 Insert the Memory Stick Duo adaptor into a printer that accepts Memory Stick Duo.
- ! *You may have to purchase a M2 Memory Stick and a Memory Stick Duo adaptor separately.*
  - 💡 *You can also print using a Bluetooth compatible printer that supports the Object Push Profile.*

## Transferring and handling content

You can transfer and handle content such as pictures and music.

- ! *You are not allowed to exchange some copyright-protected material. 🚫 identifies a protected item.*

### Handling content in the phone

You can use [My Stuff](#) to handle content saved in the phone memory or on a memory card. Tabs and icons in [My Stuff](#) show where the content is saved. If the memory is full, delete some content to create space.

#### *To view memory status*

- 1 From standby select [Menu](#) > [My Stuff](#).
- 2 Select [Options](#) > [Memory status](#).
- 3 Select [Memory card](#) or [Phone](#).

#### *To select more than one item in a folder*

- 1 From standby select [Menu](#) > [My Stuff](#).
- 2 Scroll to a folder and select [Open](#).
- 3 Select [Options](#) > [Mark](#) > [Mark several](#).
- 4 For each item you want to mark, scroll to the item and select [Mark](#).

### ***To move items between the phone memory and the memory card***

- 1 From standby select **Menu > My Stuff**.
- 2 Find an item and select **Options > Manage file > Move**.
- 3 Select **Memory card** or **Phone**.
- 4 Scroll to a folder and select **Open**.
- 5 Select **Paste**.

### ***To view information about content***

- 1 From standby select **Menu > My Stuff**.
- 2 Find an item and select **Options > Information**.

## **Sending content to another phone**

You can send content, for example, in messages or using Bluetooth™ wireless technology.

### ***To send content***

- 1 Scroll to an item and select **Options > Send**.
  - 2 Select a transfer method.
- ! *Make sure the receiving device supports the transfer method you select.*

## **Transferring content to and from a computer**

With Windows® Explorer or Sony Ericsson Media Manager, you can

transfer music from CDs, music on your computer, or music that you have purchased online to a memory card. Windows® Explorer is a file manager that often comes with your computer and can be used to view and manage your files and folders. Sony Ericsson Media Manager enables you to transfer music, photos and videos between your phone and your PC. You can download Sony Ericsson Media Manager from [www.sonyericsson.com/support](http://www.sonyericsson.com/support). For more information on using the phone with a USB cable, see *Using a USB cable* on page 31.

### ***To use the phone with Windows® Explorer***

- 1 Connect a USB cable to the phone and the computer.
- 2 On your phone (depending on the phone setup):
  - The phone may switch to **Media transfer** and be ready to use.
  - If prompted with a USB mode menu, select **Media transfer**.
- 3 **On your computer:**
  - Wait until the memory card appears as an external disk in Windows Explorer.

- Drag and drop selected files between the phone and the computer.
- For full access to your music in the music player, place it in the Music folder on the phone's memory or a memory card. For more information on how to move files already stored on your phone or memory card to the Music folder, see *To move items between the phone memory and the memory card* on page 29.

! *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card.*

### Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 2 or higher

### *To download the latest version of Sony Ericsson Media Manager*

- 1 In your Internet browser, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).
- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.

- 5 Select *Read more and download* under *Media Manager*.
- 6 Select *Download now* and save the file to your computer.

### *To install Sony Ericsson Media Manager from the downloaded file*


- 1 Double-click the downloaded *Sony Ericsson Media Manager* file.
- 2 **Installation wizard:** To continue the installation, click *Next*.
- 3 Read and accept the license agreement, then click *Next*.
- 4 To install to the default folder, click *Next*.
- 5 To begin the installation, click *Install*.
- 6 To exit the wizard, click *Finish*.

### *To transfer content using Sony Ericsson Media Manager*

- 1 Connect the phone to a computer with a USB cable supported by your phone.
- 2 **On your phone (depending on setup):**
  - The phone may switch to **Media transfer**. If so, disconnect the cable and change the USB default mode to **Mass storage**. See *USB default mode* on page 32. Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card. Sony Ericsson Media Manager software is

available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

- If prompted with a **USB mode** menu, select **Mass storage**. The phone will shut down in this mode but will restart again when it is disconnected from the USB cable.
- 3 **On your computer:** Drag and drop selected files between the phone and the computer.
  - 4 Wait until the phone appears in *Sony Ericsson Media Manager*.
  - 5 Move files between your phone and the computer in *Sony Ericsson Media Manager*.
- ! *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*

💡 *For details on transferring music, click  in the top right corner of the Sony Ericsson Media Manager window.*

## Using a USB cable

You can connect your phone to a computer with a USB cable to synchronize, transfer and back up phone content and use your phone as a modem. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides.



! *You may have to purchase a USB cable separately.*

### Before using a USB cable

See *Required operating systems* on page 30.

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.*

### PC Software

You may use Windows® Explorer, Sony Ericsson PC Suite, or Sony Ericsson Media Manager with your phone. Sony Ericsson PC software is available from [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to use with your phone.

In the phone menu, you must select the USB mode based on how you plan to use the USB cable with your phone.

The table lists the available computer applications and the corresponding USB mode for each.

USB mode	Purpose	Computer application
Show menu	Displays the USB menu when the USB cable is attached to the phone.	Any
Phone mode	Synchronize the phone with a computer.	Sony Ericsson PC Suite
Media transfer	Transfer music, pictures, or other files between your phone and a computer. The phone appears as a media device on your computer. Sony Ericsson PC Suite cannot access your phone in this mode.	Microsoft® Windows® Explorer
Print	Print images from the Camera album.	
Mass storage	Transfer music, pictures or other files between your phone and a computer. The phone functions are turned off automatically. All functions except alarms and alerts are turned off in Mass storage mode. The phone shuts down, but restarts after removing the cable.	Microsoft® Windows® Explorer and Sony Ericsson Media Manager

### USB default mode

You can select the USB mode the phone uses when a USB cable is attached.

### *To change the USB default mode*

- 1 From standby select **Menu > Settings > the Connectivity tab > USB > USB default mode.**



- 2 Select an option.

### Disconnect the USB

The correct method for disconnecting the USB cable depends on the USB mode.

#### *To disconnect the USB cable safely in Mass storage or Phone mode*

- 1 When the phone is in **Mass storage** or **Phone mode**, right-click the removable disk icon in Windows Explorer.
- 2 Select *Eject*.
- 3 When the message is shown, **Mass storage session ended. It is now safe to remove the USB cable.**

#### *To disconnect the USB cable safely in Media transfer or Printer mode*

- Remove the USB cable.

### Phone name

You can enter a name for your phone that is shown to other devices when using, for example, Bluetooth™ wireless technology.

#### *To enter a phone name*

- 1 From standby select **Menu > Settings > the Connectivity tab > Phone name.**
- 2 Enter the phone name and select **OK.**

## Using Bluetooth™ wireless technology

The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, for example:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items.
- Play multiplayer games.

! *A range within 33 feet (10 meters), with no solid objects in between, is recommended for Bluetooth communication.*

### Before using Bluetooth wireless technology

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

#### *To turn on the Bluetooth function*

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Turn on.**
- ! *Make sure that the device you want to pair your phone with has the Bluetooth*

*function activated and Bluetooth visibility turned on.*

### **To pair the phone with a device**

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > My devices.**
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

### **To allow connection to the phone**

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > My devices.**
- 2 Select a device from the list.
- 3 Select **Options > Allow connection.**
- 4 Select **Always ask** or **Always allow.**

! *This is only possible with devices that require access to a secure service.*

### **To pair the phone with a Bluetooth handsfree for the first time**

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.**
- 2 Scroll to a device and select **Yes.**
- 3 Enter a passcode, if required.

### **Power saving**

You can save battery power with the Power save function. In Power save

mode you can only connect with a single Bluetooth device. If you want to connect with more than one Bluetooth device at the same time you must turn this function off.

### **To turn on powersave**

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Power save > On.**

### **Transferring sound to and from a Bluetooth handsfree**

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

### **To transfer sound**

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > Incoming call.**
- 2 Select an option. **In phone** transfers sound to the phone. **In handsfree** transfers sound to the handsfree.

### **To transfer sound during a call**

- 1 During a call, select **Sound.**
- 2 Select from the list.

## **Backing up and restoring**

You can backup and restore contacts, calendar, tasks, notes and bookmarks using the *Sony Ericsson PC Suite*. You

can backup and restore content such as music, pictures and video clips using the *Sony Ericsson Media Manager*.

Before backing up and restoring, you need to install the *Sony Ericsson PC Suite* and the *Sony Ericsson Media Manager*.

- ⚡ *Always make a backup before having the phone upgraded, since upgrading can clear the user content.*

### **To make a backup using the Sony Ericsson PC Suite**

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and make a backup.

- ! *The Sony Ericsson PC Suite will overwrite all the phone content during the restore process. You may damage your phone if you interrupt the process.*

### **To restore phone content using the Sony Ericsson PC Suite**

- 1 **Computer:** Start the *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** Go to the backup and restore section in the *Sony Ericsson PC Suite* and restore your phone.

### **To make a backup using the Sony Ericsson Media Manager**

- 1 Connect your phone to the computer using a USB cable.
  - 2 **Phone:** Select **Media transfer mode**.
  - 3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
  - 4 Go to the backup section in the *Sony Ericsson Media Manager*.
  - 5 Select the files you want to back up and make a backup.
- ! *You can also connect your phone to a computer using Bluetooth.*
  - ! *The Sony Ericsson Media Manager will compare your phone content with your computer backup and then restore files*

*missing in your phone. You may damage your phone if you interrupt the process.*

### **To restore phone content using the Sony Ericsson Media Manager**

- 1 Connect your phone to the computer.
- 2 **Phone:** Select **Media transfer** mode.
- 3 **Computer:** Start *Sony Ericsson Media Manager* from *Start/Programs/Sony Ericsson/Sony Ericsson Media Manager*.
- 4 Go to the backup section in the *Sony Ericsson Media Manager*.
- 5 Select the files you want to restore and restore them.


! *For more information on backing up and restoring in Sony Ericsson Media Manager see the Sony Ericsson Media Manager Feature guide at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

## Calling

### Making and receiving calls

You need to turn on your phone and be within range of a network.



#### **To make a call**

- 1 From standby enter a phone number (with international country code and area code, if applicable).
  - 2 Press .
- 💡 *You can call numbers from your Address Book and call list. See Address Book on page 38, and Call list on page 38. You can also use your voice to make calls. See Voice control on page 42.*

#### **To end a call**

- Press .

#### **To make international calls**


- 1 From standby press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

### **To re-dial a number**


- When **Retry?** appears select **Yes**.

**⚠** *Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.*

### **To answer a call**

- Press .



### **To reject a call**

- Press .

### **To change the ear speaker volume during a call**

- Press the volume key up or down.

### **To mute the microphone during a call**


- 1 Press and hold down .
- 2 Press and hold down  again to resume.

### **To turn on the loudspeaker during a call**

- Press **SpkrOn**.

**⚠** *Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.*

### **To view missed calls from standby**

- Press  to open the call list.

## **Networks**


Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability.

### **Emergency calls**

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

**!** *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

### **To make an emergency call**

- From standby enter 112 (the international emergency number) and press .

### **To view your local emergency numbers**

- 1 From standby select **Menu > Address Book**.
- 2 Scroll to **New contact** and select **Options > Special numbers > Emergency nos..**

## AT&T Video Share

You can share experiences while on a call with friends and family when they happen or save them to share later. When on a call, the person who initiates the Video Share session transmits the video. Only the person placing a Video Share call can save the Video Share session.

### Types of Video Share calls

You can share information live or a prerecorded session.

- **Live share** – streams live information as the camera captures it.
- **Pre-recorded** – allows you to share a previously recorded Video Share session.

### Before you begin

To use Video Share service, both parties on the call must have:

- Video share service activated on your account.
- 3G coverage.
- Video Share turned on.

### To initiate a Video Share session

- While on a call, select **Vid. Share**.

### To accept a Video Share session

- When you receive a Video Share call request, press **Yes**.

### To end a Video Share session

- To continue the call, but end the Video Share session, press **Stop**.



### To save Video Share sessions

- From standby select **Menu > Settings > the Calls tab > Video Share > Auto record**.

### Call list


You can view information about recent calls.

### To call a number from the call list

- 1 From standby press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

## Address Book

You can save names, phone numbers and personal information in **Address Book**. Information can be saved in the phone memory or on the SIM card.

-  You can synchronize your contacts using the *Sony Ericsson PC Suite*.

## Default contacts

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Address Book**. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

### To select default contacts

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Default contacts**.
- 3 Select an option.

## Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.


### To add a phone contact

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New number:** and select **Add**.
- 5 Enter the number and select **OK**.
- 6 Select a number option.
- 7 Scroll between the tabs and add information to the fields.



- 8 Select **Save**.

## Calling contacts

 


### To call a contact

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to a contact and press .

### To go directly to the contacts list

- From standby press and hold down  - .

### To call with Smart search

- 1 From standby press  -  to enter a sequence of (at least two) digits. All entries which match the sequence of digits or corresponding letters are shown in a list.
- 2 Scroll to a contact or a phone number and press .

### To turn on or off Smart search


- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Smart search**.
- 2 Select an option.

## Editing contacts

### To add information to a phone contact

- 1 From standby select **Menu** > **Address Book**.

- 2 Scroll to a contact and select **Options** > **Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.


 *If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.*

### ***To copy names and numbers to phone contacts***

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy from SIM**.
- 3 Select an option.

### ***To copy names and numbers to the SIM card***

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy to SIM**.
- 3 Select an option.

 *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

### ***To automatically save names and phone numbers on the SIM card***

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Auto save on SIM**.
- 3 Select an option.

### ***To save contacts on a memory card***

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Back up to m. card**.

### ***SIM contacts***

SIM contacts can contain names and numbers only. They are saved on the SIM card.

### ***To add a SIM contact***

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.



## Deleting contacts

### *To delete all contacts*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Delete all contacts**.
- 3 Select an option.

## Contact memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

### *To view contact memory status*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Memory status**.

## Myself

You can enter information about yourself and, for example, send your business card.

### *To enter Myself information*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to an option and edit the information.
- 4 Select **Save**.

## *To add your own business card*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **Myself** and select **Open**.
- 3 Scroll to **My contact info** and select **Add** > **Create new**.
- 4 Scroll between the tabs and add information to the fields.
- 5 Enter the information and select **Save**.

## Groups

You can create a group of phone numbers and email addresses from **Phone contacts** to send messages to. See *Messaging* on page 45. You can also use groups (with phone numbers) when you create accepted callers lists. See *Accept calls* on page 44.

### *To create a group of numbers and email addresses*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Groups**.
- 3 Scroll to **New group** and select **Add**.
- 4 Enter a name for the group and select **Continue**.
- 5 Scroll to **New** and select **Add**.
- 6 For each contact phone number or email address you want to mark, scroll to it and select **Mark**.

- 7 Select **Continue** > **Done**.


## Speed dial

Speed dialing lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

### *To add contacts to speed dial numbers*

- 1 From standby select **Menu** > **Address Book**.
- 2 Scroll to **New contact** and select **Options** > **Speed dial**.
- 3 Scroll to a position number and select **Add**.
- 4 Select a contact.

### *To speed dial*

- From standby enter the position number and press .

## More calling features


### Vicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

### *To enter your voicemail number*

- 1 From standby select **Menu** > **Messaging** > **Settings** > the **Message settings tab** > **Voicemail number**.
- 2 Enter the number and select **OK**.

### *To call your voicemail service*

- From standby press and hold down .

### Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

### *To record a voice command using voice dialing*

- 1 From standby select **Menu** > **Settings** > the **General tab** > **Voice control** > **Voice dialing** > **Activate**.
- 2 Select **Yes** > **New voice command** and select a contact. If the contact has more than one number, select the number to add the voice command to.
- 3 Record a voice command such as “John mobile.”
- 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.

- 5 If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.

! *Voice commands are saved in the phone memory only. They cannot be used in another phone.*

### **To voice dial**

- 1 From standby press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example “John mobile.” The phone plays the name back to you and connects the call.

### **Forwarding calls**

You can forward calls, for example, to an answering service.

### **To forward calls**

- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Forward calls**.
- 2 Select a call type and a forward option.
- 3 Select **Activate**.
- 4 Enter the number to forward calls to and select **OK**.

### **More than one call**

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also

switch between the two calls. You cannot answer a third call without ending one of the first two calls.



### **Call waiting**

You will hear a beep if you receive a second call while call waiting is active.


### **To activate call waiting**

- From standby select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Call waiting** > **Activate**.


### **To make a second call**

- 1 During the call, press . This puts the ongoing call on hold.
- 2 Select **Options** > **Add call**.
- 3 Enter the number to call and press .

### **To answer a second call**

- During the call, press . This puts the ongoing call on hold.

### **To reject a second call**

- During the call, press  and continue with the ongoing call.


### **To end an ongoing call and answer a second call**

- During the call, select **Replace active call**.

## Handling two voice calls

You can have calls ongoing and on hold at the same time.

### *To switch between two calls*

- During the call, press .

### *To join two calls*

- During the call, select **Options > Join calls**.

### *To connect two calls*

- During the call, select **Options > Transfer call**. You are disconnected from both calls.



### *To end an ongoing call and return to the call on hold*

- First press  and then .

## Conference calls

With a conference call, you can have a joint conversation with up to five people.

### *To add a new participant*

- 1 During the call, press . This puts the joined calls on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options > Join calls** to add the new participant.

- 5 Repeat this task to add more participants.

### *To release a participant*

- 1 Select **Options > Release party**.
- 2 Select the participant to release.

### *To have a private conversation*

- 1 During the call, select **Options > Talk to** and select the participant to talk to.
- 2 To resume the conference call, select **Options > Join calls**.

## Accept calls

You can choose to receive calls from certain phone numbers only.

### *To add numbers to the accepted callers list*

- 1 From standby select **Menu > Settings > the Calls tab > Manage calls > Accept calls > Only from list**.
- 2 Scroll to **New** and select **Add**.
- 3 Select a contact or **Groups**.

 See **Groups on page 41**.

### *To accept all calls*

- From standby select **Menu > Settings > the Calls tab > Manage calls > Accept calls > All callers**.

## Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

### *To hide your phone number*

- 1 From standby select **Menu** > **Settings** > the **Recent Calls** tab > **Show/hide my no.**
- 2 Select **Hide number**.

## Messaging

### Text and multimedia messages



Messages can contain text, pictures, sound effects, animations, and melodies. You can also create and use templates for your messages.


When sending messages, the phone automatically selects the most suitable method (as a text or multimedia message) for sending the message.

### Sending messages

You can send messages from your phone.

### *To create and send a message*

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Message**.
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Continue** > **Addr. Book lookup**.
- 4 Select a recipient and select **Send**.

 *If you send a message to a group, you will be charged for each member. See **Groups** on page 41.*

### ***To copy and paste text in a message***

- 1 When you write the message, select **Options > Copy & paste.**
- 2 Select **Copy all** or **Mark & copy.** Scroll to and mark text in the message.
- 3 Select **Options > Copy & paste > Paste.**

### ***Receiving and saving messages***

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

### ***To save an incoming message on a memory card***

- From standby select **Menu > Messaging > Settings > the Message settings tab > Save to > Memory card.**


### ***To save a message on the SIM card***

- 1 From standby select **Menu > Messaging** and select a folder.
- 2 Scroll to a message and select **Options > Save message.**

### ***To view a message from the inbox***

- 1 From standby select **Menu > Messaging > Inbox.**
- 2 Scroll to the message and select **View.**



### ***To call a number in a message***

- When you view the message, scroll to the phone number and press .

### ***Templates***

If you often use the same phrases and pictures in a message, you can save the message as a template.

### ***To add a message template***

- 1 Select **Menu > Messaging > Templates > New template > Add.**
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Save.**
- 4 Enter a title and select **OK.**

### ***To save a message as a template***

- 1 From standby select **Menu > Messaging > Inbox.**
- 2 Scroll to the message and select **View > Options > Save as template.**

### ***Message options***

You can set some options, such as the Message alert and default storage location, to apply to all messages. You can set other options, such as the Delivery priority and Delivery time, for each message you send.

### *To set options for all messages*

- 1 From standby select **Menu** > **Messaging** > the **Message settings** tab.
- 2 Scroll to an option and choose **Select**.

### *To set options for a specific message*

- 1 When the message is ready and a recipient is selected, select **Options** > **Advanced**.
- 2 Scroll to an option and select **Edit**.

## Voice messages

You can send and receive a sound recording as a voice message.

- ! *The sender and recipient must have a subscription supporting multimedia messaging.*

### *To record and send a voice message*

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Voice message**.
- 2 Record the message and select **Stop** > **Send** > **Addr. Book lookup**.
- 3 Select a recipient and select **Send**.

## Mobile Email

Check your email accounts, such as Yahoo!™ Mail, AT&T Yahoo!™, Windows™ Live Mail, AOL™ and AIM™ quickly and easily.

### Before using Mobile Email

- Verify that your AT&T account supports a data plan.
- Have your email account information ready.

### *To use Mobile Email*

- 1 From standby select **Menu** > **Messaging** > **Mobile Email**.
- 2 Select the provider you want to use. Follow the prompts to enter your username and password.
- 3 Select **Next** to log into your account.

### *To write a new email*

- 1 From your Mobile Email inbox, select **Options** > **Compose New**.
- 2 Fill in each field.
- 3 Press **Send**.

### *To delete an email*

- 1 From your Mobile Email inbox, select an email.
- 2 Select **Options** > **Delete**.

- ! *Menu names may change with different email providers.*

### *To view message options*

- 1 From your Mobile Email inbox, select an email.

- 2 Select **Options** and scroll to an option.

! *Menu names may change with different email providers.*

## Instant Messaging (IM)

Connect and log into the IM server to communicate online with your family and friends. If your subscription supports instant messaging and presence services, you can send and receive messages and see contact status when they are online.

### To choose your IM settings

- 1 From standby select **Menu** > **Messaging** > **IM**.
- 2 Select IM community > **Sign In**.
- 3 Enter your account name and password to configure the account.
- 4 Select **Sign In**.

! *After signing into an IM community, its name replaces IM in the menu.*

### To use IM

- 1 From standby select **Menu** > **Messaging** .
- 2 Select your IM community > **Sign In**.
- 3 Enter your password, if needed.
- 4 Press **Sign In**.

### To add a contact to the list

- 1 From standby select **Menu** > **Messaging**.
- 2 Select your IM community >**Sign In**.
- 3 Enter your password, if needed.
- 4 Press **Sign In**.
- 5 Select the **Buddies** tab > **Options** > **Add buddy**.
- 6 Enter the contact's screen name.

💡 *The tab name varies depending on IM community chosen.*

### To send an IM

- 1 From standby select **Menu** > **Messaging**.
- 2 Select your IM community >**Sign In**.
- 3 Enter your password, if needed.
- 4 Press **Sign In**.
- 5 Select your IM community > the **Buddies** tab.
- 6 Select a buddy > **Send IM**.
- 7 Type your message and select **Send**.

### Status

Show your status to your contacts only or show it to all users on the IM server.

### To set the status

- 1 From standby select **Menu** > **Messaging**.
- 2 Select your IM community > **My status** tab.



- 3 Choose [Available](#) and select [Edit](#).
- 4 Select an option.

### Save password

Prior to logging in, you can store the password for your community to avoid entering it at each sign on.

#### *To save the password*

- 1 From standby select [Menu](#) > [Messaging](#).
- 2 Select your IM community > [Sign In](#).
- 3 Select [Save password:](#).

### Auto Sign in

You can bypass the sign in screen when logging in to your IM community by turning on the phone.

#### *To automatically sign in*

- 1 Verify [Save password:](#) is on.
  - 2 From standby select [Menu](#) > [Messaging](#).
  - 3 Select your IM community > [Sign In](#).
- ! See *Save password on page 49*.

## MEDIA™ Net

### Setting up MEDIA Net

In order to use the Internet, it is best to subscribe to MEDIA Net through AT&T.

#### *To start browsing*

- 1 From standby select [Ⓞ](#).
- 2 Select [Options](#) > [Go to](#).
- 3 Select an option.

#### *To exit the browser*

- When you browse the Internet, select [Options](#) > [Exit browser](#).

### Bookmarks

You can create and edit bookmarks as quick links to your favorite Web pages.

#### *To create a bookmark*

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Add bookmark](#).
- 2 Enter a title and an address. Select [Save](#).


#### *To select a bookmark*

- 1 From standby select [Ⓞ](#).
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Scroll to a bookmark and select [Go to](#).

## History pages



You can view Web pages you have browsed.

### To view history pages

- From standby select  > **Options** > **Go to** > **History**.

## More browser features

### To use pan and zoom on a Web page

- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press **Zoom**.
- 4 To switch back to pan, press .

- ! *To use pan and zoom, you need to turn off Smart-Fit: **Options** > **Advanced** > **Smart-Fit** > **Off**.*

### To make a call when you browse

- Press .

### To save a picture from a Web page

- 1 When you browse the Internet, select **Options** > **Tools** > **Save picture**.
- 2 Select a picture.

### To find text on a Web page


- 1 When you browse the Internet, select **Options** > **Tools** > **Find on page**.

- 2 Enter text and press **Find**.

### To send a link


 
 
 

- 1 When you browse the Internet, select **Options** > **Tools** > **Send link**.
  - 2 Select a transfer method.
- ! *Make sure the receiving device supports the transfer method you select.*

### To change screen orientation in the browser


- 1 From standby select .
- 2 Select **Options** > **Advanced** > **Orientation**.
- 3 Select an option.

## Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

Key	Shortcut
	<b>Bookmarks</b>
 - 	Enter text to <b>Enter address</b> , <b>Search Internet</b> or search in <b>Bookmarks</b>
	<b>Zoom</b>
	<b>Pan &amp; zoom</b> (when <b>Smart-Fit</b> is off)

### **To select Internet keypad shortcuts**

- 1 From standby select .
- 2 Select **Options** > **Advanced** > **Keypad mode** > **Shortcuts**.

## **Internet security and certificates**

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.

### **To view certificates in the phone**

- From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Certificates**.

## **Podcasts**

Podcasts are files, for example, radio programs or video content, that you can download and play.

### **To access audio podcasts**

- From standby select **Menu** > **Entertainment** > **Music** > **Podcasts**.

### **To access video podcasts**

- From standby select **Menu** > **Entertainment** > **Video** > **Podcasts**.

## **GPS**

Your phone has a GPS receiver that uses satellite signals to calculate your location.

### **Using GPS**

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and do not cover the GPS antenna.

- ! *The first time you use the GPS it may take up to 10 minutes before your location is found.*
- ! *GPS service may not be available in all areas.*



## AT&T GPS

You can find GPS applications such as the AT&T Navigator, Where, and Shop GPS Apps here.

### *To access AT&T Navigator*

- From standby select **Menu > AT&T GPS**.

### **Assisted start**

**Assisted start** helps calculate your location more quickly. If not turned off, **Assisted start** will automatically be used to find your location when Assisted GPS (A-GPS) technology is available.

### *To set when to use Assisted start*

- 1 From standby select **Menu > Settings > the Connectivity tab > GPS > Settings > Assisted start**.
- 2 Select an option.

### **Location requests**

External services may ask for your location.

### *To change access for external services*

- 1 From standby select **Menu > Settings > the Connectivity tab > GPS > Settings > Privacy**.
- 2 Select an option.

## Turning off GPS

The GPS receiver turns off automatically when it is not in use. You can also turn the GPS receiver off manually.

- ! *Turning off GPS will prevent some GPS applications from working or from providing your location to others except emergency services.*

### *To turn on or off GPS manually*

- 1 From standby select **Menu > Settings > the Connectivity tab > GPS > Settings**.
- 2 Select **Enable GPS** or **Disable GPS**.

# Synchronizing

You can synchronise in two different ways. You can synchronise your phone using a computer program or you can synchronise using an Internet service.

- 💡 *Use only one of the synchronisation methods at a time with your phone.*

You can synchronize your phone using a computer program.

For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read the *Synchronization* Feature guide.

## Synchronizing using a computer

You can use a USB cable or Bluetooth wireless technology to synchronize phone contacts, appointments, bookmarks, tasks and notes with a computer program such as Microsoft Outlook®.

Before synchronizing, you need to install the *Sony Ericsson PC Suite*.

- 💡 *Sony Ericsson PC Suite software is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

See *Required operating systems* on page 30.

### *To download the latest version of Sony Ericsson PC Suite*

- 1 In your Internet browser, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).
- 2 Select a region and country.
- 3 Select *Software downloads*.
- 4 Select a phone from the list.
- 5 Select *Read more and download* under *PC Suite*.
- 6 Select *Download now* and save the file to your computer.

### *To synchronize using the Sony Ericsson PC Suite*

- 1 **Computer:** Start *Sony Ericsson PC Suite* from *Start/Programs/Sony Ericsson/Sony Ericsson PC Suite*.
- 2 Follow the instructions in the *Sony Ericsson PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found your phone, you can start synchronizing.

- 💡 *For usage details, see the *Sony Ericsson PC Suite Help* section*

once the software has been installed on your computer.

## More features

### Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality
- **Flight mode** – limited functionality

#### *To activate the flight mode menu*

- From standby select **Menu > Settings > the General tab > Flight mode > Continue > Show at startup.**

#### *To select flight mode*

- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode.**

### Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

### ***To set the alarm***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time**: and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

### ***To set the recurring alarm***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent**: and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

### ***To set the alarm signal***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the 🎵 tab.
- 4 Scroll to **Alarm signal**: and select **Edit**.
- 5 Find and select an alarm signal. Select **Save**.

### ***To silence the alarm***

- When the alarm sounds, press any key.
- To repeat the alarm, select **Snooze**.

### ***To turn off the alarm***

- When the alarm sounds, select **Turn off**.

### ***To cancel the alarm***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Turn off**.

### ***The alarm in silent mode***

You can set the alarm not to sound when the phone is in silent mode.

### ***To set an alarm to sound or not in silent mode***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the 🎵 tab.
- 4 Scroll to **Silent mode**: and select **Edit**.
- 5 Select an option.

### ***To set the snooze duration***

- 1 From standby select **Menu** > **Tools & Apps** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Snooze duration**: and select **Edit**.
- 4 Select an option.

## **Calendar**

📅 You can synchronise your calendar with a computer calendar, with a calendar on

the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

- You can synchronize your calendar with a Microsoft® Exchange Server (Microsoft® Outlook®).

## Appointments

You can add new appointments or reuse existing appointments.

### To add an appointment

- 1 From standby select **Menu > Tools & Apps > Organizer > Calendar**.
- 2 Select a date.
- 3 Scroll to **New appointment** and select **Add**.
- 4 Enter the information and confirm each entry.
- 5 Select **Save**.

### To view an appointment

- 1 From standby select **Menu > Tools & Apps > Organizer > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

### To edit an appointment

- 1 From standby select **Menu > Tools & Apps > Organizer > Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

- 4 Select **Options > Edit**.
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save**.

### To set when reminders should sound

- 1 From standby select **Menu > Tools & Apps > Organizer > Calendar**.
  - 2 Select a date.
  - 3 Select **Options > Advanced > Reminders**.
  - 4 Select an option.
- ! A reminders option set in calendar affects a reminders option set in tasks.

## Notes

You can make notes and save them. You can also show a note in standby.

### To add a note

- 1 From standby select **Menu > Tools & Apps > Organizer > Notes**.
- 2 Scroll to **New note** and select **Add**.
- 3 Write a note and select **Save**.

### To show a note in standby

- 1 From standby select **Menu > Tools & Apps > Organizer > Notes**.
- 2 Scroll to a note and select **Options > Show in standby**.



### **To hide a note from standby**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Notes**.
- 2 Scroll to the note shown in standby. This is marked with an icon. Select **Options** > **Hide in standby**.

## **Tasks**

You can add new tasks or reuse existing tasks.

### **To add a task**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Tasks**.
- 2 Select **New task** and select **Add**.
- 3 Select an option.
- 4 Enter details and confirm each entry.

### **To set when reminders should sound**

- 1 From standby select **Menu** > **Entertainment**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

## **Profiles**

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

### **To select a profile**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select a profile.

### **To view and edit a profile**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.

! You cannot rename the **Normal** profile.

## **Time and date**

### **To set the time**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

### **To set the date**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

### **To set the time zone**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **My time zone**.

- 2 Select the time zone you are in.

! If you select a city, *My time zone* also updates the time when daylight saving time changes.

## Theme

You can change the appearance of the screen through items such as colors and wallpaper. You can also create new themes and download them. For more information, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun).

### *To set a theme*

- 1 From standby select **Menu** > **Settings** > the **Display** tab > **Theme**.
- 2 Scroll to a theme and select **Set**.

## Main menu layout

You can change the layout of the icons in the main menu.

### *To change the main menu layout*

- 1 From standby select **Menu** > **Options** > **Main menu layout**.
- 2 Select an option.

## Ringtones

### *To set a ringtone*

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ringtone**.
- 2 Find and select a ringtone.

### *To set the ringtone volume*

- From standby, use the side volume keys to raise or lower the volume.

### *To turn off the ringtone*

- From standby press and hold down **(#00)**.

! *The alarm signal is not affected.*

### *To set the vibrating alert*

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Vibrating alert**.
- 2 Select an option.

## Screen orientation

You can change between landscape and portrait orientation, or select **Auto rotate** to have the orientation change when you rotate the phone.

### *To change screen orientation in Media*

- 1 From standby select **Menu** > **Entertainment** > **Settings** > **Orientation**.

- 2 Select an option.


## Games

Your phone contains preloaded games. You can also download games. Help texts are available for most games.

### *To start a game*

- 1 From standby select [Menu](#) > [Entertainment](#) > [Games](#).
- 2 Select a game.

### *To end a game*

- Press .

## Applications

You can download and run Java applications. You can also view information or set different permissions.

### *To select a Java application*

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Applications](#).
- 2 Select an application.

### *To set permissions for a Java application*

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Applications](#).

- 2 Scroll to an application and select [Options](#) > [Permissions](#).
- 3 Set permissions.

### **Java application screen size**

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

- ! *The screen size of your phone is 240 x 320 pixels.*

### *To set the screen size for a Java application*

- 1 From standby select [Menu](#) > [Tools & Apps](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Screen size](#).
- 3 Select an option.

## Locks

### **SIM card lock**

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK

(Personal Unblocking Key). Your PIN and PUK are supplied by AT&T.

### **To unblock the SIM card**

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

### **To edit the PIN**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM Protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

! *If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN:**, you entered your old PIN incorrectly.*

### **To use the SIM card lock**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM Protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

### **Phone lock**

You can stop unauthorized use of your phone. Change the phone lock code

(0000) to any four-to-eight-digit personal code.

! *It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.*

### **To use the phone lock**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

### **To unlock the phone**

- Enter your code and select **OK**.

### **To change the phone lock code**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > Phone protection > Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

### **Keypad lock**

You can set this lock to avoid accidental dialing. Incoming calls can

be answered without unlocking the keypad.

- ! *Calls to the international emergency number 112 can still be made.*

### **To use the automatic key lock**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Automatic key lock**.
- 2 Select an option.

### **To unlock the keypad manually**

- From standby press any key and select **Unlock** > **OK**.

## **Password Saver**

You can save security codes, for example, for credit cards. You must set a passcode to open the Password Saver.

### **Checksum**

The checksum confirms that you have entered the correct passcode. If the passcode is correct, the correct codes are shown. If the passcode is incorrect, the checksum and the codes shown are also incorrect.

### **To open Password Saver for the first time**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Password Saver**.

- 2 Follow the instructions that appear and select **Continue**.
- 3 Enter a passcode and select **Continue**.
- 4 Confirm the passcode and select **Continue**.
- 5 Enter a checksum and select **Done**.

### **To add a code**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Password Saver**.
- 2 Enter a passcode and select **Continue**.
- 3 Scroll to **New code** and select **Add**.
- 4 Enter a name associated with the code and select **Continue**.
- 5 Enter the code and select **Done**.

### **To change a passcode**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Password Saver**.
- 2 Enter your passcode and select **OK**.
- 3 Select **Options** > **Change passcode**.
- 4 Enter your new passcode and select **OK**.
- 5 Re-enter the new passcode and select **OK**.

### **Forget your passcode?**

If you forget your passcode, you must reset the Password Saver. This means that all entries in the Password Saver are deleted. The next time you enter the Password Saver, you must proceed as if you are opening it for the first time.

See *To open Password Saver for the first time* on page 61.

### IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

#### *To view your IMEI number*

- From standby press **\*#06#**, **#06#**, **0 6**, **#06#**.

## Troubleshooting

Some problems will require you to call AT&T.

For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### Common questions

**I have problems with memory capacity or the phone is working slowly**

Restart your phone every day to free memory or do a [Master reset](#).

#### **Master reset**

If you select [Reset settings](#), the changes that you have made to settings will be deleted.

If you select [Reset device](#), your settings and content, such as contacts, messages, pictures, sounds and downloaded games, will be deleted. You may also lose content that was in the phone at purchase.

#### *To reset the phone*

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Master reset](#).
- 2 Select an option.
- 3 Follow the instructions that appear.

### **I cannot charge the phone or battery capacity is low**

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 8.

### **No battery icon appears when I start charging the phone**

It may take a few minutes before the battery icon appears on the screen.

### **Some menu options appear in gray**

A service is not activated. Contact AT&T.

### **I cannot send messages from my phone**

Most messages require a service center number to send them. The number is supplied by AT&T and is usually saved on the SIM card. If the number to your service center is not saved on your SIM card, you must enter the number yourself. To send most picture messages, you must set an MMS profile and the address of your message server.

To send most multimedia messages, you must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you may be able to obtain the settings automatically from AT&T or [atwww.sonyericsson.com/support](http://atwww.sonyericsson.com/support).

### **To enter a service center number**

- 1 From standby select **Menu > Settings > the Connectivity tab > Message settings > Text Message** and scroll to **Service center**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New Service Center** and select **Add**.
- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

### **To select an MMS profile**

- 1 From standby select **Menu > Settings > the Connectivity tab > Message settings > Multimedia Msg**.
- 2 Select an existing profile or create a new one.

### **To set the message server address**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Message settings** > **Multimedia Msg.**
- 2 Scroll to a profile and select **Options** > **Edit**.
- 3 Scroll to **Message server** and select **Edit**.
- 4 Enter the address and select **OK** > **Save**.

### **The phone does not ring or rings too softly**

Make sure that **Silent mode** has not been set to **On**. See *To turn off the ringtone* on page 58.

Check the ringtone volume. See *To set the ringtone volume* on page 58.

Check the profile. See *To select a profile* on page 57.

Check the forward call options. See *To forward calls* on page 43.

### **The phone cannot be detected by other devices using Bluetooth wireless technology**

You have not turned the Bluetooth function on. Make sure that the visibility is set to show phone. See *To turn on the Bluetooth function* on page 33.

### **I cannot synchronize or transfer content between my phone and my computer, when using a USB cable.**

The cable or software has not been properly installed. Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Feature guides which contain detailed installation instructions and troubleshooting sections.

### **I have forgotten my Password Saver passcode**

If you forget your passcode, you must reset the Password Saver. This means that all entries in the Password Saver are deleted. The next time you enter the Password Saver, you must proceed as if you are opening it for the first time.

### **To reset Password Saver**

- 1 From standby select **Menu** > **Tools & Apps** > **Organizer** > **Password Saver**.
- 2 Enter an incorrect passcode 3 times.
- 3 **Reset Password Saver and delete all items?** appears.
- 4 Select **Yes**.

### **I did not download some of the titles in my music player. Where did they come from?**

Some content is preloaded into your phone before purchase and may not



display all of the artist information. For example, some of ringtones that are preloaded in *My Stuff > Music* do not contain any artist information.

**Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?**



## Error messages

### Insert SIM

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 6.

The SIM card connectors need cleaning. If the card is damaged, contact AT&T.

### Insert correct SIM card

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

### Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select *Yes*. See *To insert the SIM card* on page 6.

### PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 59.

### Codes do not match

Codes that you have entered do not match. When you want to change a security code, for example your PIN, you have to confirm the new code. See *SIM card lock* on page 59.

### No net. coverage

Your phone is in flight mode. See *Flight mode* on page 54.

Your phone is not receiving any network signal, or the received signal is too weak. Contact AT&T and make

sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

### **Emergency calls only**

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 37.

### **PUK blocked. Contact provider.**

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

# Index

## A

activity menu .....	14
Address Book .....	38
alarms .....	54
answering service .....	42
applications .....	59
appointments .....	56
assembly .....	6
AT&T GPS .....	52
AT&T Video Share .....	38
audio book .....	18
auto rotate .....	58

## B

backing up and restoring .....	34
battery	
charging .....	8
inserting .....	6
BestPic™ .....	23
Bluetooth™ wireless technology .....	33
bookmarks .....	49
business card .....	41

## C

calendar .....	55
call forward .....	43
call list .....	38
call numbers in message .....	46
caller-specific ringtones .....	39

## calls

accepting .....	44
answering and rejecting .....	37
emergency .....	37
handling two calls .....	44
international .....	36
making and receiving .....	36
putting on hold .....	43
recording .....	20
camera .....	21
overview .....	21
printing .....	27
settings .....	24
conference calls .....	44
contacts	
adding phone contacts .....	39
default contacts .....	39
groups of .....	41
costs .....	7

## D

date .....	57
------------	----

## E

emergency numbers .....	37
entering text .....	16

## F

face detection .....	23
flight mode .....	54

FM radio .....	19	phone .....	60
		SIM card .....	59
<b>G</b>		<b>M</b>	
games .....	59	master reset .....	62
GPS .....	51	media transfer .....	30
groups .....	41	MEdia™ Net .....	49
		memory .....	15
<b>H</b>		memory card .....	15
handsfree .....	17, 42	memory status .....	41
Bluetooth™ wireless technology .	34	menu overview .....	11
help .....	7	messages	
hiding number .....	45	text and picture .....	45
		voice .....	47
<b>I</b>		messaging	
IM .....	48	instant .....	48
imaging .....	21	microphone .....	37
IMEI number .....	62	<i>MMS See multimedia messages</i>	
instant messaging .....	48	Mobile Email .....	47
Internet		multimedia messages .....	45
bookmarks .....	49	music player .....	17
screen orientation .....	50	MusicDJ™ .....	20
security and certificates .....	51	MusicID™ .....	19
		My Stuff .....	28
<b>K</b>		<b>N</b>	
keypad lock .....	60	navigating menus .....	13
keys .....	9	notes .....	56
		<b>P</b>	
<b>L</b>		pan and zoom, Web pages .....	50
language .....	16	password saver .....	61, 64
location services .....	51		
lock			
keypad .....	60		

PC Suite .....	53	inserting .....	6
phone memory .....	15	lock and unblock .....	59
phone mode .....	53	SMS See <i>text messages</i>	
phone name .....	33	SOS See <i>emergency numbers</i>	
phone, turning on .....	6	sound recorder .....	20
photo fix .....	23	speed dialing .....	42
PhotoDJ™ .....	26	standby .....	7
photos .....	25	notes .....	56
editing .....	26	synchronizing .....	53
improving .....	23		
tags .....	25	<b>T</b>	
pictures .....	25	T9™ Text Input .....	16
PIN .....	7, 60	tagging photos .....	25
playlists .....	18	tasks .....	57
podcasts .....	51	templates .....	46
power saving .....	34	theme .....	58
profiles .....	57	time .....	57
PUK .....	59	time zone .....	57
		TrackID™ .....	19
<b>R</b>		transfer method	
recording, listen to .....	20	Bluetooth™ wireless technology .	33
ringtones .....	58	USB cable .....	31
roaming .....	7	transferring	
		sound .....	34
<b>S</b>		turning on/off	
screen orientation .....	50, 58	Bluetooth™ function .....	33
search, on Web pages .....	50	phone lock .....	60
selection keys .....	13	SIM lock protection .....	60
shortcuts .....	14		
SIM card		<b>U</b>	
copying to/from .....	40	USB cable .....	31

## **V**

video editing .....	26
video player .....	19
video recorder .....	21
Video Share .....	38
VideoDJ™ .....	26
voice control .....	42
voice messages .....	47
voicemail .....	42
volume	
ear speaker .....	37

## **W**

Web pages, history .....	50
--------------------------	----

## **Z**

zoom .....	22
------------	----