

## Program popular audio device

If your Audio Device manufacturer is **NOT** shown, use the Remote Control User Guide to program your Audio Device.

Ensure the Audio Device to be programmed is powered on and you can hear sound from it.

**NOTE:** Once you program your audio device, the remote control volume function will control the audio device volume only. To adjust your TV volume, you will have to use the remote control that came with your TV.

Digit	Audio Device Manufacturer
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

### STEP 1:

Find your **AUDIO BRAND** in the chart above – Note which number relates to your manufacturer.

### STEP 2:

Enter **Program Mode** – Press and hold the **OK** and **MENU** keys simultaneously **for three seconds** until all four mode keys flash red twice and you hear two short beeps to confirm you are in program mode.

### STEP 3:

Press **AUX mode key** – The **AUX** mode key will light up red and stay lit.

### STEP 4:

Press the key for your brand – While pointing the remote at your audio device, press and hold down the number key for your brand. Let go of the key as soon as the audio device sound mutes.

### STEP 5:

Confirm your code – Press the **MUTE** key on the remote control to unmute the audio device. Then use the **VOLUME UP/DOWN** keys to verify that the remote is controlling your audio device volume. If it does not work properly, go back to step 2 and try again.

**NOTE:** Follow your audio device manufacturer instructions on how to set the TV volume when operating your audio device. You may need to turn down/off the volume on the TV.



## Quick Start Guide

### AT&T U-verse TV Remote Control



## Let's get started

Try our quick and easy programming guide first!

### Program popular TV

If your TV manufacturer is **NOT** shown, use the Remote Control User Guide to program your TV.

Before you get started, please be sure to remove the protective battery strip and ensure the TV to be programmed is powered on.

Digit	TV Manufacturer
1	LG
2	Panasonic
3	Philips, Magnavox
4	RCA
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Toshiba
0	VIZIO

#### STEP 1:

Find your TV BRAND in the chart above – Note which number relates to your manufacturer.

#### STEP 2:

Enter program mode – Press and hold the **OK** and **MENU** keys simultaneously **for three seconds** until all four mode keys flash red twice and you hear two short beeps to confirm you are in program mode.

#### STEP 3:

Press the **TV mode key to program TV code** – The **TV mode key** will light up red and stay lit.

#### STEP 4:

Press the key for your brand – While pointing the remote at your TV, press and hold down the number key for your brand. Let go of the key as soon as the TV turns off.

#### STEP 5:

Confirm your code – Press the **POWER** key on the remote control to turn your TV back on. Use the **volume up/down** keys to verify that the remote control is controlling your TV's volume. If this does not work properly, go back to step 2 and try again.

**NOTE:** Refer to the Remote Control User Guide for help with advanced features.

