

Easy Find remote control setup instructions

Program using the Learn Code function

If the code for your device is not found in the code list and the search feature was not able to find the code for your device, then the learning feature may be your best option.

The learning feature lets you "learn" functions from your original remote control.

Important Note

Learning cannot be performed for any mode until after that mode is set up with a valid code. So, to learn the keys, first set up the mode with a valid code, Select any code for the appropriate mode, from [the code list](#). (If link does not work, copy and paste this URL into your browser: http://www.att.com/support_media/images/pdf/uverse/set-up-code-list.pdf) then follow these steps:

1. **Press and hold** the mode key (TV, DVD, or AUX) on the U-verse remote and while holding it pressed, **press** the **LEARN** key for one second then **release both keys**.
2. All of the mode keys will flash and then the selected mode key light remains on.
3. On your U-verse remote, **press** and **release** the key that you want to teach.
4. While pointing your original remote at the bottom of your AT&T U-verse TV Easy Find Remote Control, approximately 1 inch apart, **press** and **hold** the original remote key until the mode key light blinks once and stays on. (If there is a learning problem, the mode key light blinks for three seconds and stays on. If this happens, repeat steps 3 and 4 above.)
5. Repeat steps 3 and 4 above for each key you want your AT&T U-verse TV Easy Find Remote Control to learn. **Press** and **release** the **LEARN** key when all desired remote commands have been learned. If you have encountered difficulties with the LEARN key setup, please refer to Section M: Troubleshooting Learning.

Important Note

It is not necessary to have your AT&T U-verse TV Easy Find Remote Control learn every key from your original remote since most of the keys will not be used under normal daily use. The best practice is to teach only the keys that help you navigate for the best experience, like your volume up and down, channel up and down, and DVR functions.

Program by manually entering the manufacturer code

You can set up your U-verse remote control to operate equipment (home theater system, DVD player) that is connected to your TV. Use the following steps to set up the TV, DVD, or AUX mode keys:

1. Turn on the equipment you want to program and locate the **4-digit code** from the [setup code list \(PDF\)](http://www.att.com/support_media/images/pdf/uverse/set-up-code-list.pdf). (If link does not work, copy and paste this URL into your browser: http://www.att.com/support_media/images/pdf/uverse/set-up-code-list.pdf)
2. **Press and hold** the mode button (TV, DVD, or AUX) and **while holding it**, press the **OK** button for **one second**.
3. **Release** both buttons. All of the mode buttons will flash and the selected mode button light will stay lit.
4. **Enter** the **4-digit code** by pressing the numerical buttons (0-9). The selected mode button light will blink for each digit entry and will remain off after the entry of the fourth digit - indicating a successful setup.

For more advanced programming instructions, you may access the complete [Easy Find Remote Control user guide \(PDF\)](http://www.att.com/support_media/images/pdf/uverse/easy-find-series-a10-remote-control-user-guide.pdf) (If link does not work, copy and paste this URL into your browser: http://www.att.com/support_media/images/pdf/uverse/easy-find-series-a10-remote-control-user-guide.pdf)

Can't find your equipment code?

The U-verse remote control can be programmed to work with **most** TV equipment. You'll first need to find the 4-digit programming code for your TV, DVD, or auxiliary equipment in the as seen above. If you cannot find your equipment and code on the list, you may be unable to program the U-verse remote, and will need to use the remote control that originally came with your equipment.