

NETGEAR®

User Manual

AirCard 797S Mobile Hotspot

September 2020
202-11925-02

NETGEAR, Inc.
350 E. Plumeria Drive
San Jose, CA 95134, USA

Support

To manage your AT&T account, visit <http://www.att.com/HowTo> or visit <http://attwifimanager> and click the three dot icon in the upper right corner. Or call 611 from any AT&T wireless phone, or 800.331.0500, and when prompted, enter your device's 10-digit number. (To get the number, visit <http://attwifimanager> and click the **Dashboard** button.)

See your warranty card for warranty and service information. For additional information, visit <http://www.netgear.com/support> to access the full user manual (this document) and to download firmware updates.

Trademarks

©NETGEAR, Inc. NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Compliance

For regulatory compliance information, visit <http://www.netgear.com/about/regulatory>. See the regulatory compliance document before connecting the power supply.

Contents

Chapter 1 Get Started

- Set Up Your Mobile Hotspot.....8
- Meet Your Mobile Hotspot.....8
 - Control Your Device Using the Power Button.....9
 - Sleep Mode.....10
 - Status LED.....10
- Connect to the Internet.....10
- Recharge the Battery.....11
- Replace a SIM Card.....12
- Home Screen.....13
- Connect to the Mobile Hotspot With Tethering.....14
- Use the USB Micro Cable to Charge Only.....15
- Security Credentials.....15
- NETGEAR Mobile App for Smartphones and Tablets.....16
- Customize the Mobile Hotspot Settings.....16

Chapter 2 Use Your Mobile Hotspot

- View New Messages From the Mobile Hotspot.....19
- View Messages From the Mobile Hotspot Web Page.....19
- Delete a Message From the Mobile Hotspot Web Page.....20
- View Alerts From the Mobile Hotspot Web Page.....20
- Manage Your Broadband Network Connection.....21
 - View Mobile Broadband Network Status From the Mobile Hotspot Web Page.....22
 - Turn Domestic Data On and Off From the Mobile Hotspot Web Page.....22
 - Turn International Roaming On and Off From the Mobile Hotspot Web Page.....23
 - View or Manage Network Mode from the Mobile Hotspot Web Page.....23
- Connect to Wi-Fi.....24
 - Connect Using the Wi-Fi Password.....25
 - Add a WPS-Enabled Wi-Fi Device From the Mobile Hotspot Web Page.....25
- Manage Wi-Fi.....27
 - Turn On 5 GHz Wi-Fi From the Mobile Hotspot Web Page.....27

AirCard 7975 Mobile Hotspot

Turn On Dual-Band Wi-Fi From the Mobile Hotspot Web Page.....	28
Change Wi-Fi Settings From the Mobile Hotspot Web Page.....	29
Turn Guest Wi-Fi On and Off From the Mobile Hotspot Web Page.....	31
Manage Wi-Fi Security.....	34
Change Wi-Fi Network Name and Password From the Mobile Hotspot Web Page.....	34
Change Wi-Fi Encryption Settings.....	36

Chapter 3 Manage Security

Change the Mobile Hotspot Web Page Login Settings.....	39
Content Filter Levels.....	40
Set Up Content Filtering.....	40
Block Access to Websites.....	41
Allow Access to Websites.....	42
View, Block, or Unblock Connected Devices.....	43
View Connected Devices From the Mobile Hotspot Web Page.....	43
Unblock a Device From the Mobile Hotspot Web Page.....	44
View a List of Blocked Devices From the Mobile Hotspot Web Page.....	45
Activate SIM Security.....	45
Enable Port Forwarding.....	46
Enable Port Filtering.....	47

Chapter 4 Maintain Your Mobile Hotspot

Extend Battery Life.....	50
Adjust Wi-Fi Settings to Optimize Battery Life.....	50
Adjust Display Settings to Increase Battery Life.....	51
Turn Off USB Tethering.....	51
Turn Off USB Tethering From a Web Browser.....	52
Turn Off USB Tethering From the NETGEAR Mobile App.....	52
View Details About Your Mobile Hotspot.....	53
Back Up and Restore Mobile Hotspot Settings.....	54
Back Up Mobile Hotspot Settings Using the Web Page.....	55
Restore Mobile Hotspot Settings Using the Web Page.....	55
Restore Mobile Hotspot Settings Using the LCD Display.....	56
Configure Mobile Broadband.....	57
Enable IP Pass-Through Mode.....	57
Enable VPN Pass-Through.....	58
Configure APN Details.....	59
Add an APN for Another Network.....	60
Select an APN to Use.....	61

Remove an APN Entry.....	62
Enable DMZ.....	62
Set LAN Options.....	64
Update Mobile Hotspot Software and Firmware.....	66
Update in Response to an Alert.....	66
Update Software Downloaded Over the Air From the Mobile Hotspot Web Page.....	66
Enable or Disable Factory Reset.....	68

Chapter 5 Frequently Asked Questions

Questions About Connecting and Disconnecting Devices and Accessing the Internet.....	71
What do I do if I can't connect a device to the mobile hotspot?.....	71
What do I do if I can't access the Internet?.....	71
How do I disconnect from the mobile broadband network?....	72
How do I find out how many devices are connected to my mobile hotspot's Wi-Fi networks?.....	72
What do I do if the No Signal icon displays?.....	72
Why can't my device access the mobile hotspot web page when connected to a VPN?.....	72
Why can't my mobile hotspot connect to a computer running Windows Vista?.....	72
What do I do if my mobile hotspot doesn't connect to my service provider's network?.....	73
Questions About the Mobile Hotspot Web Page.....	74
How do I go back to the mobile hotspot web page?.....	74
What do I do if I forget my admin login password?.....	74
General Questions.....	74
Why isn't my battery charging?.....	74
Why is the Signal Strength indicator always low?.....	75
Why is the download or upload speed slow?.....	75
The LCD screen is not lit. How do I know if the mobile hotspot is still powered on?.....	75
How do I find my computer's IP address?.....	75
Find the IP address on a Windows 7, Windows Vista, or Windows XP device.....	75
Find the IP address on a Windows 8 device.....	76
Find the IP address on a Mac OS X device.....	76
Find the IP address on devices running other operating systems.....	76
How do I find a device's MAC address?.....	76
Find the MAC address on a Windows 7, Vista , or XP device.....	77

AirCard 797S Mobile Hotspot

Find the MAC address on a Windows 8 device or newer....	77
Find the MAC address on a Mac OS X device.....	77
What do I do if the Wi-Fi network name doesn't appear in the list of networks?.....	78

Chapter 6 Troubleshooting

View Alerts.....	80
SIM Not Installed.....	80
SIM Error – Check SIM.....	80
Temperature-Related Alerts.....	80
Connection Alerts.....	80
Reset the Mobile Hotspot.....	82
Reset the Mobile Hotspot From the Mobile Hotspot.....	82
Reset the Mobile Hotspot From the Mobile Hotspot Web Page.....	83

Appendix A Specifications

Battery Specifications.....	86
Display Specifications.....	87
Environmental Specifications.....	88
Mechanical Specifications.....	88
Mobile Band Specifications.....	88
Package Contents.....	89
Port Specifications.....	89
Security Specifications.....	89
Wi-Fi Specifications.....	90

1

Get Started

This product regularly checks for new firmware and downloads any appropriate updates, or you can check for and download new firmware manually. If the features or behavior of your product does not match what is described in this manual, you might need to update your firmware.


This chapter provides an overview of mobile hotspot features, and instructions for how to set up your mobile hotspot and connect to the Internet. The chapter covers the following topics:

- [Set Up Your Mobile Hotspot](#)
- [Meet Your Mobile Hotspot](#)
- [Connect to the Internet](#)
- [Recharge the Battery](#)
- [Replace a SIM Card](#)
- [Home Screen](#)
- [Connect to the Mobile Hotspot With Tethering](#)
- [Use the USB Micro Cable to Charge Only](#)
- [Security Credentials](#)
- [NETGEAR Mobile App for Smartphones and Tablets](#)
- [Customize the Mobile Hotspot Settings](#)

Set Up Your Mobile Hotspot

To set up your mobile hotspot:

1. Insert the battery.

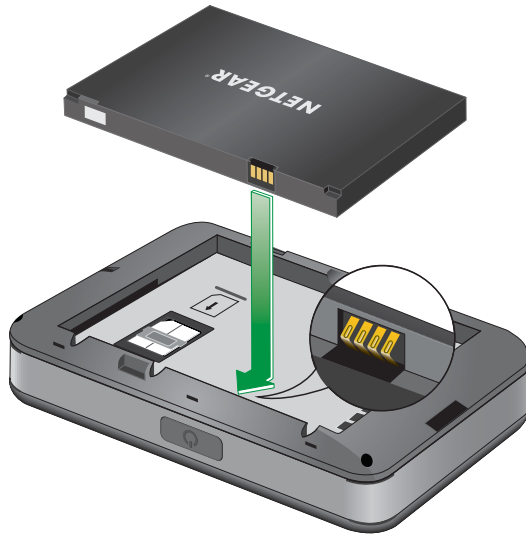

2. Install the back cover.
3. Firmly close the back cover.
4. Press the **Power** button to power on the mobile hotspot.



Meet Your Mobile Hotspot

Before you connect your mobile hotspot, familiarize yourself with its LCD screen, icons, buttons, and connectors.

AirCard 7975 Mobile Hotspot

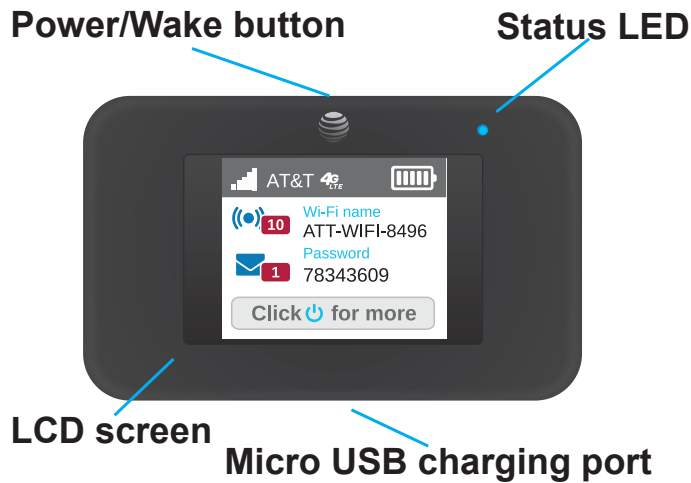


Figure 1. Mobile hotspot buttons and connectors

The mobile hotspot comes with a micro USB charging cable.

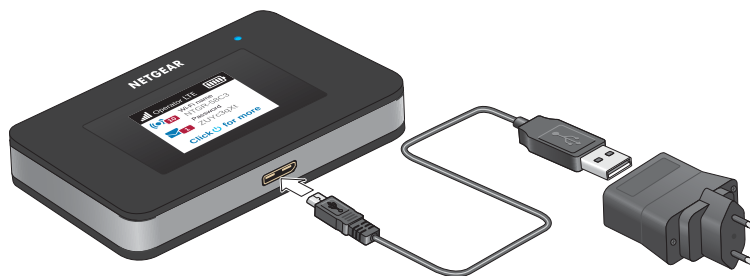


Figure 2. Mobile Hotspot Charging Cable

Control Your Device Using the Power Button

The Power button is used to turn the NETGEAR Mobile Hotspot on or off and to choose which information screen to display on the LCD:

- Turn mobile hotspot on. Press and hold the **Power** button for 3-4 seconds
- Turn mobile hotspot off. Press and hold the **Power** button for 3-4 seconds
- Wake up Wi-Fi signal and device screen. Press and release the **Power** button.

- Cycle through screens. Press and release the **Power** button.
- If the factory reset via the Power button feature is enabled, perform a factory reset. Press and hold the **Power** button for 3-4 seconds until the the shut down screen displays and continue pressing and holding the **Power** button until the Factory Reset screen displays. Follow the onscreen instructions to complete the factory reset.

Sleep Mode

Your device automatically enters sleep mode to save power when no Wi-Fi client connects for more than five minutes.

In sleep mode, Wireless Radio is disabled.

Press the **Power** button to turn the display on and exit sleep mode.

Wireless Radio is enabled and Wi-Fi devices can reconnect to the hotspot.

The time required to recover the network connection varies by environment, settings, etc.

Status LED

The status LED indicates data connection status:


- **Blue, slow blink.** The mobile hotspot is ready.
- **Blue, double-blink.** The mobile hotspot is transferring data.
- **Amber, slow blink.** The mobile hotspot is not connected to the network or is in standby mode.

Connect to the Internet

When you turn on your mobile hotspot, it automatically connects to the network in your area. Connect your device to the mobile hotspot Wi-Fi network to access the Internet.

To connect to the Internet:

1. Press and release the **Power** button to turn on the mobile hotspot.

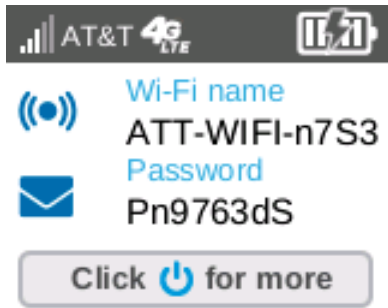

2. On your laptop or Wi-Fi device, open your Wi-Fi network connection manager.
3. Connect your device to the hotspot with the Wi-Fi name and password.


Note: Your Wi-Fi network name is different from this example.

Recharge the Battery

Your battery comes partially charged.

To recharge your battery:

1. Connect the micro USB charging cable to your mobile hotspot.

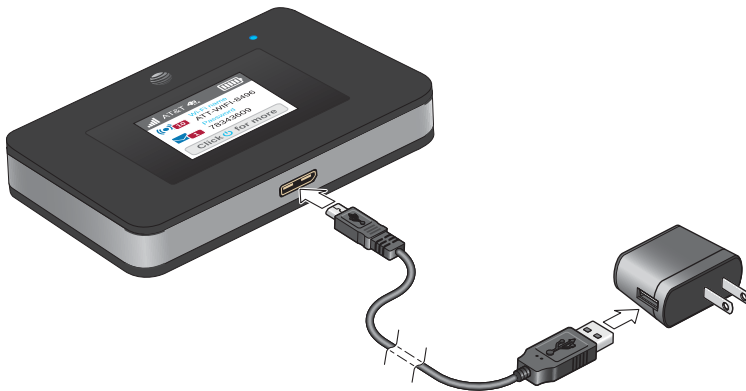


2. Connect the other end of the cable to the USB port on your computer or to the USB charger.


Replace a SIM Card

To replace a SIM card:


1. Remove the back cover by lifting the corners.
2. Remove the battery.
3. Slide out the SIM card.

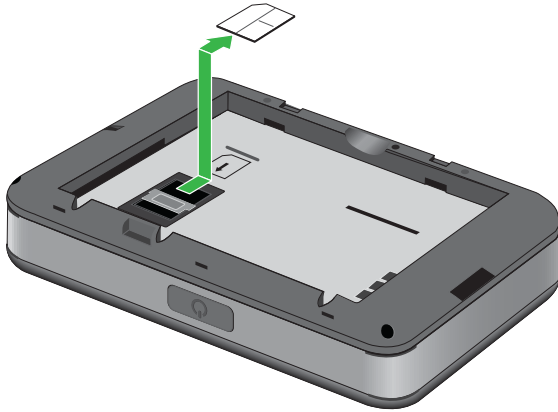

4. Insert the replacement SIM card.

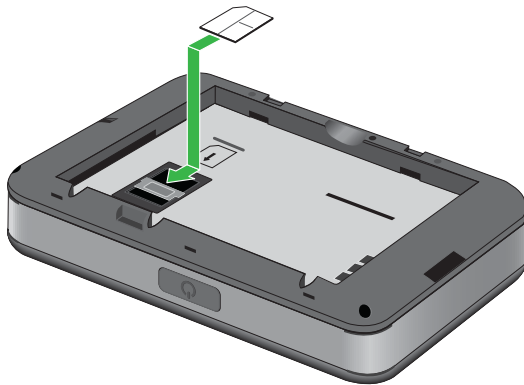

5. Insert the battery.

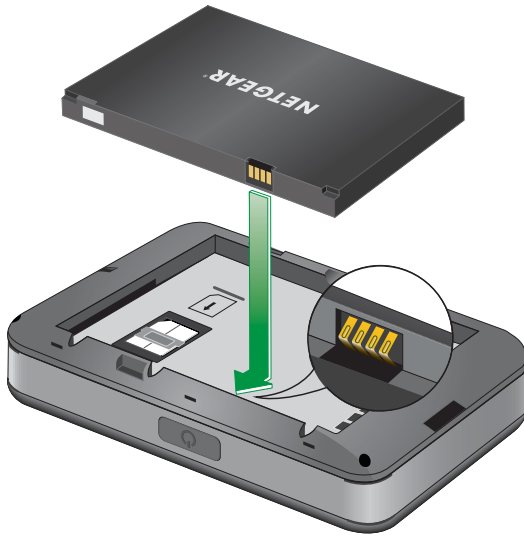

6. Install the back cover.

Home Screen

You can use the home screen icons to view the mobile hotspot's status, configure Wi-Fi settings, view data usage details, and view system alerts.

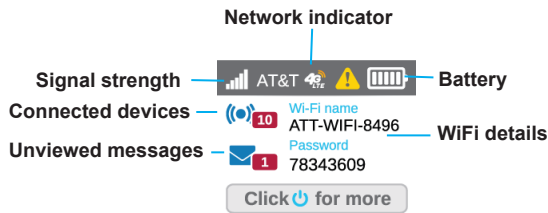


Figure 3. LCD screen display

Table 1. Icons







Icons	Description
	This indicates the strength of the mobile broadband network signal.

Table 1. Icons (Continued)

	Your 4G LTE wireless device displays one of the following network indicators to let you know which wireless network you are connected to. <ul style="list-style-type: none">• Connected to AT&T's 4G LTE network.• Connected to AT&T's HSPA+ network.
	
	This indicates the battery is charging.
	This indicates the battery is fully charged.
	This indicates there are unread alerts.

Connect to the Mobile Hotspot With Tethering

You can connect a computer to the mobile hotspot using the micro USB cable instead of connecting with Wi-Fi. This kind of cable connection is called tethering.

Note: The tethering feature is not available on the model AC797ABS-1A1NAS, but you can use your computer to access the mobile hotspot web page.

Note: The first time you use the micro USB cable to connect to the mobile hotspot your computer's operating system detects the new device.

To install drivers on computers running Windows:

1. Ensure that the mobile hotspot is powered off.
2. Connect the mobile hotspot to your computer using the USB cable.



If powered off, the mobile hotspot automatically powers on.

Note: Make sure that your computer has access to Internet when you first use the tethering feature because your computer might need to access the Internet in order to download the required software driver.

After the driver is installed, you can visit the mobile hotspot web page to customize your mobile hotspot's advanced settings. This is an optional step.

Use the USB Micro Cable to Charge Only

You can log in to the mobile hotspot and specify a setting so that the micro USB cable is used only for charging and not to access the mobile hotspot using a web browser. You might want to do this if a wall socket is not available to charge the mobile hotspot.

To specify a Micro USB cable charge-only setting:

1. From a computer that is connected to your network, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**
A login window opens.
3. Enter the mobile hotspot user name and password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The mobile hotspot dashboard displays.
4. Select **Settings > Router**.
The Router Setup page displays.
5. Scroll down to the DMZ section of the page.
6. In the Use USB for drop-down menu, select **Charge only**.
Your settings are saved. When you connect the USB micro cable, the mobile hotspot battery charges, but you cannot use the tethered connection to access the mobile hotspot with a web browser.

Security Credentials

Two passwords are associated with the mobile hotspot:

- **Wi-Fi password.** Use this to connect your computer or Wi-Fi device to your mobile hotspot network. This character string is unique to your device. It displays on the main mobile hotspot screen. If the screen is blank (a power-saving feature), press

and quickly release the Power button. The default Wi-Fi password is also printed on a label under the battery.

For information about changing Wi-Fi passwords, see [Change Wi-Fi Encryption Settings](#) on page 36.

- **Guest Wi-Fi password.** When the guest Wi-Fi network is enabled, guests can use this password to access the network.
- **Admin login password.** Use this to log in to the mobile hotspot web page as an administrator. You must log in as an administrator to use certain features and to make changes to your mobile hotspot settings. The default login password is printed on the product label underneath the battery. The password is case-sensitive. The admin login password can be 5-31 characters.

NETGEAR Mobile App for Smartphones and Tablets

Download and use the complimentary NETGEAR Mobile app to view your connection, settings, and data usage from your smartphone or tablet. Search the app store for NETGEAR Mobile.



To manage all mobile hotspot settings, visit the mobile hotspot web page at **<http://attwifimanager/>** or **<http://192.168.1.1>**.

Customize the Mobile Hotspot Settings

You can personalize the mobile hotspot and change its settings on the web page.

To log in to your mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **<http://attwifimanager/>** or **<http://192.168.1.1>**.
The mobile hotspot web page displays.

3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.

2

Use Your Mobile Hotspot

This chapter explains how to use your mobile hotspot. The chapter covers the following topics:


- [View New Messages From the Mobile Hotspot](#)
- [View Messages From the Mobile Hotspot Web Page](#)
- [Delete a Message From the Mobile Hotspot Web Page](#)
- [View Alerts From the Mobile Hotspot Web Page](#)
- [Manage Your Broadband Network Connection](#)
- [Connect to Wi-Fi](#)
- [Manage Wi-Fi](#)
- [Change Wi-Fi Settings From the Mobile Hotspot Web Page](#)
- [Turn Guest Wi-Fi On and Off From the Mobile Hotspot Web Page](#)
- [Manage Wi-Fi Security](#)

View New Messages From the Mobile Hotspot

You can tell from your mobile hotspot display if you have unviewed messages, and you can view them directly from there.

This hotspot display indicates you have an unread message.

Note: Although you can view messages directly on the mobile hotspot, use the mobile hotspot's web page to delete them.

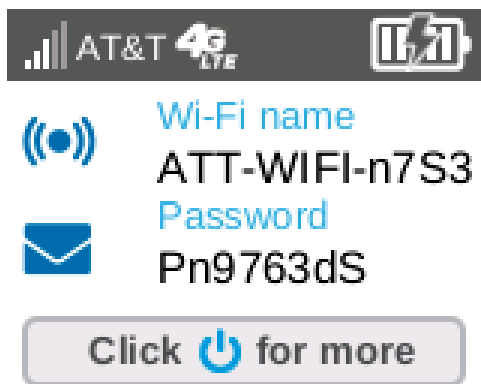

To view messages from the mobile hotspot display:

1. Press the **Power** button to wake the mobile hotspot.
2. Continue to press and release the **Power** button until the new message displays on the screen.
3. If the message length spans more than one page, press and release the Power button to continue viewing the message.
4. Select the message to read the full text.

View Messages From the Mobile Hotspot Web Page

To view messages from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.

3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Messages**.
A list of messages displays, showing the first portion of the text.
5. Click a message to read the full text.

Delete a Message From the Mobile Hotspot Web Page

To delete a message from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Messages**.
A list of messages displays, showing the first portion of the text.
5. Select the message and click the **Delete** button.
The message is deleted.


View Alerts From the Mobile Hotspot Web Page

Your mobile hotspot displays alerts to advise you of device status changes. When there are outstanding alerts, the alerts displays on the screen. Alerts remain as long as the

issues that cause them are active. When the issues are resolved, the alerts are removed automatically.

To view alerts from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.

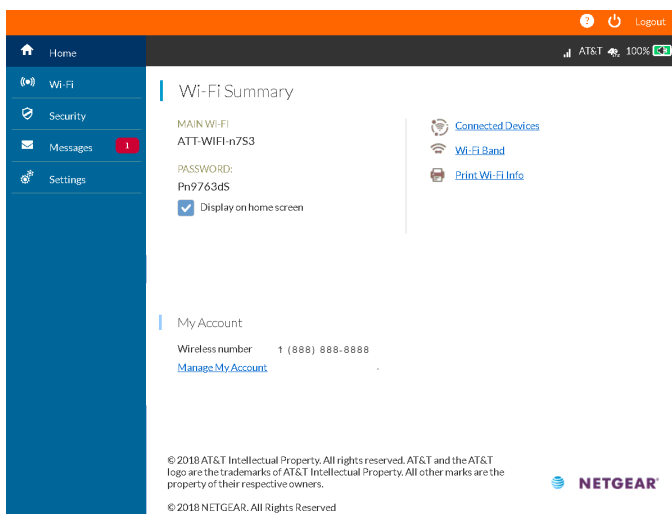

Follow the instructions in each alert to address the conditions that caused it to display.

Manage Your Broadband Network Connection

You can view the mobile broadband network status, turn domestic data on and off, and turn international roaming on and off.

View Mobile Broadband Network Status From the Mobile Hotspot Web Page

To view network status from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > About**.
The About page displays.
5. View the Network Status section.

Turn Domestic Data On and Off From the Mobile Hotspot Web Page

To turn domestic data on and off from the mobile hotspot:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > Preferences**.
The preferences page displays.
5. Click the **Domestic Data** button.
The Save and Cancel buttons display at the bottom of the page.
6. Click the **Save** button.
Your settings are saved.

Turn International Roaming On and Off From the Mobile Hotspot Web Page

Before you turn on international roaming, make sure that you are aware of any extra charges for data that you might incur.

To turn international roaming on and off:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > Preferences**.
The preferences page displays.
5. Click the **International Roaming** button.
The Save and Cancel buttons display at the bottom of the page.
6. Click the **Save** button.
Your settings are saved.

View or Manage Network Mode from the Mobile Hotspot Web Page


You can view or manage Network Mode and network selection mode. Also, you can scan for AT&T MicroCells on your network.

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.

The home page displays.

4. Select **Settings > Mobile Broadband > Preferences**.

The preferences page displays.

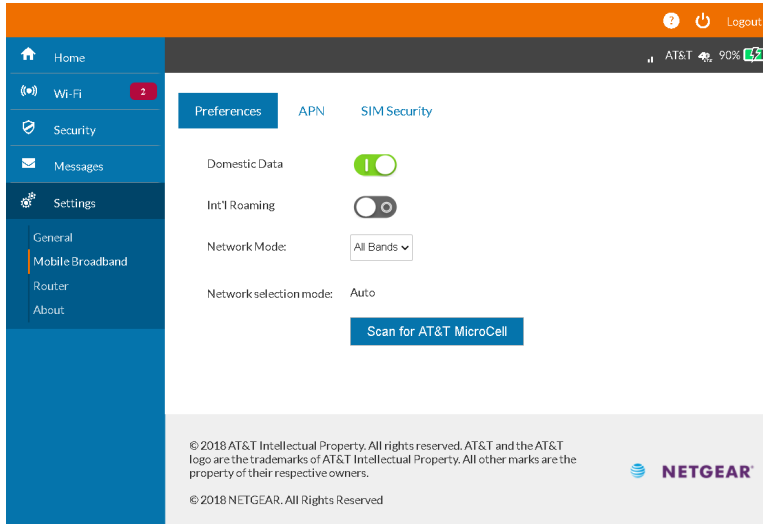

5. In the **Network Mode** menu, select a network mode.
 - **All Bands**. Use all bands. This is the default setting.
 - **LTE Only**. Use LTE only.
 - **4G Only**. Use 4G only.
6. View the network selection mode.

The default value is Auto. Other possible values are **LTE Only** and **4G Only**.
7. To initiate a scan for AT&T microcell, select the **Scan for AT&T MicroCell** button.

The device scans the network for AT&T MicroCells.
8. To save any changes to the Network Mode setting, click the **Save** button.

Your settings are saved.

Connect to Wi-Fi

You can connect up to 15 Wi-Fi devices (such as smartphones, laptops, tablets, digital cameras, printers, gaming consoles, and digital picture frames) to your mobile hotspot network. For information about setting connections for 2.4GHz Wi-Fi and 5GHz Wi-Fi networks, see [Manage Your Broadband Network Connection](#) on page 21.

You can add a Wi-Fi device to your Wi-Fi network manually. If the device that you are adding is WPS enabled, you can use the WPS method to connect the device without using the Wi-Fi password.

Connect Using the Wi-Fi Password

To connect using the Wi-Fi password:

1. On the Wi-Fi device, view the list of available Wi-Fi networks.
2. Connect to the network that corresponds to your mobile hotspot network as displayed on the LCD screen.
3. When prompted, enter the Wi-Fi password for your mobile hotspot network.
The Wi-Fi password displays on the mobile hotspot LCD screen. If the screen is turned off, press and quickly release the **Power** button to wake the mobile hotspot.


Add a WPS-Enabled Wi-Fi Device From the Mobile Hotspot Web Page

You can add a WPS-enabled Wi-Fi device to your Wi-Fi network without a Wi-Fi password, using the mobile hotspot or the mobile hotspot web page.


To add a WPS-enabled Wi-Fi device from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The home page displays.

4. Select **Wi-Fi > Connect**.

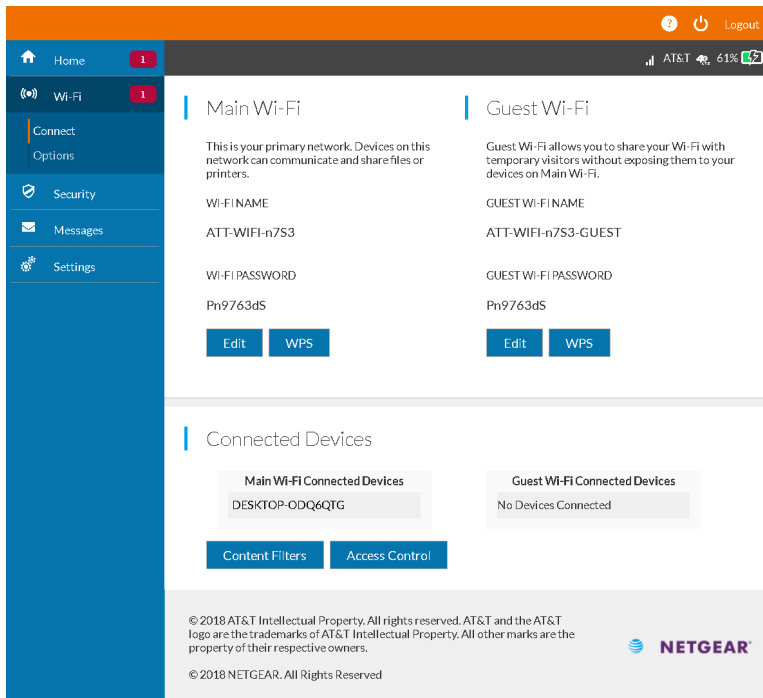

5. Click the **WPS** button for either the main Wi-Fi or guest Wi-Fi network (if available).
6. Click the button for the WPS method that you want to use:

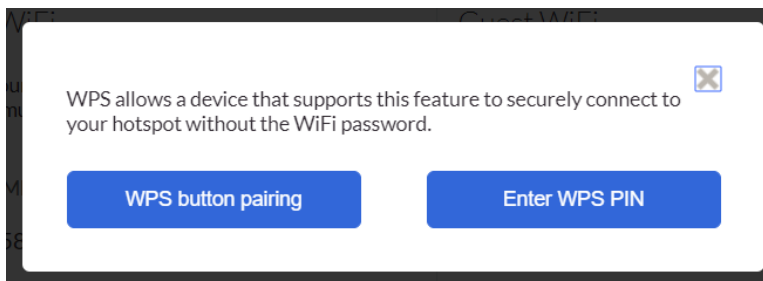

- **WPS button pairing.** If the device that you want to connect includes a WPS key, click the **WPS button pairing** button and, within two minutes (120 seconds), press the device's WPS key.
- **Enter WPS PIN.** If a WPS pin is associated with the device that you want to connect, click the **Enter WPS PIN** button and enter the device's WPS PIN.

Your mobile hotspot and the Wi-Fi device communicate and establish the connection.

Manage Wi-Fi

Advanced users can set up the Wi-Fi radio of the mobile hotspot to meet their Wi-Fi needs by customizing settings on the mobile hotspot web page.

On the mobile hotspot web page, the following Wi-Fi profiles are available:

- **Default, 2.4 GHz Wi-Fi.** Share your main Wi-Fi with 2.4 GHz devices that you trust.
- **5 GHz Wi-Fi.** Share your main Wi-Fi with 5 GHz devices that you trust.
- **Dual-band Wi-Fi.** Share your Wi-Fi with 2.4 GHz and 5 GHz devices.

By default, 2.4GHz Wi-Fi is enabled. If your place of business does not allow Wi-Fi or for any other reason you want to disable Wi-Fi and use the mobile hotspot only in tethered mode, the mobile hotspot gives you that option.


Note: Whenever you change Wi-Fi settings, any devices connected to the mobile hotspot are disconnected and might need to be reconnected.

Turn On 5 GHz Wi-Fi From the Mobile Hotspot Web Page

When all of your devices support 5 GHz Wi-Fi, use 5 GHz Wi-Fi for faster downloads.

To turn on 5 GHz Wi-Fi from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Wi-Fi > Options**.

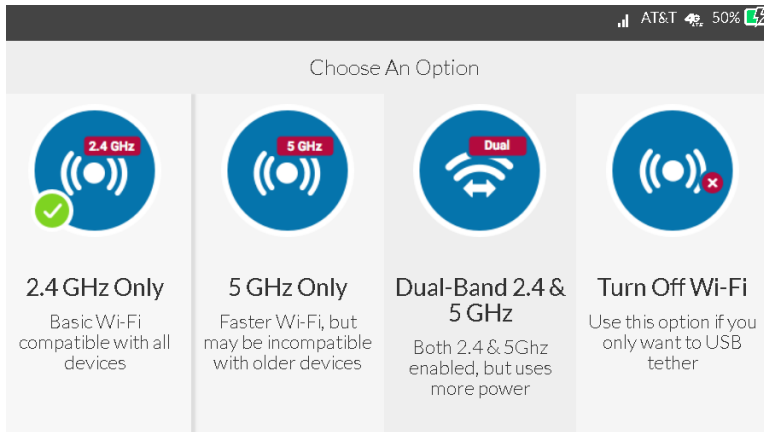


5. Select **5GHz Only**.
The Save and Cancel buttons display at the bottom of the page.
6. Click the **Save** button.
A message displays telling you that to save this change, your device must restart Wi-Fi connections.
7. Click the **Save** button.
Your settings are saved.

Turn On Dual-Band Wi-Fi From the Mobile Hotspot Web Page

The mobile hotspot can broadcast Wi-Fi signals in the 2.4 GHz and 5 GHz Wi-Fi bands. Note that the overall throughput speed could decrease when Wi-Fi dual-band is enabled.

To turn on dual-band Wi-Fi from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The home page displays.
4. Select **Wi-Fi > Options**.

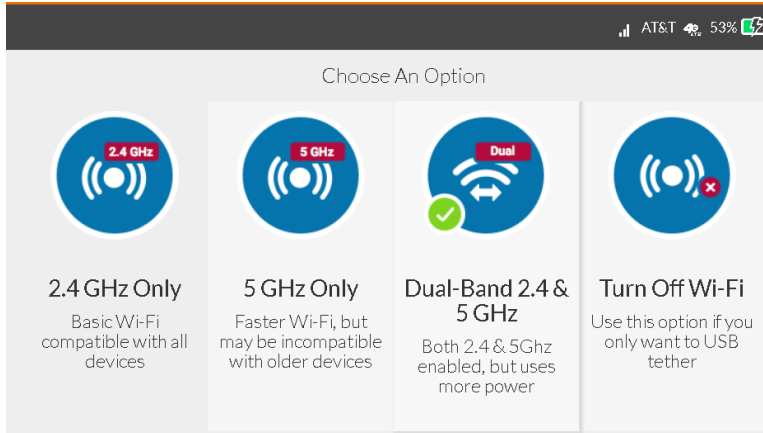

5. Select **Dual-Band 2.4 & 5 GHz**.
The Save and Cancel buttons display at the bottom of the page.
6. Click the **Save** button.
A message displays telling you that to save this change, your device must restart Wi-Fi connections.
7. Click the **Save** button.
Your settings are saved.

Change Wi-Fi Settings From the Mobile Hotspot Web Page

To select a Wi-Fi profile or create a custom profile on the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.

4. Select **Wi-Fi > Options**

Main Wi-Fi

Guest Wi-Fi

Enable Guest Wi-Fi to Share your Wi-Fi with visitors without exposing them to your devices main Wi-Fi.

Wi-Fi name: ATT-WIFI-n753
3 - 32 characters

Wi-Fi password: Pn9763dS
8 - 63 characters

Encryption: WPA2 Personal AES

Broadcast Wi-Fi Name (SSID):

Wi-Fi Privacy Separator:

5. Click the down arrow next to Wi-Fi options.

Wi-Fi Options

Max Connected Devices: 15

2.4 GHz Band

Main Wi-Fi: 14 Guest Wi-Fi: 1

WiFi Channel: Auto

Bandwidth: 20 MHz

Wi-Fi Info on Home:

Wi-Fi Range: Standard Extended

WPS Enabled: Off On

Connection

RTS Threshold: 2347

Fragmentation Threshold: 2346

- To change the maximum number of devices that can connect to the Wi-Fi network, in the **Max Connected Devices** menu, select a number.
- To change the maximum number of devices that can connect to the main Wi-Fi and to the guest Wi-Fi, click the arrow to the right to increase the main Wi-Fi connections and decrease the guest Wi-Fi connections, or click the arrow to the left to decrease the maximum main Wi-Fi connections and increase the maximum guest Wi-Fi connections.

Note: The increase and decrease arrows only display if guest Wi-Fi is enabled.

8. Set the Wi-Fi channel.

Best practice is to set the channel to **Auto**. The mobile hotspot chooses the channel that provides the least interference.

9. Set the Wi-Fi bandwidth.

For 2.4 GHz you can set this to 20 MHz or 40 MHz. For 5 GHz, you can set this to 40 MHz or 80 MHz.

10. Leave the **Wi-Fi Info on Home** check box selected, to allow the Wi-Fi information to be displayed on the mobile hotspot home screen .

11. Set the Wi-Fi range.

Selecting the Extended radio button expands the range of the mobile hotspot. This setting uses more battery power than the Standard setting.

12. Specify advanced connection settings:

- **RTS Threshold**. The smallest packet size (in bytes) used by the Request to Send/Clear to Send handshaking protocol.
Best practice is to use a value of 2347. If you are experiencing inconsistent data flow, you can make minor changes to this value to try to alleviate the problem.
- **Fragmentation Threshold**. The largest allowable size (in bytes) for a packet. If a packet is larger than the threshold, it is sent in multiple packets, which can affect network performance. Keep this value as large as possible (up to 2346).

13. Click the **Save** button.

A message displays to tell you that changing the Wi-Fi info will temporarily cause connectivity loss.

14. Click the **OK** button.

Your settings are saved.

Turn Guest Wi-Fi On and Off From the Mobile Hotspot Web Page

Guest Wi-Fi lets temporary visitors access your Wi-Fi mobile hotspot without having to share your main Wi-Fi password. Guest Wi-Fi uses the same band (2.4 GHz or 5 GHz) as your main Wi-Fi.

To enable guest Wi-Fi from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Wi-Fi > Connect**.

Note: Guest Wi-Fi can be enabled when the Wi-Fi profile is set to **2.4GHz Only** or **5GHz Only**.

Main WiFi	Guest WiFi
This is your primary network. Devices on this network can communicate and share files or printers.	A secondary network is enabled when accessing features such as Dual-Band WiFi, Guest WiFi, or a customized network setup.
WiFi NAME: NTGR_588B	WiFi NETWORK NAME NTGR_588B-Guest
WiFi PASSWORD: Q9zcVFiD	PASSWORD: Q9zcVFiD
<input type="button" value="Edit"/> <input type="button" value="WPS"/>	<input type="button" value="Edit"/> <input type="button" value="WPS"/>

Connected Devices

Main WiFi Connected Devices DESKTOP-56PPP0C	Guest WiFi Connected Devices No Devices Connected
---	---

- Click the **Guest Wi-Fi Edit** button.

<div style="border-bottom: 1px solid #ccc; padding-bottom: 10px;"> <p>Main Wi-Fi</p> <p>Wi-Fi name <input type="text" value="ATT-WIFI-n7S3"/> <small>3 - 32 characters</small></p> <p>Wi-Fi password <input type="text" value="Pn9763dS"/> <small>8 - 63 characters</small></p> <p>Encryption <input type="text" value="WPA2 Personal AES"/></p> <p>Broadcast Wi-Fi Name (SSID) <input checked="" type="checkbox"/></p> <p>Wi-Fi Privacy Separator <input type="checkbox"/></p> </div>	<div style="border-bottom: 1px solid #ccc; padding-bottom: 10px;"> <p>Guest Wi-Fi <input checked="" type="checkbox"/></p> <p>Wi-Fi name <input type="text" value="ATT-WIFI-n7S3-GUES"/> <small>3 - 32 characters</small></p> <p>Wi-Fi password <input type="text" value="Pn9763dS"/> <small>8 - 63 characters</small></p> <p>Generate Passphrase <input type="checkbox"/></p> <p>Encryption <input type="text" value="WPA2 Personal AES"/></p> <p>Broadcast Network Name <input checked="" type="checkbox"/></p> <p>Guest Timer <input type="text" value="1 hour"/></p> </div>
---	---

- Click the **Guest Wi-Fi** button.
The Save and Cancel buttons display at the bottom of the page.
- Specify the Wi-Fi name for Guest Wi-Fi access.
The Wi-Fi name can be from 3 to 32 characters in length.
- Specify the password to access Guest Wi-Fi.
The password can be from 8 to 63 characters in length.
- If you want to lock the Guest Wi-Fi password so that it cannot be edited, check the Generate Passphrase check box.
- In the Encryption menu for main Wi-Fi or guest Wi-Fi, select a security option:
 - **WPA2 Personal AES.** Strong security supported by newer Wi-Fi devices, the default.
 - **WPA/WPA2.** Strong security supported by most Wi-Fi devices. Use WPA2 Personal AES whenever possible.
 - **None.** Anyone can access your Wi-Fi network without a password and you are responsible for charges incurred. Best practice is not to select this option.

The Save and Cancel buttons display at the bottom of the page.
- Select the length of time in the **Guest Timer** menu, to set a timer for the guest network.
- Use the **Broadcast Network Name** switch to enable the broadcast network for Guest Wi-Fi.
By default, Broadcast Network Name is enabled. If you need to disable it, toggle the switch to off. If you set Broadcast Network Name to off, you are prompted to save or cancel the Broadcast Network Name. If you choose **Save**, the device restarts Wi-Fi connections, and any currently devices temporarily lose their connection.

13. Click the **Save** button.

A message displays telling you that to save this change, your device must restart Wi-Fi connections.

14. Click the **Save** button.

Your settings are saved.

Manage Wi-Fi Security

Note: When you change the Wi-Fi settings, the mobile hotspot resets. Any devices connected to the mobile hotspot are disconnected when the mobile hotspot resets.

Change Wi-Fi Network Name and Password From the Mobile Hotspot Web Page

The main Wi-Fi network name identifies your Wi-Fi network and is visible to other Wi-Fi-enabled devices.

The procedure to change the main Wi-Fi network name and password involves specifying the following setting:

- **Main Wi-Fi.** For added security, you can prevent the main Wi-Fi network name and password from displaying on the mobile hotspot's home screen.

To change network name and password from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
4. Select **Wi-Fi > Connect**.

- Click the **Edit** button for the main Wi-Fi network.

The screenshot shows the 'Main Wi-Fi' and 'Guest Wi-Fi' settings. Under 'Main Wi-Fi', there is a description: 'This is your primary network. Devices on this network can communicate and share files or printers.' Below this, the 'WI-FI NAME' is 'ATT-WIFI-n7S3' and the 'WI-FI PASSWORD' is 'Pn9763dS'. There are two buttons: 'Edit' and 'WPS'. Under 'Guest Wi-Fi', there is a description: 'Guest Wi-Fi allows you to share your Wi-Fi with temporary visitors without exposing them to your devices on Main Wi-Fi.' Below this, there are two boxes for 'Main Wi-Fi Connected Devices' and 'Guest Wi-Fi Connected Devices', both showing 'No Devices Connected'. At the bottom, there are two buttons: 'Content Filters' and 'Access Control'.

The Wi-Fi Options page with Guest Disabled appears.

The screenshot shows the 'Main Wi-Fi' and 'Guest Wi-Fi' settings. Under 'Main Wi-Fi', there are four fields: 'Wi-Fi name' with value 'ATT-WIFI-n7S3' and a character count '3 - 32 characters'; 'Wi-Fi password' with value 'Pn9763dS' and a character count '8 - 63 characters'; 'Encryption' with a dropdown menu set to 'WPA2 Personal AES'; and 'Broadcast Wi-Fi Name (SSID)' with a toggle switch turned on. Under 'Guest Wi-Fi', there is a toggle switch turned off and a description: 'Enable Guest Wi-Fi to Share your Wi-Fi with visitors without exposing them to your devices main Wi-Fi.' At the bottom, there is a 'Wi-Fi Privacy Separator' toggle switch turned off.


- Change the **Wi-Fi Name** and **Wi-Fi Password** fields as desired. The Save and Cancel buttons display at the bottom of the page.
- Click the **Save** button. A message displays telling you that to save this change, your device must restart Wi-Fi connections.
- Click the **Save** button. Your settings are saved. All devices that were connected must reconnect with the new name and password.

Change Wi-Fi Encryption Settings

For information about Wi-Fi security, see [Security Credentials](#) on page 15.

To change the type of security used for main and secondary or guest Wi-Fi:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Wi-Fi > Connect**.

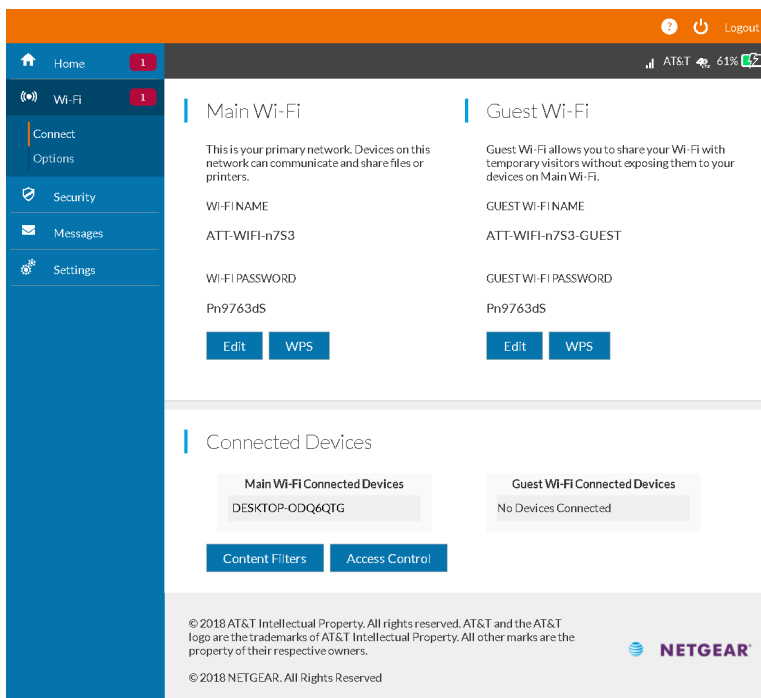

5. Click the **Edit** button for the main Wi-Fi or for the guest Wi-Fi network.

6. In the Encryption menu for main Wi-Fi or guest Wi-Fi, select a security option:
 - **WPA2 Personal AES.** Strong security supported by newer Wi-Fi devices, the default.
 - **WPA/WPA2.** Strong security supported by most Wi-Fi devices. Use WPA2 Personal AES whenever possible.
 - **None.** Anyone can access your Wi-Fi network without a password and you are responsible for charges incurred. Best practice is not to select this option.

The Save and Cancel buttons display at the bottom of the page.

7. Click the **Save** button.
A message displays telling you that to save this change, your device must restart Wi-Fi connections.
8. Click the **Save** button.
Your settings are saved.
9. Reconnect your Wi-Fi devices, if necessary, using the new Wi-Fi credentials.

3

Manage Security

For information about Wi-Fi security settings, see [Manage Wi-Fi Security](#) on page 34.

The chapter covers the following topics:


- [Change the Mobile Hotspot Web Page Login Settings](#)
- [Content Filter Levels](#)
- [View, Block, or Unblock Connected Devices](#)
- [Activate SIM Security](#)
- [Enable Port Forwarding](#)
- [Enable Port Filtering](#)

Change the Mobile Hotspot Web Page Login Settings

You can change the host name for the mobile hotspot web page. You can also change the password to access the mobile hotspot web page.

To change the login settings for the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > General > Device**.

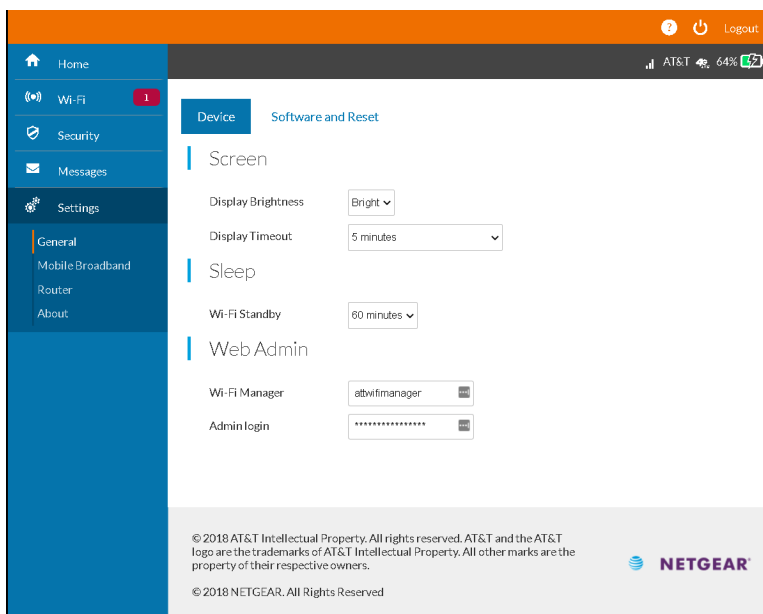

5. In the **Wi-Fi Manager** field, change the URL used to connect to the mobile hotspot. When you change settings, the Save and Cancel buttons display.
6. In the **Admin login** field, change the password used to log in as an administrator. Best practice is to set a more secure password.

Enter a minimum of 4 characters and a maximum of 31 characters.

7. Click the **Save** button.
Your settings are saved.

Content Filter Levels

You can set up content filtering levels on the mobile hotspot with a free OpenDNS account. Content filters provide parental controls and phishing protection.


Set Up Content Filtering

To enable content filtering, you must log in to the mobile hotspot web page and be connected to the Internet.


Note: Content filtering is powered by OpenDNS. A network connection is required to set up or change content filtering.

To enable content filtering:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Security > Content Filters**.
The Content Filters page displays.
5. Select the **Content Filters** button and enable Content Filters.

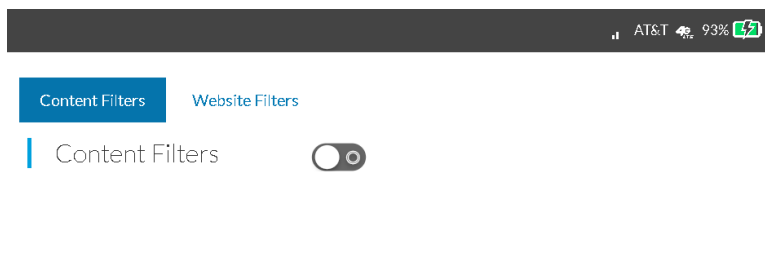

6. If you do not have an OpenDNS account, do the following:
 - a. Click the **Sign Up** link.

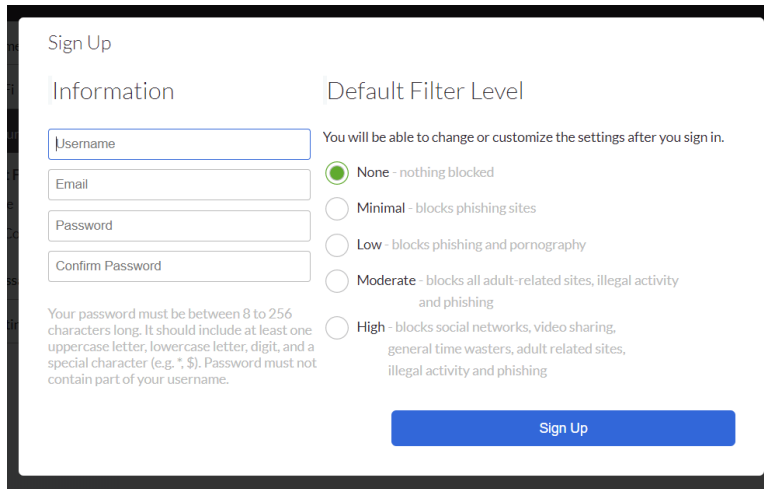

The screenshot shows the OpenDNS Sign Up page. It is divided into two main sections: 'Information' and 'Default Filter Level'. Under 'Information', there are four input fields: 'Username', 'Email', 'Password', and 'Confirm Password'. Below these fields is a note: 'Your password must be between 8 to 256 characters long. It should include at least one uppercase letter, lowercase letter, digit, and a special character (e.g. *, \$). Password must not contain part of your username.' Under 'Default Filter Level', there is a note: 'You will be able to change or customize the settings after you sign in.' Below this note are five radio button options: 'None - nothing blocked' (which is selected), 'Minimal - blocks phishing sites', 'Low - blocks phishing and pornography', 'Moderate - blocks all adult-related sites, illegal activity and phishing', and 'High - blocks social networks, video sharing, general time wasters, adult related sites, illegal activity and phishing'. At the bottom right of the form is a blue 'Sign Up' button.

- b. Complete the fields to create your OpenDNS account.
 - c. Click the **Sign Up** button.
7. If you already have an OpenDNS account, enter the user name and password.
8. When prompted, select a **Filter Level** radio button.
9. Click the **Save** button.

Your settings are saved.

Block Access to Websites

You can use website filters to block access to websites that you specify. You can also allow unrestricted access on specific computers and devices.

To block access to a website:


1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1..**

The mobile hotspot web page displays.
3. Enter the administrator login password.

The default login password is printed on the product label underneath the battery.
The password is case-sensitive.

The home page displays.

4. Select **Security > Content Filters > Website Filters**.

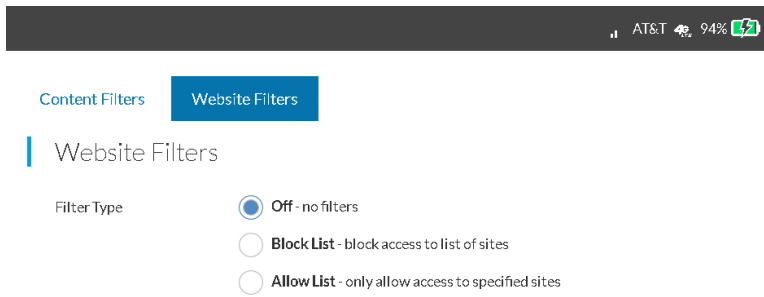


5. Select the **Block List - block access to list of sites** radio button.
The page adjusts.
6. Enter the website in the **Site Name** field and click the **+** button.
7. To allow unrestricted access on specific computers or devices, complete the **Name** and **MAC Address** fields and click the **+** button.
8. Click the **Save** button.
Your settings are saved.

Allow Access to Websites

You can use website filters to set up a list of websites that can be accessed through the mobile hotspot broadband Internet connection. You can also allow unrestricted access to specific computers and devices.

To set up website filters:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive
The home page displays.
4. Select **Security > Content Filters > Website Filters**.

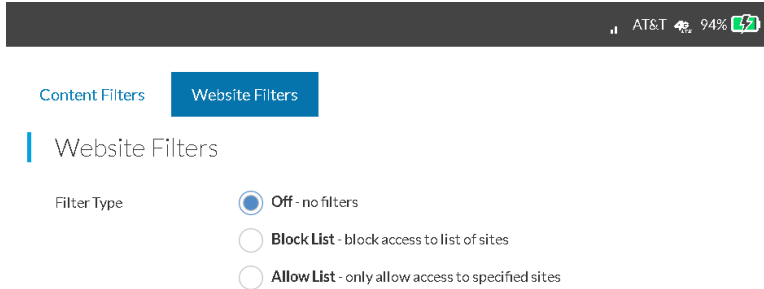

5. Select the **Allow List - only allow access to specified sites** radio button.
The page adjusts.
6. Enter the website in the **Site Name** field and click the **+** button.
7. To allow unrestricted access on specific computers or devices, complete the **Name** and **MAC Address** fields and click the **+** button.
8. Click the **Save** button.
Your settings are saved.


View, Block, or Unblock Connected Devices

You can block specific devices from connecting to the mobile hotspot.

View Connected Devices From the Mobile Hotspot Web Page

To view the connected devices from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

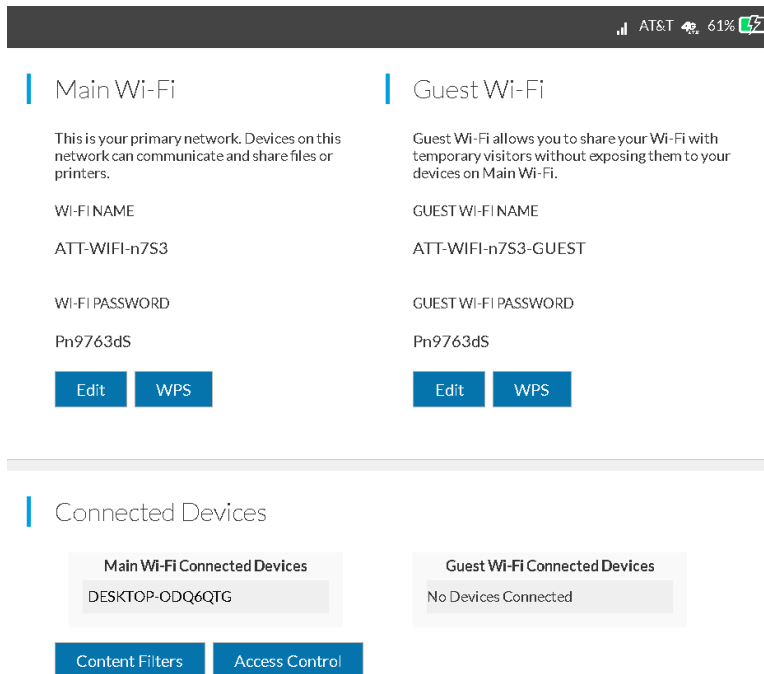4. Select **Wi-Fi > Connect**.

The Connected Devices section of the page displays a list of devices connected to your network. If you notice a Wi-Fi device that you do not recognize, you can block that device from connecting to your Wi-Fi network.

Unblock a Device From the Mobile Hotspot Web Page

To unblock a device from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The home page displays.
A list of devices connected to the main Wi-Fi and guest Wi-Fi networks displays in the right column of the page.
4. Select **Security > Access Control**.
The MAC Filter page displays.

5. From the **MAC Filter Mode** menu, select **Black list - Block all in list**.
The list of blocked devices displays.
6. Click the **x** button next to the device.
The device can access your network.

View a List of Blocked Devices From the Mobile Hotspot Web Page

To view a list of blocked devices from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. To view a list of connected devices, select **Wi-Fi > Connect**.
5. Select **Security > Access Controls**.
The Access Control page displays.
6. From the **MAC Filter Mode** menu, select **Block list**.
The list of blocked devices displays.


Activate SIM Security

You can create another level of security by establishing a PIN that you must enter before you can manage the network connection or view SMS messages.

To activate SIM security:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.

3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > SIM Security**.
The SIM Security page displays.

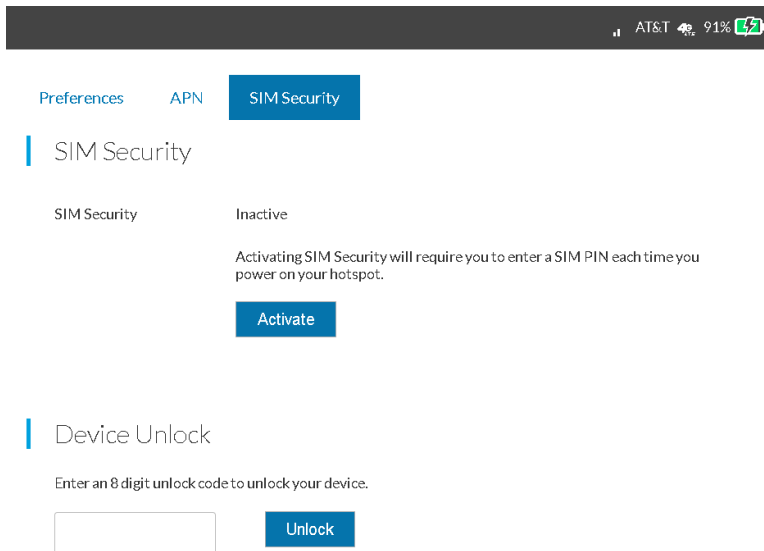

5. Click the **Activate** button.
6. Enter a PIN and click the **Save** button.

Enable Port Forwarding

If your computer is hosting a server, you can enable port forwarding so that other users can access the server. With port forwarding, incoming traffic is forwarded to specific ports and devices on your network using their local IP addresses.

Note: Port forwarding creates a security risk. When not required, leave port forwarding disabled.

To enable port forwarding:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.


The mobile hotspot web page displays.

3. Enter the administrator login password.

The default login password is printed on the product label underneath the battery.
The password is case-sensitive.

The home page displays.

4. Select **Settings > Router > Port Forwarding**.

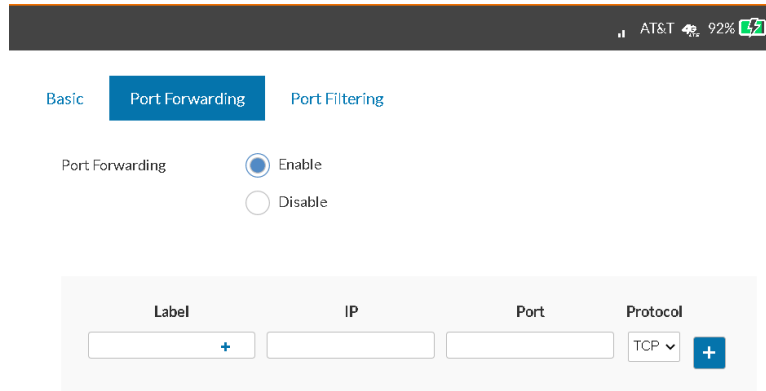

5. Select the **Enable** radio button.

The page adjusts.

6. Enter the following port forwarding information:

- **Label.** Enter a descriptive name.
- **IP.** Enter the IP address of a connected device.
- **Port.** Enter the port number that the application uses.
- **Protocol.** If you are unsure, select TCP.

7. Click the **Save** button.


Your settings are saved.

Enable Port Filtering

You can select which applications (for example, HTTP, FTP, email servers) can access the Internet. Used with other security measures such as a firewall, port filtering can enhance network security.

To enable port filtering:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Router > Port Filtering**.

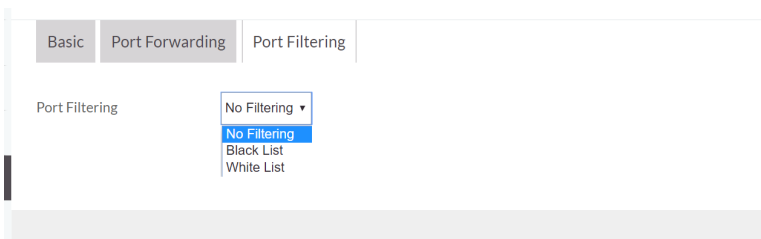

5. From the **Port Filtering** list, select one of the following:
 - **Block List.** Specific applications and services are not allowed to access the Internet (block list).
 - **Allow List.** Only specific applications and services are allowed to access the Internet (allow list).

Only one list at a time can be active, either a block list or an allow list.

6. Identify the ports to filter.
Enter a meaningful label that describes the application or service.
7. Enter the port being used.
8. Enter the communication protocol being used.
9. Click the **Save** button.
Your settings are saved.

4

Maintain Your Mobile Hotspot

The chapter covers the following topics:

- [Extend Battery Life](#)
- [View Details About Your Mobile Hotspot](#)
- [Back Up and Restore Mobile Hotspot Settings](#)
- [Configure Mobile Broadband](#)
- [Enable DMZ](#)
- [Set LAN Options](#)
- [Update Mobile Hotspot Software and Firmware](#)
- [Enable or Disable Factory Reset](#)

Extend Battery Life

The mobile hotspot, by default, is configured to optimize battery life. The following factors affect battery life:

- Screen brightness.
- Standby time.
- Data throughput.
- Mobile broadband signal strength (the better the signal, the longer the battery life).
- Wi-Fi range.
- Dual-band Wi-Fi (when all of your devices support 5 GHz Wi-Fi, dual-band Wi-Fi allows faster downloads but uses more power).
- Guest Wi-Fi, when enabled, uses more power.

To extend the battery life, use any of the following methods:

- Adjust Wi-Fi settings.
- Adjust display settings.
- Use tethered USB with Charge and Tether or Charge Only enabled.

Adjust Wi-Fi Settings to Optimize Battery Life

If the devices that you are connecting to your Wi-Fi network are always close to your mobile hotspot, shorten the Wi-Fi range. Set the standby timer to a shorter period to minimize the wait time when no devices are connected to either Wi-Fi network before going into standby mode (the Wi-Fi radios turn off).

Note: When you change the Wi-Fi settings, any devices connected to the mobile hotspot are disconnected and might need to be reconnected.

You can set the following Wi-Fi options to optimize battery life:

- Adjust the display settings. See [Adjust Display Settings to Increase Battery Life](#) on page 51.
- Set the Wi-Fi range to Standard, not Extended, and set the Wi-Fi standby to 5 minutes.

Adjust Display Settings to Increase Battery Life

Dim the screen to reduce the LCD screen's brightness level. Set the screen time-out to a shorter period to reduce the amount of time the mobile hotspot waits without the power button being pressed before the screen turns blank.

To adjust display settings to increase battery life from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive
The home page displays.
4. Select **Settings > General > Device**.
The device settings page opens.
5. Adjust any of these settings:
 - **Display Brightness** . From the menu, select the display brightness level.
 - **Display Timeout** . From the menu, select a shorter time period.
6. Click the **Save** button.
Your settings are saved.

Turn Off USB Tethering

USB tethering lets you connect to the Internet from supported computers with a USB cable and charge the mobile hotspot battery at the same time.

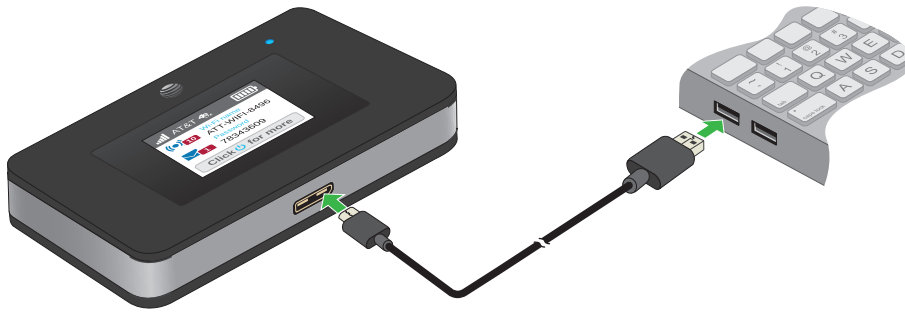


Figure 4. Mobile hotspot tethered to a laptop computer

Turn off USB tethering if you only want to charge your mobile hotspot with your computer.

Turn Off USB Tethering From a Web Browser


To turn off tethering:

1. From a computer that is connected to your network, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
A login page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The dashboard displays.
4. Select **SETTINGS > Setup > Router**.
The Router Setup page displays.
5. Scroll down to the DMZ section of the page.
6. In the Use USB port for drop-down menu, select **Charge only**.
7. Click the **Apply** button.
Your settings are saved.

Turn Off USB Tethering From the NETGEAR Mobile App

To turn off tethering:

1. On your smartphone, connect to the mobile hotspot's Wi-Fi network.
2. Launch the NETGEAR Mobile app.

3. Swipe down.
The dashboard displays.
4. Tap  **Settings**.
The Settings page displays.
5. Tap **General**.
The General page displays.
6. Under ROUTER, tap **Tethering** to toggle between Charge only and Charge + tether.

View Details About Your Mobile Hotspot

You can view details about your device such as the model number, software version, and IMEI (International Mobile Station Equipment Identity).

To view details about your device from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

4. Select **Settings > About**.

AT&T 93%

Account Details

- Wireless number +1 (555)555-555
- MAC Address CC-40-D0-BA-30-7A
- IMEI: 032896553210002
- IMEI SV 04
- FSN DV8887N10008D
- ICCID 92750032751325626510

Device

- Model AirCard 797S
- Wi-Fi Manager <http://attwifimanager>
- FW Version NTG9X40C_30.00.08.06
- FW Build Date 2020/05/11
- PRI Version 02.01
- Power State Online
- Current temperature 33 °C
- Current voltage: 4313mV
- Battery charge level 93
- Battery status Normal
- Battery temperature: 33 °C

Wi-Fi Details

- Wi-Fi name ATT-WIFI-n753
- Wi-Fi password Pn9763d5
- Guest Wi-Fi name ATT-WIFI-n753-GUEST
- Guest Wi-Fi password Pn9763d5
- MAC Address CC-40-D0-BA-30-7A
- IP Address 10.67.159.167
- Encryption WPA2_Personal_AES
- Wi-Fi Devices 2
- Max Wi-Fi Devices 14
- Max Guest Wi-Fi Devices 1
- Wi-Fi Range Long
- Broadcast Wi-Fi Name (SSID) On

Network Status

- Network Status Connected
- RSRP -113 dBm
- RSRQ -13 dBm
- RS-SINR 11 dBm
- Current radio band LTEB2
- Quality 28 dB
- PS service type LTE
- Network selection mode Auto
- Country USA
- Roaming False
- Network AT&T
- MCC 310
- MNC 410
- LAC 20494
- RAC 178
- Cell ID 184945673
- Channel Number 1100
- MNC format 3
- PLMN service error bit mask 0
- IP Address 10.67.159.167
- IPv6 Address
- MTU Size 1430

Firmware

- FW Version NTG9X40C_30.00.08.06
- FW Build Date 2020/05/11
- Web App Version AC797S-1A1NAS_03.04.71.02
- Bootloader Version NTG9X40C_30.00.08.06

Open Source

- View Credits & Licenses

Save to File


Back Up and Restore Mobile Hotspot Settings

You can back up and restore mobile hotspot settings. Backing up and restoring are useful if you use more than one device and you want the same settings on all of your devices. You can also save your settings before resetting to factory defaults or changing the settings.

Back Up Mobile Hotspot Settings Using the Web Page

To back up mobile hotspot settings using the web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > General > Software and Reset**.

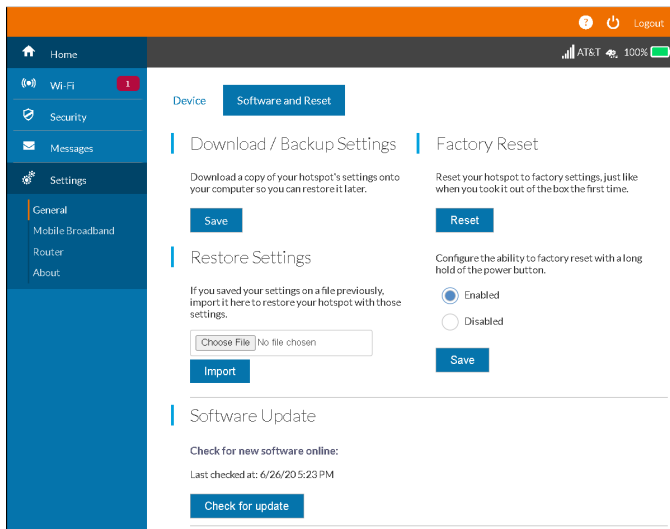

5. Click the **Save** button.
By default, the file (export.cfg) is saved to your Downloads folder.

Restore Mobile Hotspot Settings Using the Web Page


To restore mobile hotspot settings:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.

The default login password is printed on the product label underneath the battery. The password is case-sensitive.

The home page displays.

4. Select **Settings > General > Software and Reset**.

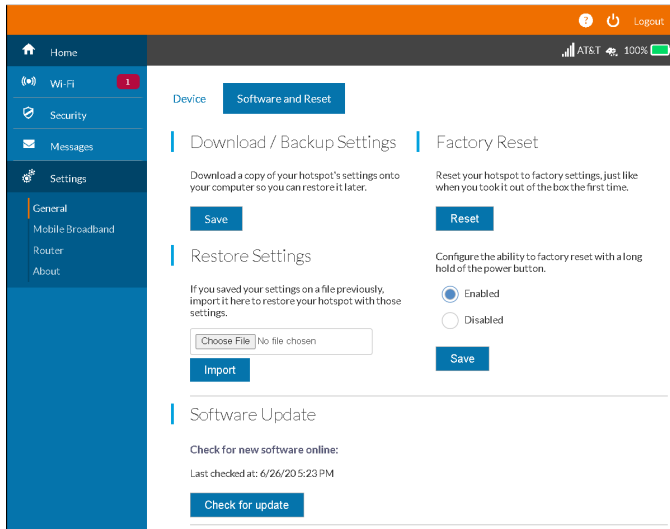

5. Click the **Choose File** button.
6. Navigate to the location where the export.cfg file is stored and select it.
By default, mobile hotspot setting files are saved to your Downloads folder.
7. Click the **Import** button.
Your mobile hotspot is restored with the imported file settings.

Restore Mobile Hotspot Settings Using the LCD Display

If the system administrator has configured Factory Reset using the Power button, then you can restore the mobile hotspot settings using the LCD display. Start with the mobile hotspot turned on.

To restore mobile hotspot settings directly from the mobile hotspot:

1. Press and hold the **Power** button for at least 15 seconds.
If Factory Reset by using the Power button is configured, then the mobile hotspot enters factory reset mode and first displays the message, "Shutting down," followed by the message "Continue holding Power button to reset all settings to factory default," and then "Resetting Device. Please do not power off."

Note: If you release the **power** button too soon, the mobile hotspot turns off instead of resetting.

Configure Mobile Broadband

You can configure mobile broadband settings to view WAN details such as the active network, connection status, and signal strength. You can also adjust these settings to establish which users and applications can access your network.

Enable IP Pass-Through Mode

To turn off the mobile hotspot router functionality and assign the network IP address directly to the attached device, enable IP pass-through.

If you make this change, the attached device restarts.

WARNING: If you enable this feature, Wi-Fi is disabled and you must use a USB cable to tether the device.

Note: This feature is available to Windows computer users. If you are a Mac user, do not enable this option because you will be unable to access your device.

To enable IP pass-through mode:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

4. Select **Settings > Router > Basic**.

LAN

IP Address

Netmask

IP Passthrough Mode Enabled
 Disabled
 Automatic (while docked on Smart Cradle)

This option turns off the router function of the device and assigns the network IP address directly to the attached host. This option can be useful for implementing secure, enterprise VPNs. The device will reset after making this change to re-start using a different driver configuration.

At this time, this feature is only available to PC users. If you are a Mac user, please do not enable this option as you will be unable to access your device. Please check support.netgear.com for further updates on future Mac support.

VPN Passthrough On
 Off

DHCP Server Enabled
 Disabled

DHCP IP Range -

DHCP lease time (minutes)

DNS mode Manual
 Auto

5. In the LAN section, select the IP Passthrough Mode **Enabled** radio button.
6. Click the **Save** button.

Note: Enabling IP pass-through will disable Wi-Fi.

Enable VPN Pass-Through

To connect to a corporate network using VPN, you must first enable VPN connections (pass-through).

To enable VPN pass-through:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

4. Select **Settings > Router > Basic**.

AT&T 91%

Basic Port Forwarding Port Filtering

UPnP

UPnP On
 Off

UPnP should only be enabled if absolutely necessary as it can result in high security risks for your network.

LAN

IP Address

Netmask

IP Passthrough Mode Enabled
 Disabled
 Automatic (while docked on Smart Cradle)

This option turns off the router function of the device and assigns the network IP address directly to the attached host. This option can be useful for implementing secure, enterprise VPNs. The device will reset after making this change to re-start using a different driver configuration.

At this time, this feature is only available to PC users. If you are a Mac user, please do not enable this option as you will be unable to access your device. Please check support.netgear.com for further updates on future Mac support.

VPN Passthrough On
 Off

DHCP Server Enabled
 Disabled

DHCP IP Range -

DHCP lease time (minutes)

DNS mode Manual
 Auto

DMZ

DMZ Enabled On
 Off

Use USB port for

5. In the LAN section, select the VPN Passthrough **On** radio button.

6. Click the **Save** button.

Your settings are saved.

Configure APN Details

Your mobile hotspot comes preconfigured with the access point name (APN) for your network service provider.

The mobile hotspot checks the APN to determine the type of network connection to establish.

Add an APN for Another Network You can configure the mobile hotspot to add an APN for another network.

To add an APN for another network:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > APN**.
The APN screen displays.
5. Click the **Add** button.

The screenshot shows the APN configuration screen. At the top, there are three tabs: "Preferences", "APN", and "SIM Security". Below the tabs, there is a section titled "Active" with a green status indicator. The main content area is titled "Operator (Operator)" and includes a "Details" link. Below this, there is a "New APN" section with a "Close" link. The "New APN" section contains four input fields: "Name", "APN*", "Authentication" (set to "None"), and "PDP" (set to "IPV4"). At the bottom of the "New APN" section, there are two buttons: "Save" and "Cancel".

6. Enter the name and password, if they are required for the network.
7. Select the network authentication mode:
 - **None**
 - **PAP**

- **CHAP**
- **PAP or CHAP**

8. Change the PDP (data protocol), if necessary:

- **IPV4**
- **IPV6**
- **IPV4V6**

9. Change the PDP roaming protocol, if necessary:

- **None**
- **IPV4**
- **IPV6**
- **IPV4V6**

Note: PDP roaming protocol is the IP protocol used while you are roaming (for example when you are traveling and the roaming network does not support IPv6).

10. Click the **Save** button.


The entry is added to the table.

Select an APN to Use You can select a specific APN to use with the mobile hotspot.

To select an APN:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.


4. Select **Settings > Mobile Broadband > APN**.

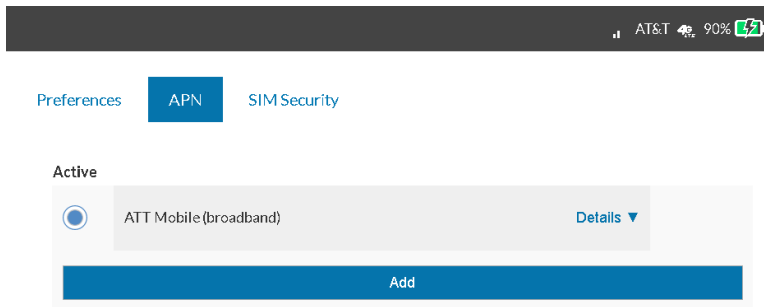

5. Select the **Active** radio button next to the APN entry.
The APN is selected.

Remove an APN Entry You can remove an existing APN from the APN setup.
To remove an APN:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > APN**.

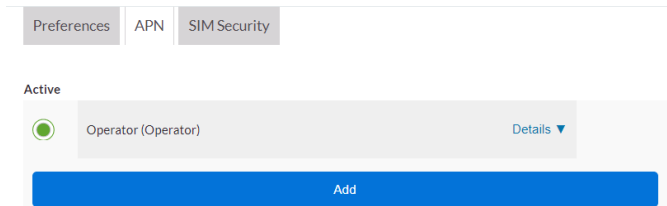

5. Click the **Delete** button.
The APN is removed.

Enable DMZ

In a demilitarized zone (DMZ) network configuration, a computer runs outside the firewall in the DMZ. This computer intercepts incoming Internet traffic, providing an extra layer

of protection for the rest of the network, and sending all incoming data to a particular IP address.

To enable the DMZ and designate a computer to screen incoming traffic:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Router > Basic**.
The Router Basic page displays.
5. Scroll down to display the DMZ section.

DMZ

DMZ Enabled On Off

DMZ Address

6. Select the DMZ Enabled **On** radio button.
7. In the **DMZ Address** field, enter the IP address of the computer to which you want all data sent.
If the mobile hotspot is tethered using a USB cable, this address is 192.168.1.4. If the mobile hotspot is connected using Wi-Fi, the first Wi-Fi client's IP address is usually 192.168.1.74.
8. Click the **Save** button.
Your settings are saved.

Set LAN Options

To set the mobile hotspot's LAN options:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

4. Select **Settings > Router > Basic**.

AT&T 91%

Basic Port Forwarding Port Filtering

UPnP

UPnP On
 Off

UPnP should only be enabled if absolutely necessary as it can result in high security risks for your network.

LAN

IP Address

Netmask

IP Passthrough Mode Enabled
 Disabled
 Automatic (while docked on Smart Cradle)

This option turns off the router function of the device and assigns the network IP address directly to the attached host. This option can be useful for implementing secure, enterprise VPNs. The device will reset after making this change to re-start using a different driver configuration.

At this time, this feature is only available to PC users. If you are a Mac user, please do not enable this option as you will be unable to access your device. Please check support.netgear.com for further updates on future Mac support.

VPN Passthrough On
 Off

DHCP Server Enabled
 Disabled

DHCP IP Range -

DHCP lease time (minutes)

DNS mode Manual
 Auto

DMZ

DMZ Enabled On
 Off

Use USB port for

5. In the LAN section, enter the appropriate details.

If the DHCP server is enabled, it automatically assigns an IP address to each device on the network and manages its configuration information.

The DNS mode setting specifies how the DNS servers are obtained. If you select the **Auto** radio button, the servers use the DNS relay specified by the Internet provider.

6. Click the **Save** button.

Your settings are saved.


Update Mobile Hotspot Software and Firmware

The mobile hotspot automatically checks for new software or firmware updates once a week. If an update becomes available, the mobile hotspot displays an alert. You can also check for updates manually without receiving an alert.


Update in Response to an Alert

To update the mobile hotspot software or firmware in response to an alert:

1. To wake the device, press the **Power** button.
The home screen displays.
2. Press and release the **Power** button until the **Update Available** alert displays.

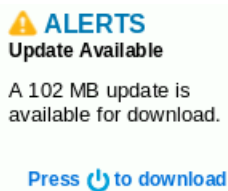

3. Press and hold the **Power** button.
The update process starts.
When the the download completes, the alert changes to **Software Update**.

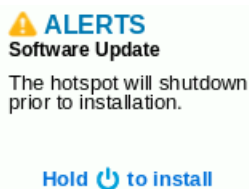


4. Press and hold the **Power** button until the upgrade process starts.
After the update install completes, the mobile hotspot reboots.

Update Software Downloaded Over the Air From the Mobile Hotspot Web Page

You can update the software on your mobile hotspot by downloading the software over the air as part of the update.

To update software from the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > General > Software and Reset**.

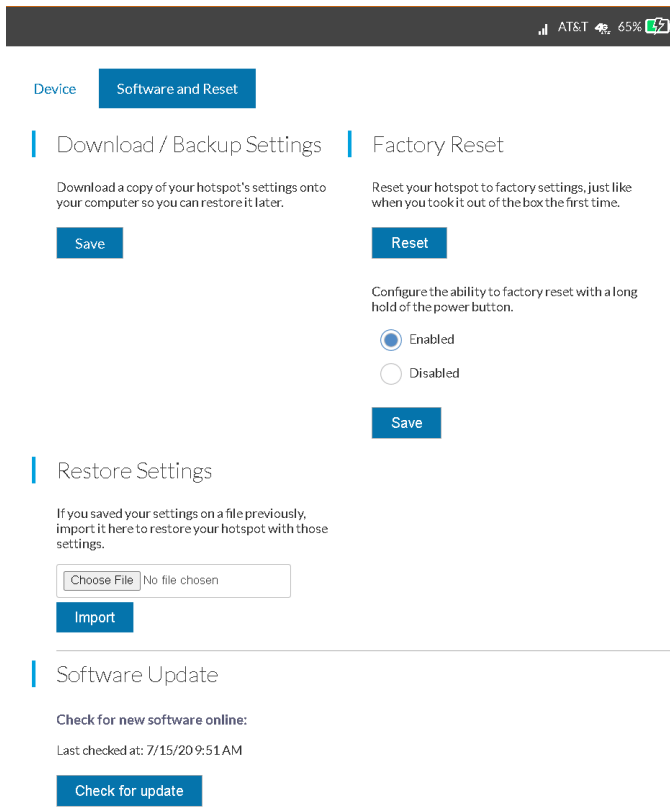


5. If the **Check for update** button displays, click it to see if a new update is available.
6. If an update is available, click the **Start Download** button.
The update downloads.
7. Click the **Update now** button to install the update.
After the update install completes, the mobile hotspot reboots.

Enable or Disable Factory Reset

Administrators have the ability to lock down the AC797S and prevent the end user from starting an "unauthenticated" Factory Reset request. By default, a long press of the AC797S power button results in a Factory Reset. Administrators can use the new controls to disable this feature and prevent the end user from performing a factory reset with the hardware button.

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The home page displays.
4. Select the administrator login password.
5. Select **Settings > General**.
The General settings web page displays.

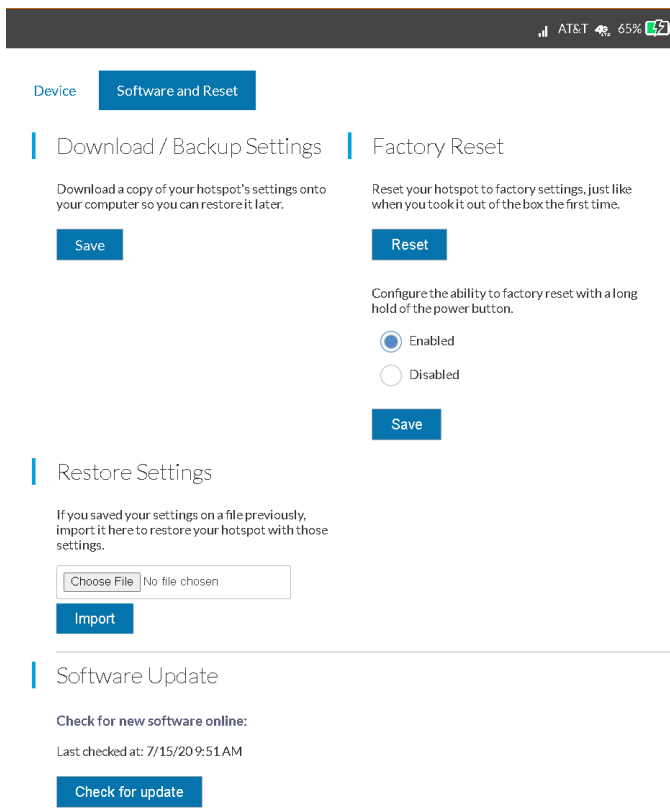

6. In the Factory Reset section, select **Enabled** or **Disabled**.
7. Click the **Save** button to save the Factory Reset setting.

5

Frequently Asked Questions

This chapter provides answers to possible questions about your mobile hotspot:

- [Questions About Connecting and Disconnecting Devices and Accessing the Internet](#)
- [Questions About the Mobile Hotspot Web Page](#)
- [General Questions](#)

Questions About Connecting and Disconnecting Devices and Accessing the Internet

Review these topics for answers to questions about connecting and disconnecting devices and accessing the Internet.

What do I do if I can't connect a device to the mobile hotspot?

If you are experiencing problems connecting to the mobile hotspot, try the following suggestions:

- Turn off your mobile hotspot and take the battery out, wait 10 seconds, put the battery back in, and turn your mobile hotspot on.
- Restart your computer.
- Turn off or temporarily disable any security programs or firewalls.
- If possible, try using another computer or Wi-Fi device to connect to your mobile hotspot. If you can, then the problem is with the device that cannot connect, not the mobile hotspot.

What do I do if I can't access the Internet?

If you are connected to the mobile hotspot but cannot connect to the Internet, try the following suggestions:

- Check the display status on the mobile hotspot's LCD screen.
- Make sure that network coverage is available in your area.
- Make sure that your micro SIM card is active and enabled with data services.
- Wait one to two minutes for the mobile hotspot to initialize.
- Confirm that your account is activated and that no other Internet connections are active.
- Switch your mobile hotspot off and on and restart your computer or Wi-Fi device.


How do I disconnect from the mobile broadband network?

Turning off domestic data and international roaming disconnects your mobile hotspot from the mobile broadband network. For more information, see [Turn Domestic Data On and Off From the Mobile Hotspot Web Page](#) on page 22.

How do I find out how many devices are connected to my mobile hotspot's Wi-Fi networks?

The number next to the **Wi-Fi** button on the mobile hotspot's LCD home screen is the number of users (or devices) connected to your Wi-Fi network. On the mobile hotspot web page, log in and on the home page click the **Connected devices** button to see the number of connected devices.

What do I do if the No Signal icon displays?

If the No Signal icon () displays, make sure that you are in your network service provider's coverage area.

Why can't my device access the mobile hotspot web page when connected to a VPN?

If you are using your mobile hotspot while connected to a VPN, you might not be able to access the mobile hotspot web page using **http://attwifimanager/**.

To directly access the mobile hotspot web page hosted on the device, enter the address **http://192.168.1.1** in your browser.

Why can't my mobile hotspot connect to a computer running Windows Vista?

A known issue exists whereby computers running Microsoft Windows Vista cannot obtain an IP address from certain routers. More information and a fix are available at <http://support.microsoft.com/kb/928233>, or visit the Microsoft support website and search for knowledge base article 928233.


What do I do if my mobile hotspot doesn't connect to my service provider's network?

If your mobile hotspot does not connect to your service provider's mobile broadband network, try the following suggestions:

- Make sure that your micro SIM account is active. To check micro SIM status, contact your wireless service provider.
- If you use a prepaid micro SIM card, make sure that the account balance is positive.
- If your mobile hotspot still does not connect, you might need to create or update the default connection profile.

To check the default connection profile settings:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the mobile hotspot password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.
4. Select **Settings > Mobile Broadband > APN**.

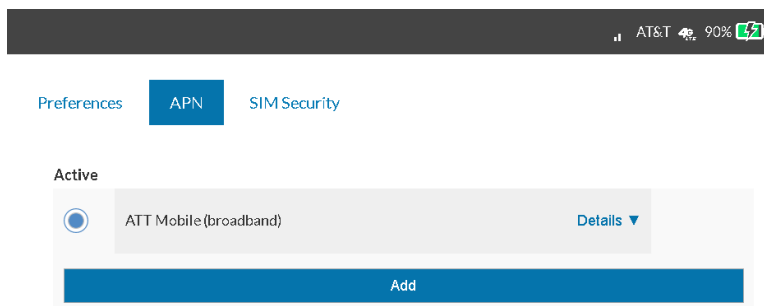

5. Review ISP settings.

Questions About the Mobile Hotspot Web Page

Review these topics for answers to questions about the mobile hotspot web page.

How do I go back to the mobile hotspot web page?

To view the mobile hotspot web page:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery. The password is case-sensitive.
The mobile hotspot web page displays.

What do I do if I forget my admin login password?

The default login password is printed on the product label underneath the battery. The password is case-sensitive. The mobile hotspot web page URL is **http://attwifimanager/** or **http://192.168.1.1**.

If you changed the admin login password and can't remember the password that you created, you must reset the mobile hotspot back to factory defaults. See [Reset the Mobile Hotspot](#) on page 82.

General Questions

Review these topics for answers to general questions about the mobile hotspot.

Why isn't my battery charging?

If you are in a low-coverage area, are transferring a lot of data, or left the mobile hotspot in a hot location, the internal temperature of the mobile hotspot can rise above 45°C. In these conditions, the battery cannot be charged due to safety limits with lithium-ion battery technology.

Check to ensure that the USB cable and the AC wall charger are connected securely and are working correctly.

If the device is left charging for over seven consecutive days, the device automatically enters a battery longevity mode to enhance the life of the battery. During this state, the device stops charging and allows the battery level to drop to and maintain at approximately 75 percent. The next time the device is plugged into a charger, it resumes charging.

Why is the Signal Strength indicator always low?

Your mobile hotspot's reception is poor. Try moving it to a location with a clear view of the sky (for example, near a window).

Why is the download or upload speed slow?

Data transfer speed depends on signal strength and interfering radio sources like electrical generators or other mobile hotspot Wi-Fi devices. Review the following possibilities:

- Check your signal strength and network type (for example, LTE 4G is generally faster than 3G).
- Check Wi-Fi interference by powering the mobile hotspot off and on to find a better Wi-Fi channel.
- Change the Wi-Fi band from 2.4 GHz to 5 GHz.

The LCD screen is not lit. How do I know if the mobile hotspot is still powered on?

The LCD screen dims to save energy. The LED continues to blink slowly to indicate that the mobile hotspot is still powered on. To wake the mobile hotspot, press and quickly release the **Power** button.

How do I find my computer's IP address?

The steps for finding your computer's IP address depend on the operating system. If your device runs an operating system not listed here, see the appropriate operating system documentation.

Find the IP address on a Windows 7, Windows Vista, or Windows XP device

To find the IP address on a Windows 7, Windows Vista, or Windows XP device:

1. Open the command prompt window:
 - a. Select **Start > Run**.
 - b. Enter **cmd** or **command** and click the **OK** button.
2. At the command prompt, enter **ipconfig** and press **Enter**.
3. Write down the IP address for the entry that relates to the Wi-Fi network connection.
The IP address might be listed under IPv4 Address or something similar.

Find the IP address on a Windows 8 device

To find the IP address on a Windows 8 device:

1. In the Charms bar, click the **Search** button.
2. Select **Command Prompt**.
3. At the command prompt, enter **ipconfig** and press **Enter**.
4. Write down the IP address for the entry that relates to the Wi-Fi network connection.
The IP address might be listed under IPv4 Address or something similar.

Find the IP address on a Mac OS X device

To find the IP address on a Mac OS X device:

1. From the Apple menu, select **System Preferences > Network**.
2. Select the Wi-Fi adapter.
The IP address is displayed in the right pane.

Find the IP address on devices running other operating systems

To find the IP address on devices running other operating systems:

1. Refer to the user documentation for your operating system or computer.

How do I find a device's MAC address?

You must know the MAC address for a device when you are doing the following:

- Assigning an IP address based on a MAC address (when using DHCP)
- Allowing or denying devices access to your Wi-Fi network (MAC filtering)

Tip: To display a list of connected devices, including the MAC address of each device, go to the mobile hotspot web page and log in as an administrator. The connected devices list appears on the left side of the home page. Click the device links to display IP and MAC addresses.

The steps for finding a device's MAC address depend on the operating system. If your device runs an operating system not listed in the following procedures, see the appropriate operating system documentation.

Find the MAC address on a Windows 7, Vista , or XP device

To find the MAC address on a Windows 7, Vista , or XP device:

1. Open the command prompt window:
 - a. Select **Start > Run**.
 - b. Enter **cmd** or **command** and click the **OK** button.
2. At the command prompt, enter **ipconfig /all** and press **Enter**.
3. Write down the physical address for the entry that relates to the Wi-Fi network connection.

It appears as a series of numbers and letters. This is the MAC address of your Wi-Fi adapter.

Find the MAC address on a Windows 8 device or newer

To find the MAC address on a Windows 8 device or newer:

1. In the **Charms** bar, click the **Search** button.
2. Select **Command Prompt**.
3. At the command prompt, enter **ipconfig /all** and press the **Enter** button.
4. Write down the physical address for the entry that relates to the Wi-Fi network connection.

It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

Find the MAC address on a Mac OS X device

To find the MAC address on a Mac OS X device:

1. From the Apple menu, select **System Preferences > Network**.
2. Select the Wi-Fi adapter that is connecting to the routing hardware.
3. Select **Advanced**.
4. Select **Ethernet**.

The Ethernet ID is displayed. This is the same as the MAC address.

What do I do if the Wi-Fi network name doesn't appear in the list of networks?

If you do not see the mobile hotspot's Wi-Fi networks from your Wi-Fi-enabled device, try these suggestions:

- Refresh the list of networks.
- If the LCD screen is dark, the Wi-Fi radio might be asleep. Press the **Power** button to wake the mobile hotspot.
- Check the Wi-Fi band settings and consider using the 2.4 GHz band for increased compatibility with client devices.

6

Troubleshooting

This chapter provides suggestions for troubleshooting problems that might arise when you are using your mobile hotspot. The chapter covers the following topics:

- [View Alerts](#)
- [Reset the Mobile Hotspot](#)

View Alerts

Your mobile hotspot displays alerts to advise you of device status changes. See [View Messages From the Mobile Hotspot Web Page](#) on page 19.

SIM Not Installed

Ensure that the micro SIM card is installed correctly. For information about replacing a SIM, see [Replace a SIM Card](#) on page 12.

SIM Error – Check SIM

Ensure that your network service provider's micro SIM card is inserted in the mobile hotspot. If a problem still exists, contact customer service. The micro SIM card might be damaged and need replacing.

Temperature-Related Alerts

The mobile hotspot is designed to work over a wide temperature range. (For more information, see [Environmental Specifications](#) on page 88.) The mobile hotspot shuts down automatically if it goes out of the supported temperature range.

Move the device to an area where the temperature is more suitable and, if the mobile hotspot is too warm, make sure that the area is well ventilated and air can circulate around the device.

Note: The battery might not recharge if the mobile hotspot is outside the operating temperature range.

Connection Alerts

Some connection alerts include instructions for resolving them. For other connection alerts, including those in the following table, contact customer service for assistance.

Table 2. Connection alerts

Alert	Description
8	Operator determined barring
25	LLC or SNDTCP failure
26	Insufficient resources

Table 2. Connection alerts (Continued)

27	Missing or unknown APN
28	Unknown PDP address or type
29	User authentication failed
30	Activation rejected by GGSN
32	Service Option not supported
33	Service Option not subscribed
34	Service Option temporarily out of order
36	Regular deactivation
37	QoS not accepted
38	Network failure
39	Reactivation required
40	Feature not supported
41	Semantic error in the TFT operation
42	Syntactical error in the TFT operation
43	Unknown PDP context
44	PDP context without TFT already activated
45	Semantic errors in packet filters
46	Syntactical errors in packet filters
67	Connection error
81	Invalid transaction identifier value
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type nonexistent or not implemented
98	Message type not compatible with the protocol state
99	Information element non-existent or not implemented
100	Conditional IE error
101	Message not compatible with the protocol state

Table 2. Connection alerts (Continued)

111	Protocol error, unspecified
256	Invalid Connection ID
258	Invalid PRI NSAPI
259	Invalid Field
260	SNDCP Failure
261	RAB Setup Failure
262	No GPRS Context
263	PDP Establish Max Timeout
264	PDP Activate Max Timeout
265	PDP Modify Max Timeout
266	PDP Inactivate Max Timeout
267	PDP Lower layer Error
268	PDP Duplicate
269	UE RAT Change

Reset the Mobile Hotspot

You can reset the mobile hotspot to the factory settings. This is useful if you forgot your admin login password for the mobile hotspot web page.

If you reset the mobile hotspot, all of your customizations are lost. If you want to keep them, save them before doing the reset and restore them afterward. See [Back Up and Restore Mobile Hotspot Settings](#) on page 54.

Note: When you reset the mobile hotspot, any currently connected devices lose access and must be reconnected after the mobile hotspot restarts.

Reset the Mobile Hotspot From the Mobile Hotspot

Start with the mobile hotspot turned on.

To reset the mobile hotspot directly from the mobile hotspot:

1. Press and hold the **Power** button for at least 15 seconds.
If Factory Reset via the Power button is enabled, the mobile hotspot enters factory reset mode and first displays the message, "Shutting down," followed by the message

"Continue holding Power button to reset all settings to factory default," and then "Resetting Device. Please do not power off."


Note: If you release the **Power** button too soon, the mobile hotspot turns off instead of resetting.

Reset the Mobile Hotspot From the Mobile Hotspot Web Page

This feature is controlled in software and the hardware button factory reset may be disabled in the UI. To reset the mobile hotspot to its factory settings:

1. From a computer or Wi-Fi device that is connected to the mobile hotspot, launch a web browser.
2. Enter **http://attwifimanager/** or **http://192.168.1.1**.
The mobile hotspot web page displays.
3. Enter the administrator login password.
The default login password is printed on the product label underneath the battery.
The password is case-sensitive.
The home page displays.

4. Select **Settings > General > Software and Reset**.

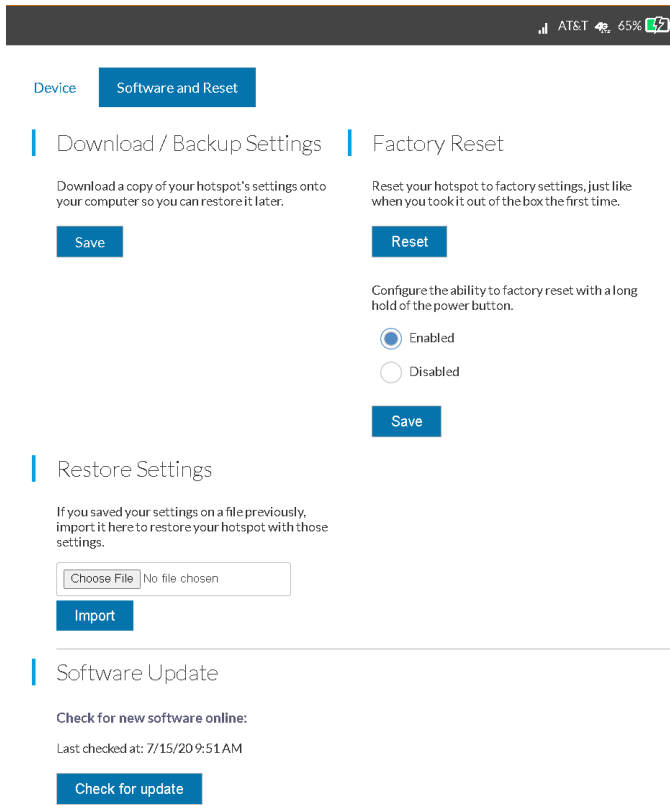

5. Click the **Reset** button.

A message displays telling you that devices currently connected will lose Internet access.

6. Click the **OK** button.

The mobile hotspot returns to its factory settings.

A

Specifications

This appendix covers the following topics:

- [Battery Specifications](#)
- [Display Specifications](#)
- [Environmental Specifications](#)
- [Mechanical Specifications](#)
- [Mobile Band Specifications](#)
- [Package Contents](#)
- [Port Specifications](#)
- [Security Specifications](#)
- [Wi-Fi Specifications](#)

Battery Specifications

Battery specifications:

- Removable Li-ion battery
- Up to 11 hours of continuous usage

Note: 11+ hour battery life is achieved by the following heaviest case: stream YouTube for 1 hour, followed by 30 minutes of idle time, and then repeat for over 11 hours.

Display Specifications

The mobile hotspot includes an 1.77 in. LCD display.

Environmental Specifications

Table 3. Recommended operating and storage temperatures

Environment	Temperature
Operating temperature	0°C to 35°C (32 F to 95°F)
Storage temperature	-10°C to +60°C (14°F to 140°F)

Mechanical Specifications

Table 4. Physical dimensions

Parameter	Dimension
Weight	78 g (2.75 oz) without battery, 136 g (4.80 oz) with battery
Length	110 mm (4.33 in.)
Width	68 mm (2.68 in.)
Thickness	15.4 mm (0.61 in.)

Mobile Band Specifications

Table 5. Mobile Bands

Technology	Band
4G/LTE bands	1, 2, 3, 4, 5, 7, 12, 14, 29, 30, 66
3G fallback support (DC-HSPA+)	850, 1900, 2100

Technology	Band
------------	------

Technology	Band
LTE	1, 3, 7, 8, 20, 28, 38, 40
WCDMA	

Package Contents

Your mobile router package includes the following:

- AT&T Unite Express 2 (AirCard 797S Mobile Hotspot)
- Pre-installed SIM card
- Removable lithium ion battery
- AC charger
- USB cable
- Quick Start Guide

Port Specifications

The mobile router provides one micro-USB 2.0 port.

Security Specifications

Supported security features:

- Content filtering/Parental controls
- Wi-Fi security encryption
- Wi-Fi Protected Setup (WPS)
- VPN pass-through
- NAT firewall
- Password protected administration UI

Wi-Fi Specifications

Wi-Fi support:

- WiFi 802.11ac, 2x2 MIMO
- Dual-Band 2.4/5 GHz, standalone or simultaneous
- WPS (Wi-Fi Protected Setup)