AT&T U-verse℠ TV
Standard Remote Control
User Guide

Section of Contents

Quick Setup Guide
1. How to activate the batteries
2. Setting up your Remote to control other devices (TV/DVD/etc)
   - 2A. Search for Device Codes
   - 2B. Manually Program the Device Codes

Advanced Features Setup
A. Volume or Channel Control Operations
B. Power Control Options
C. Backlight Cancellation Feature
D. Restoring Factory Defaults

Specifications & Notice

Questions & Answer (Q&A)

Care & Maintenance

Setup Codes (Back Page)

AT&T U-verse℠ TV
Standard Remote Control
User Guide

Quick Setup Guide

1. How to activate the batteries (two AA Alkaline batteries have been pre-installed)

STEP 1. Pull the Tab on the back of the Remote Control straight out with one smooth motion.

STEP 2. Press the **AT&T** key. The **AT&T** key will light up if the batteries are working properly. If the **AT&T** key does not light up, please refer to the Questions & Answer (Q&A) of this Guide.

2. Setting up your Remote to control other devices (TV/DVD/etc)

To control other devices, your Remote Control needs to be programmed. The Remote contains the IR codes to control them.

*Start with Section 2A (Search for Device Codes) to find the code for your device.
*If Section 2A is unsuccessful, please refer to Section 2B (Manually Program the Device Codes).

2A. Search for Device Codes

The Search method will scan through all of the IR codes to find one that works with your TV or other device.

STEP 1. Power on the device to be programmed.

STEP 2. Point the remote control at the selected device.

STEP 3. Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **ENTER** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in search mode.

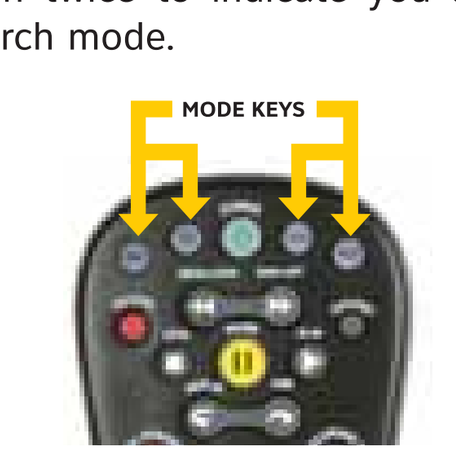

STEP 4. Search by pressing the **SCAN →\FF** key repeatedly until the device turns OFF (the selected mode key will flash once for each press of the **SCAN→\FF** key). Pause briefly between each key press to allow your device enough time to respond.

STEP 5. Press the **POWER** button on the Remote to turn the device back on.

NOTE: If the device does not turn off and you have searched all available codes, the selected mode key will flash 8 times. If this happens, please start over at Step 2 or proceed to 2B (Manually Program the Device Codes).

NOTE: If the device does not turn on, you may have pressed the **SCAN→\FF** key too many times. Press the **REW\←SCAN** key to scan backwards and test the **POWER** button again.

STEP 6. Check **VOLUME** − and + and **MUTE**. Do not test using **REW\←SCAN**, **SCAN→\FF**, **FWD**, **EXIT**. If there is any problem with any of the keys, press the **SCAN→\FF** button and search until you find a code which will operate all the function properly.

STEP 7. Press the **ENTER** key to save the programming. The appropriate mode key will give a long flash indicating successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

If you have an integrated or combination unit such as TV-DVD, TV-DVD-VCR, etc., each component of the unit may need to be programmed separately by using the mode keys. For instance, for a TV-DVD, search for the device code of TV and program into TV mode key, then search for the Device Code of DVD. and program into the DVD mode key.

2B. Manually Program the Device Codes

Use the following steps to setup the TV, DVD or AUX mode keys:

STEP 1. Each device (TV, DVD, VCR, etc.) has its own "code". A list of these 4-digit device setup codes is provided in the back of this Booklet. Make a note of the codes for your devices for quick reference:

TV ______

DVD ______

VCR ______

OTHER ______

The mode keys can only be programmed with codes starting with the number assigned to that device. TV codes must start with "1"; DVD codes "2"; AUX codes "3", "4", "5", or "6".

STEP 2. Power on the device to be programmed.

STEP 3. Press and hold the mode key that matches the device you want to program **TV**, **DVD**, or **AUX** along with the **OK** key. Hold both keys for one second, then release. The four mode keys on the Remote Control flash twice to indicate you are in the programming mode.

STEP 4. Enter the 4-digit Device Code from Step 1 for the desired device using the keypad on the remote.

STEP 5. The appropriate mode key will give a long flash indicating it received the code.

STEP 6. Point the remote control at the selected device and press the **POWER** key to turn off the device and confirm programming. If the device does not turn off, or not all functions work, then start again at Step 1 with the next code in the List. It is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device. Press the POWER key agian to turn the device back on and check other functions.

NOTE: When an invalid code is entered, the selected mode key will flash eight times and the Remote Control will return to its normal operation.

NOTE: If you press any key other than the number keys, the selected mode key will flash eight times and exit programming mode. The same is true if it is inactive for more than 20 seconds. This indicates the remote has left the programming mode and returned to normal operation without saving any changes. You will have to start over again.

Function Keys

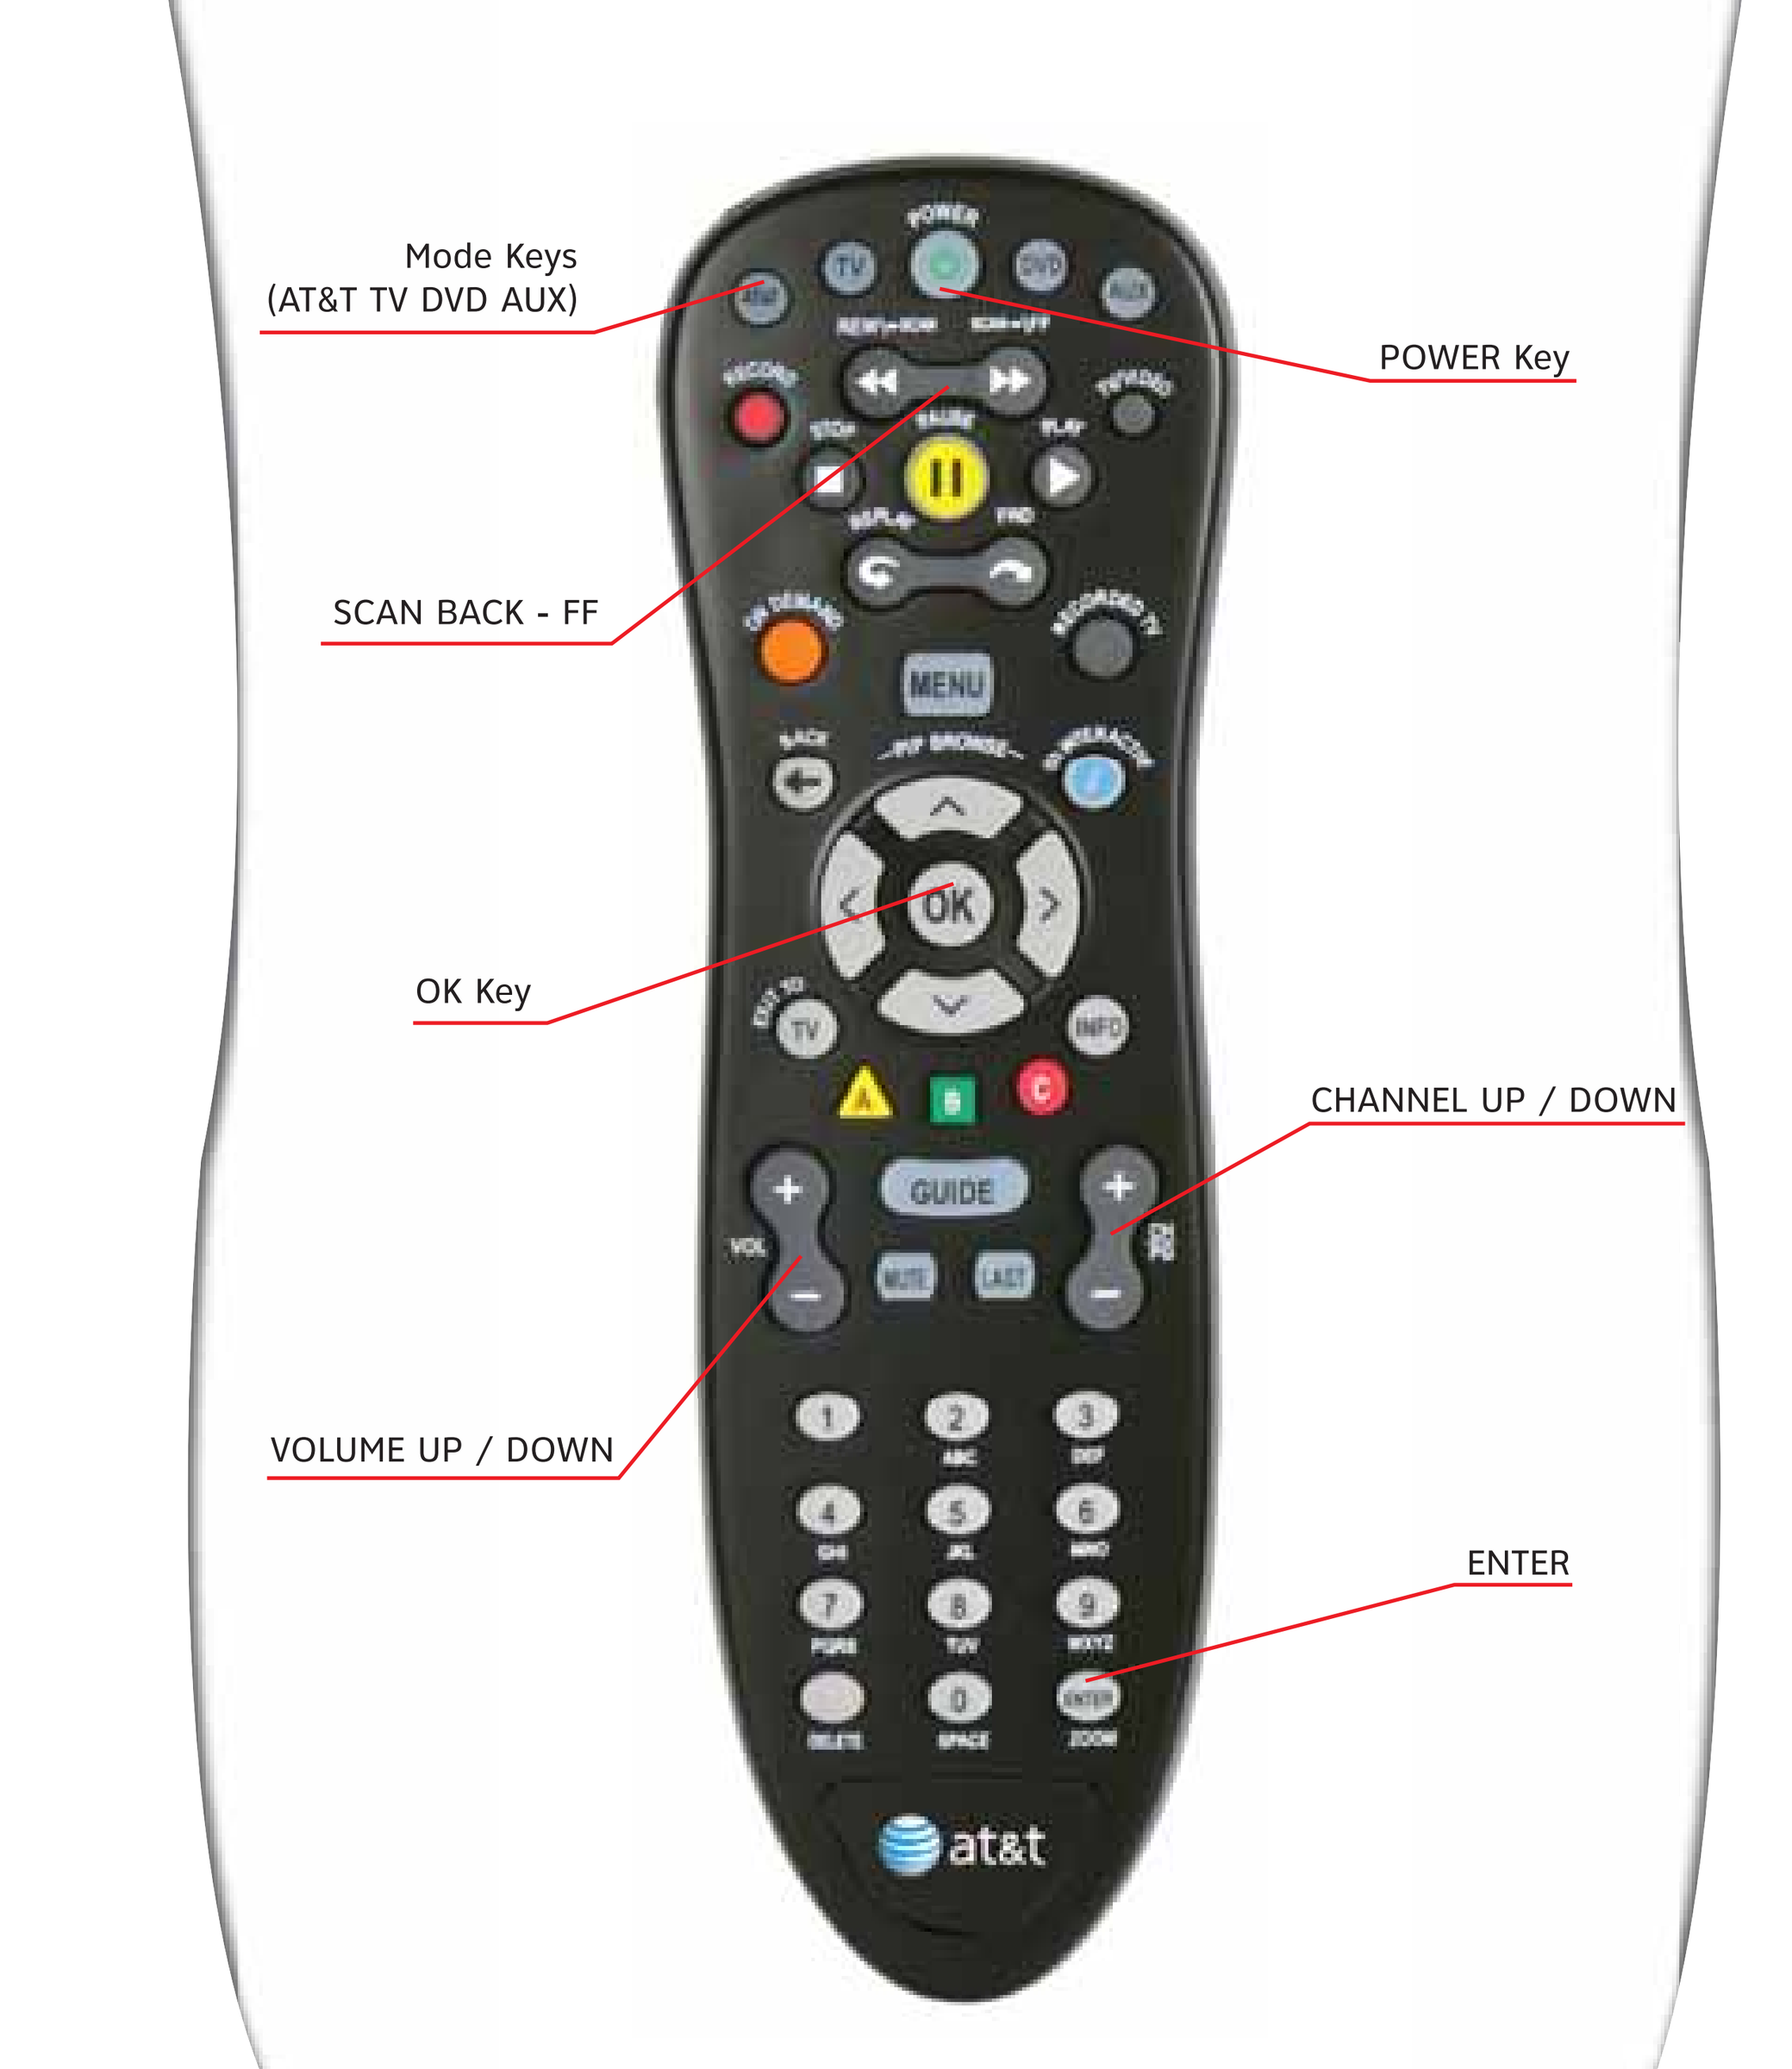

Advanced Features Setup

A. Volume or Channel Control Options

By factory default the Volume and Channel commands are sent to the AT&T U-verse℠ Receiver. Once the TV has been programmed, the **POWER** key will control both the U-verse℠ Receiver and the TV; the Volume controls (**VOL+** or **-**, **MUTE**) will go to the TV, and the Channel controls (**CH +** or **-**, **LAST**, number keys) will be sent to the U-verse℠ Receiver. Once you have programmed a device to a mode key, you can send the volume commands to that device rather than the TV or U-verse℠ Receiver (e.g. a home theatre receiver). Follow the instructions in Section A1 to have the Volume commands always go to one device. If you want the Volume (or Channel) commands to go to a programmed device when it has been selected using the mode key, follow the instructions in A2.

A1. Always Send Volume or Channel Commands to One Device

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the mode key (**TV**, **DVD**, or **AUX**) for the device that you want to always control the volume or channel (e.g. **AUX** for your Home Theater).

STEP 4. The selected mode key (e.g. **AUX**) will give a long flash to confirm successful programming.

A2. Send Volume or Channel Commands only to the Device Mode Selected (e.g. in DVD mode, the DVD player controls the audio, but in TV mode the TV controls the audio)

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 5 5** for volume, or **9 6 6** for channel using the numeric keypad. The **AT&T** key will flash twice to confirm the correct entry.

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

NOTE: The mode key must first have been programmed for your device.

B. Power Control Options

By factory default, the POWER key only operates the AT&T U-verse℠ Receiver. Once you have programmed the TV mode key, both the TV and the AT&T U-verse℠ Receiver will be powered ON and OFF at the same time. In normal operation, you can turn programmed devices ON or OFF individually by pressing the appropriate mode key, and then the POWER key.

B1. To Power Multiple Devices On and Off Simultaneously

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice.

STEP 3. Press the **AT&T** key. The **AT&T** key will flash twice indicating correct entry.

STEP 4. Press the appropriate mode keys (**TV**, **DVD**, or **AUX**) that you wish to also control. The appropriate mode key will flash twice.

NOTE: The mode key must first have been programmed for your device.

STEP 5. Press the **ENTER** key to complete the programming. The last mode key programmed will give a long flash indicating successful programming.

B2. To Power Devices On and Off Independently

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 7 7** using the numeric keypad. The **AT&T** key flashes twice .

STEP 3. Press the **ENTER** key. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C. Backlight Cancellation Feature

Your Remote Control has the ability to turn the keypad backlighting ON or OFF. If you wish to use this feature to extend battery life, follow these instructions.

C1. Turning the Keypad Backlight OFF

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

NOTE: If the programming is interrupted or inactive for more than 20 seconds, the mode keys will flash eight times. This indicates the remote has left the programming mode and returned to normal operation without saving any changes.

C2. Turning the Keypad Backlight ON

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 9 1** using the numeric keypad.

STEP 3. The **AT&T** key will give a long flash to confirm successful programming.

D. Restoring Factory Defaults

Return all programmed codes to Factory Default

STEP 1. Press and hold the **AT&T** key along with the **OK** key. Hold both keys for one second, then release. All the mode key flash twice.

STEP 2. Enter **9 0 0** using the numeric keypad. The **AT&T** key will give a long flash to confirm successful programming. The Remote Control then returns to its normal state.

Specifications & Notice

Model: AT&T U-verse℠ TV Standard Remote Control
IR Range: up to 30"*

*The range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on conditions, and can be less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: battery strength, infrared interference, and obstructions.

The AT&T U-verse℠ TV Standard Remote Control is intended for use only with AT&T's U-verse℠ TV receivers. The Remote Control may not be compatible with all devices or capable of accepting every programming code or operating every function for all devices. See this Guide for further information.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Questions & Answer (Q&A)

Question:
I pulled the tab from the battery compartment and pressed the AT&T key, but it did not light up.

Answer:
Remove the battery door (push the tab up - towards the top of the remote). Check to be sure the batteries are seated and properly installed according to the (+ or -) markings inside the battery compartment.

Question:
The remote does not work or the backlighting is dim

Answer:
Check to be sure the batteries are installed with the correct polarity (see above). Use only Alkaline batteries. Batteries may be weak and need to be replaced.

Question:
I tried to program using "Search for Device Codes", but it failed.

Answer:
You must press the **ENTER** key to "save" the programmed code. Search may not work for all devices. Please refer to Section 2B - Manually Program the Device Codes.

Question:
What should I do when I replace a device after I programmed the mode key?

Answer:
Simply override the code by reprogramming the mode key for the new device (see Quick Start Guide, Section 2A, or Section 2B).

Question:
I have programmed the codes for a device, but some function keys do not work

Answer:
Try using Search for Device Codes (Section 2A) and make sure that the functions work before saving. If you entered the 4-digit device code using Section 2B (Manually Program the Device Codes), it is possible that one device brand may have multiple codes, and you may have to enter several codes before finding the code that works best with your device.

Question:
I have programmed the TV mode key. After pressing the TV key, the Channel keys still control the AT&T U-verse℠ receiver and not the TV.

Answer:
By default, the **CHANNEL** keys (+, −), **Last** (LAST), and number keys on the remote control operate the U-verse℠ receiver.

Question:
I programmed my TV and Home Theater system to come on with my U-verse℠ Receiver, but the Home Theater system turns off when I turn the others on.

Answer:
If any of the devices get out of sync so that some turn ON and others turn OFF, you will need to turn all Devices off. (For the device that is out of sync, use the actual device's power button). When all the devices are OFF, use the **POWER** key on the Remote Control to turn all devices back ON. It is important to point the Remote Control directly toward the devices for this to work properly.

Care & Maintenance

1. Keep the remote control dry. If it gets wet, wipe it dry immediately.

2. Use and store the remote control only in normal temperature environments.

3. Handle the remote control gently and carefully. Don't drop it.

4. Wipe the remote control with a clean cloth occasionally to keep it looking new.

5. Except for the battery door, do not attempt to open, modify or tamper with the internal components of the remote control. This can cause malfunction and void the warranty.

6. Use only Alkaline AA batteries. Do not mix old and new batteries.

7. Replace batteries every 9 months.

AT&T U-verse℠ SETUP CODE List

TV

Abex	1314
Acer	1316
Action	1391, 1553
Admiral	1293, 1315, 1331, 1337
Advent	1040, 1323, 1324
Adventura	1317, 1361
Aiko	1297, 1330
Aiwa	1155, 1164, 1488, 1512
Akai	1043, 1201, 1202, 1247, 1248, 1257, 1265, 1267, 1294, 1345, 1404, 1405
Akura	1375, 1549
Alaron	1365, 1379, 1382
Albatron	1385, 1388
Alleron	1300
A-Mark	1353
Ambassador	1378
America Action	1044, 1380
Ampro	1386
Amtron	1045
Anam	1044, 1380
Anam National	1045, 1295
AOC	1041, 1042, 1043, 1046, 1353, 1359, 1368, 1381, 1440, 1442
AOC Envision	1410
Apex	1012, 1106, 1156, 1433, 1489
Apex Digital	1038, 1268, 1332
Archer	1353
Astar	1400, 1460
Audinac	1380
Audiovox	1044, 1045, 1249, 1330, 1336, 1353, 1380, 1384, 1402, 1436
Aventura	1334
Axion	1161, 1402, 1506
Bang & Olufsen	1401, 1423, 1424
Baysonic	1380
Belcor	1041, 1359, 1442
Bell & Howell	1293, 1302, 1343
Benq	1107, 1116
Boxlight	1387
BPL	1382
Bradford	1044, 1045, 1380
Brillian	1078, 1418
Brockwood	1041, 1359 1442
Broksonic	1044, 1157, 1267, 1291, 1337, 1353, 1432, 1494
Bydsign	1396, 1450
Candle	1041, 1042, 1043, 1296, 1317, 1361, 1370, 1442
Carnivale	1043
CCE	1364, 1365, 1366, 1447
Celebrity	1027, 1294
Celera	1038
Centurion	1041
Changhong	1038, 1406, 1407, 1408
Cineral	1384
Citizen	1039, 1041, 1042, 1043, 1045, 1047, 1296, 1297, 1311, 1330, 1361, 1367, 1370, 1442
Clairtone	1381
Clarion	1044, 1380
Coby	1158, 1250, 1409, 1498
Colortyme	1041, 1042, 1442
Commercial Solutions	1326
Concerto	1041, 1042, 1370, 1442
Contec	1044, 1377, 1380, 1381
Contec/Cony	1045, 1049
Craig	1044, 1045, 1380
Crosley	1048, 1425
Crown	1044, 1045, 1306, 1367, 1380
CTX	1108, 1567
Curtis Mathes	1000, 1041, 1042, 1043, 1047, 1048, 1302, 1311, 1326, 1331, 1336, 1342, 1343, 1345, 1367, 1370, 1384, 1425, 1442
CXC	1044, 1045, 1380
Cytron	1110, 1398, 1475
Daewoo	1014, 1039, 1041, 1042, 1046, 1047, 1061, 1212, 1277, 1297, 1330, 1336, 1359, 1367, 1384, 1442
Daytron	1041, 1042, 1047, 1359, 1442
De Graaf	1382
Dell	1177, 1178, 1416, 1417, 1528, 1529
Denon	1342, 1544
DiamondVision	1451, 1478, 1479
Dimensia	1000
Dumont	1041, 1313, 1325, 1359, 1442
Durabrand	1035, 1037, 1041, 1044, 1334, 1337, 1353, 1380
Dwin	1331
Dynex	1040
Electroband	1027, 1294, 1381
Electrograph	1340
Electrohome	1041, 1042, 1294, 1295, 1442
Elite	1481
Emerson	1014, 1017, 1028, 1039, 1041, 1042, 1044, 1045, 1047, 1049, 1251, 1264, 1271, 1291, 1298, 1299, 1300, 1302, 1320, 1334, 1337, 1343, 1359, 1365, 1367, 1378, 1379, 1380, 1381, 1442, 1454, 1468
Emprex	1399, 1466
Envision	1041, 1042, 1043, 1442
Epson	1199, 1339
ESA	1334
Finlandia	1382
Finlux	1374
Fisher	1109, 1301, 1302, 1343, 1382
Frontech	1375
Fujitsu	1213, 1228, 1229, 1230, 1231, 1300, 1379, 1570
Funai	1017, 1044, 1045, 1099, 1287, 1300, 1334, 1379, 1380, 1406, 1407, 1408
Futuretec	1044, 1045, 1375, 1380
Gateway	1030, 1103, 1340, 1346, 1472
GE	1000, 1011, 1041, 1042, 1165, 1288, 1289, 1295, 1303, 1305, 1326, 1328, 1336, 1384, 1442, 1516
Go Video	1393
Goldstar	1041, 1042, 1043, 1046, 1047, 1049, 1290, 1314, 1359, 1442
Gradiente	1369, 1370, 1371, 1372, 1373, 1448
Granada	1382
Great Wall	1028
Grundig	1364
Grundy	1044, 1045, 1300, 1379, 1380
Haier	1037
Hallmark	1041, 1042, 1442
Hannspree	1482, 1483, 1484
Harley Davidson	1287, 1379
Harman/Kardon	1048, 1362
Harvard	1044, 1045, 1380
Havermy	1331
Helios	1390, 1532, 1533
Hello Kitty	1336, 1384
Hewlett Packard	1429, 1435, 1438, 1480
Himitsu	1355, 1380
Hisense	1179, 1338, 1530
Hitachi	1013, 1041, 1042, 1049, 1054, 1132, 1166, 1207, 1222, 1232, 1238, 1287, 1327, 1333, 1342, 1370, 1374, 1442
HP	1395, 1435, 1438, 1480
Hypson	1375, 1517, 1559, 1573
Hyundai	1350, 1351, 1352
ICE	1375, 1534, 1562
iLO	1020, 1032, 1453, 1457, 1464
IMA	1045
iNET-TV	1033, 1499, 1519, 1520
Infinity	1048, 1306, 1425
InFocus	1387, 1473
Initial	1020
Insignia	1034, 1035, 1040, 1398, 1465
Inteq	1325
Intervision	1375
JBL	1048, 1306, 1425
JC Penney	1000, 1041, 1042, 1046, 1047, 1296, 1303, 1305, 1311, 1314, 1442
JCB	1027, 1294
Jensen	1041, 1042, 1110, 1324, 1442
JVC	1008, 1049, 1053, 1062, 1111, 1112, 1113, 1114, 1115, 1159, 1167, 1168, 1180, 1181, 1182, 1208, 1305, 1307, 1329, 1369
Kawasho	1041, 1042, 1294, 1442
Kaypani	1368
KEC	1044, 1380
Kenwood	1041, 1042, 1043, 1240, 1359, 1442
KLH	1038
Kloss	1360, 1361, 1362
Kloss Novabeam	1045, 1317
Konka	1341
KTV	1043, 1044, 1045, 1047, 1365, 1367, 1380, 1381
Leyco	1375
LG	1009, 1024, 1036, 1041, 1046, 1160, 1200, 1370, 1385, 1428, 1442
Lloyd's	1287, 1500, 1548
Local India TV	1382
Loewe	1306, 1535, 1554, 1556, 1558
Logik	1293
Luxman	1041, 1042, 1370, 1442
LXI	1000, 1041, 1042, 1048, 1302, 1306, 1326, 1332, 1343, 1376, 1425
M Electronic	1374
Magnasonic	1039
Magnavox	1020, 1041, 1042, 1043, 1048, 1103, 1117, 1118, 1119, 1129, 1183, 1203, 1264, 1278, 1279, 1281, 1287, 1296, 1306, 1360, 1379, 1425, 1440, 1442
Magnin	1288, 1555
Majestic	1293, 1504, 1526
Manesth	1375
Marantz	1041, 1042, 1043, 1048, 1306, 1322, 1364, 1425, 1442, 1445, 1470
Matsui	1382
Matsushita	1335, 1531, 1561
Maxent	1340, 1455
Megapower	1385
Megatron	1041, 1042, 1342, 1353
MEI	1381
Memorex	1017, 1041, 1042, 1046, 1123, 1260, 1286, 1290, 1293, 1302, 1337, 1343, 1379, 1442
MGA	1041, 1042, 1043, 1046, 1288, 1359, 1442
Midland	1047, 1305, 1313, 1314, 1325, 1326, 1328, 1367
Mintek	1020
Minutz	1303, 1536, 1537
Mitsubishi	1016, 1041, 1042, 1046, 1063, 1064, 1065, 1120, 1205, 1206, 1289, 1331, 1359, 1442
Monivision	1385, 1388
Montgomery Ward	1293
Motorola	1295, 1315, 1331
MTC	1041, 1042, 1043, 1046, 1311, 1359, 1370, 1381, 1442
Multitech	1044, 1045, 1365, 1380
Multivision	1308
NAD	1041, 1042, 1318, 1332, 1364, 1370, 1376
NEC	1041, 1042, 1043, 1046, 1184, 1295, 1322, 1359, 1370, 1371, 1442, 1469
Netsat	1364, 1539
NET-TV	1096, 1103, 1340, 1455
Nikkai	1375
Nikko	1041, 1042, 1043, 1297, 1330
Norcent	1090, 1338, 1440, 1540, 1560
Noshi	1358
NTC	1297, 1330, 1541, 1564
Olevia	1029, 1419, 1420, 1421, 1439, 1443
Onwa	1044, 1045, 1380
Oppo	1477, 1563, 1568, 1569
Optimus	1286, 1318, 1335, 1343
Optoma	1474
Optonica	1309, 1315, 1331
Orion	1035, 1291, 1299, 1320, 1337, 1379
Osaki	1375
Panama	1375, 1542, 1545
Panasonic	1003, 1022, 1050, 1051, 1055, 1056, 1059, 1066, 1067, 1121, 1122, 1185, 1215, 1224, 1235, 1236, 1239, 1241, 1243, 1244, 1245, 1246, 1252, 1253, 1261, 1266, 1270, 1274, 1275, 1276, 1285, 1286, 1292, 1295, 1304, 1305, 1306, 1310, 1328, 1335, 1344
Panavision	1280, 1485, 1506, 1507, 1521, 1522
Penney	1041, 1043, 1288, 1290, 1326, 1328, 1332, 1353, 1358, 1359, 1367, 1376
Philco	1000, 1041, 1042, 1043, 1046, 1048, 1049, 1123, 1295, 1296, 1306, 1359, 1425, 1442
Philips	1001, 1020, 1021, 1041, 1048, 1049, 1058, 1068, 1069, 1099, 1124, 1125, 1126, 1127, 1128, 1129, 1186, 1209, 1278, 1281, 1295, 1296, 1306, 1356, 1357, 1364, 1425, 1442
Philips Magnavox	1001, 1048, 1117, 1118, 1126, 1127, 1128, 1129, 1130
Pilot	1041, 1043, 1047, 1359, 1367, 1442
Pioneer	1018, 1041, 1042, 1070, 1217, 1218, 1219, 1318, 1321, 1347, 1426, 1427, 1434, 1442, 1481
Plasmsync	1322, 1470
Polaroid	1038, 1187, 1188, 1225, 1258, 1273, 1390, 1398, 1422, 1437, 1444
Portland	1041, 1042, 1046, 1047, 1297, 1330, 1359, 1367, 1442
Price Club	1311, 1486, 1490, 1491
Prima	1237, 1323, 1324, 1446, 1449, 1476
Princeton	1385
Prism	1305, 1328, 1492, 1493, 1524, 1525
Proscan	1000, 1326
Protech	1375
Proton	1041, 1042, 1049, 1353, 1363, 1368, 1442
Protron	1397, 1431, 1462
Proview	1033, 1422, 1463
Pulsar	1041, 1313, 1325, 1359, 1442
Pye	1356, 1546, 1557, 1574
Quasar	1274, 1285, 1286, 1295, 1305, 1328, 1335
Radio Shack	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1287, 1302, 1309, 1314, 1326, 1343, 1359, 1367, 1370, 1380, 1442
RCA	1000, 1002, 1041, 1042, 1046, 1133, 1134, 1161, 1162, 1169, 1170, 1269, 1288, 1289, 1295, 1321, 1326, 1347, 1358, 1359, 1442
Realistic	1000, 1041, 1042, 1043, 1044, 1045, 1047, 1049, 1302, 1309, 1314, 1343, 1359, 1367, 1370, 1380, 1442
Rex	1375, 1497, 1501
Rhapsody	1365, 1381, 1494, 1508
Roadstar	1375
Runco	1043, 1313, 1325
Saisho	1375
Sampo	1041, 1042, 1043, 1047, 1060, 1103, 1135, 1314, 1340, 1367, 1368, 1442, 1452
Samsung	1006, 1026, 1041, 1042, 1043, 1046, 1047, 1049, 1081, 1082, 1083, 1084, 1085, 1100, 1136, 1137, 1138, 1139, 1171, 1176, 1189, 1214, 1223, 1311, 1314, 1345, 1359, 1364, 1366, 1370, 1375, 1442
Samsux	1367
Sansei	1384, 1547, 1550, 1551, 1572
Sansui	1035, 1157, 1163, 1257, 1267, 1287, 1291, 1320, 1337
Sanyo	1025, 1041, 1109, 1288, 1301, 1302, 1343, 1382, 1442
Sceptre	1392 1467
Schneider	1357, 1495, 1496
Scimitsu	1359
Scotch	1041, 1042, 1502, 1503, 1543, 1552, 1571
Scott	1041, 1042, 1044, 1045, 1049, 1299, 1300, 1359, 1379, 1380, 1403, 1442, 1458
Sears	1000, 1041, 1042, 1048, 1078, 1287, 1290, 1300, 1301, 1302, 1307, 1319, 1326, 1332, 1334, 1343, 1370, 1376, 1379, 1425, 1442
SEG	1375
Semivox	1380
Semp	1376, 1505, 1509, 1510
Sharp	1007, 1041, 1042, 1047, 1049, 1071, 1072, 1086, 1097, 1131, 1190, 1191, 1192, 1221, 1242, 1282, 1309, 1315, 1331, 1367, 1377, 1442
Sheng Chia	1331
Shogun	1041, 1359, 1442
Signature	1293
Simpson	1296, 1511, 1513, 1518
SKY	1364
Sonitron	1382, 1487, 1514
Sonolor	1382
Sony	1004, 1023, 1027, 1073, 1074, 1075, 1079, 1080, 1140, 1141, 1142, 1143, 1144, 1145, 1193, 1198, 1220, 1227, 1233, 1234, 1259, 1287, 1294, 1348, 1349
Soundesign	1041, 1042, 1044, 1045, 1296, 1300, 1379, 1380, 1442
Sova	1397
Soyo	1411
Spectricon	1353
Squareview	1319, 1334
SSS	1041, 1044, 1045, 1359, 1380, 1442
Starlite	1044, 1045, 1380
Studio Experience	1388
SuperScan	1088, 1226, 1264, 1331, 1413
Supre-Macy	1317, 1361
Supreme	1027 1294, 1538, 1566
SVA	1204 1390
Sylvania	1017, 1041, 1042, 1043, 1048, 1099, 1128, 1146, 1172, 1255, 1262, 1264, 1271, 1279, 1284, 1296, 1306, 1334, 1425, 1442, 1454
Symphonic	1015, 1044, 1045, 1287, 1298, 1319, 1334, 1380
Syntax	1029, 1419, 1420, 1421
Syntax-Brillian	1078
Tandy	1315, 1331
Tatung	1030, 1295, 1346, 1353, 1456, 1471
Teac	1375
Technics	1305, 1328, 1335
Technol Ace	1379
Techview	1389
Techwood	1041, 1042, 1305, 1328, 1353, 1370, 1442
Teco	1394
Teknika	1041, 1042, 1044, 1045, 1046, 1047, 1048, 1049, 1293, 1296, 1297, 1300, 1311, 1330, 1359, 1367, 1370, 1379, 1380, 1425, 1442
Telecaption	1312
Telefunken	1345, 1370
Tera	1363, 1515, 1523
Thomas	1287
Thomson	1000, 1383
TMK	1041, 1042, 1370, 1378, 1442
Tophouse	1380
Toshiba	1010, 1098, 1104, 1147, 1148, 1149, 1150, 1151, 1173, 1174, 1210, 1215, 1256, 1257, 1263, 1267, 1272, 1302, 1311, 1312, 1322, 1332 1343, 1376
Tosonic	1381
Totevision	1047, 1367
Trical	1377
Trutech	1194, 1527, 1560, 1565
TVS	1337
Universal	1303
Universum	1374, 1375
Vector Research	1043
Venturer	1412
Victor	1307, 1329, 1369
Vidikron	1048, 1425
Vidtech	1041, 1042, 1046, 1359, 1442
Viewsonic	1019, 1087, 1088, 1089, 1090, 1091, 1092, 1093, 1094, 1095, 1103, 1216, 1232, 1340, 1410, 1413, 1414, 1441
Viking	1317, 1361
Viore	1031, 1032, 1457
Vizio	1009, 1030, 1346, 1413, 1414, 1415, 1459, 1461
Wards	1000, 1041, 1042, 1043, 1046, 1048, 1293, 1298, 1300, 1303, 1306, 1309, 1359, 1370, 1379, 1425, 1442
Waycon	1332, 1376
Westinghouse	1019, 1027, 1195, 1196, 1336, 1414, 1430, 1433
White Westinghouse	1014, 1337
Yamaha	1041, 1042, 1043, 1046, 1359, 1442
Yoko	1375
Zenith	1005, 1041, 1052, 1054, 1057, 1076, 1077, 1101, 1102, 1105, 1152, 1153, 1154, 1175, 1197, 1211, 1283, 1287, 1291, 1293, 1313, 1325, 1330, 1337, 1442
Zonda	1353, 1354, 1355

DVD / Blue Ray DVD

3D Lab	2432
Accele Vision	2456, 2476, 2488
Acoustic Solutions	2439
Advent	2137, 2416
AEG	2445
Aim	2435, 2437
Airis	2435
Aiwa	2030, 2209, 2490
Akai	2033, 2058, 2210, 2211, 2212, 2407, 2436, 2438, 2442, 2445
Akira	2437
Alba	2432, 2435, 2436, 2437, 2439, 2444
Alco	2135
Allegro	2413, 2489
Alpine	2026
Amphion MediaWorks	2031, 2141
Amstrad	2439
AMW	2141
Apex	2004, 2074, 2171, 2213, 2214, 2215, 2451, 2473
Apex Digital	2126, 2151, 2152, 2216, 2435
Aristona	2432
Argo	2417, 2491, 2492, 2493
Aspire Digital	2140
Astar	2458, 2477
Audiologic	2406
Audiovox	2029, 2075, 2078, 2135, 2153, 2154, 2155, 2172, 2206, 2423
Autovox	2439
Axion	2423, 2467
B & K	2401
Bang & Olufsen	2431
Basic Line	2439
Bel Canto Design	2430
Black Diamond	2439, 2442
Blaupunkt	2019, 2152
Blue Parade	2149
Blue Sky	2434, 2435, 2436, 2437, 2439
Boman	2444
BOSE	2032, 2070, 2471, 2472
BOSS	2457
Brandt	2434, 2494, 2497
Broksonic	2033, 2058, 2083, 2436
Bush	2435, 2437, 2439, 2440
California Audio Labs	2056
Cambridge SoundWorks	2173, 2404
Cat	2437
CAVS	2420
Centrex	2435
Centrum	2439
Changhong	2439
ChongKong	2447
Cinetec	2018
cineULTRA	2439
CineVision	2437
Citizen	2413, 2414, 2453
Clarion	2436
Classic	2034, 2495, 2496
Clatronic	2035, 2174
Clayton	2435, 2445, 2562, 2564
Coby	2439, 2071, 2138, 2139, 2217, 2218, 2448
Conia	2435
Contel	2445
Creative	2432
Crown	2439
Curtis Mathes	2426, 2548, 2551, 2556
CyberHome	2006, 2417, 2427
Cytron	2434, 2438, 2466, 2555, 2570
Daewoo	2015, 2036, 2084, 2219, 2407, 2413, 2438
Dalton	2446
Dansai	2444
Dantax	2432, 2439, 2440
Denon	2003, 2013, 2056, 2069, 2220, 2221, 2222, 2223, 2224, 2225, 2452
Denver	2435, 2437, 2445, 2536, 2538
Desay	2037
Dgtec	2435
Diamond	2434, 2443
Diamond Vision	2463, 2470
Digihome	2439
DigiLogic	2439
Digitor	2434
Digitrex	2435
Dinamic	2445
Disney	2054, 2449
DiViDo	2438
DMTech	2444
Dual	2422, 2434, 2439, 2444
Durabrand	2439
DVD 2000	2148
DVX	2443
Eclipse	2440
Elfunk	2439
Elta	2435, 2445, 2537, 2546, 2565
Eltax	2442
Emerson	2018, 2038, 2054, 2066, 2085, 2116, 2129, 2132, 2226, 2400, 2438, 2465
Enterprise	2400
Entivo	2432
Enzer	2442
ESA	2039
EuroLine	2445
Fenner	2434
Ferguson	2434, 2436, 2439, 2560, 2561, 2571
Finlux	2435, 2441, 2444
Firstline	2434, 2439
Fisher	2040
Funai	2018, 2054, 2129, 2436, 2447
Gateway	2158
GE	2062, 2152, 2227, 2228
Global Solutions	2443
Go Video	2028, 2086, 2087, 2088, 2089, 2090, 2092, 2120, 2123, 2127, 2158, 2229, 2413, 2433, 2441, 2444, 2455
Go Vision	2423
Goldstar	2091, 2441
Goodmans	2434, 2439, 2440, 2444
GPX	2041, 2437, 2441, 2474
Gradiente	2056, 2434, 2459
Grandin	2439
Greenhill	2152
Grundig	2060, 2432, 2434, 2436, 2438, 2439, 2446
H & B	2439
Hanseatic	2441, 2444
Harman/Kardon	2042, 2230, 2231
HCM	2445
HDT	2438
Henss	2439
Hitachi	2005, 2014, 2059, 2093, 2094, 2095, 2232, 2233, 2433, 2436, 2439
Hiteker	2151, 2435
Hoeher	2434, 2439
Hyundai	2442, 2444, 2547, 2552, 2553
iLab	2062, 2549, 2550
iLive	2475
iLO	2075
Ingelen	2445
Initial	2152, 2234
Inno Hit	2439
Insignia	2019, 2130, 2156, 2175 2478
Integra	2133, 2149
Irradio	2235
IRT	2444
ISP	2436
Jamo	2446, 2539, 2542, 2543
Jaton	2424
JBL	2176
Jeken	2437
Jensen	2139, 2416
Jeutech	2442
JMB	2436
JNC	2435
JVC	2007, 2067, 2096, 2097, 2098, 2099, 2100, 2150, 2177, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2255, 2256, 2257, 2432
Karcher	2444
Kawasaki	2135
Kendo	2435, 2437, 2439
Kennex	2439
Kenwood	2003, 2025, 2056, 2220, 2258, 2259, 2260, 2261, 2262, 2263
KLH	2017, 2135, 2152, 2461
Konka	2264
Koss	2020, 2068, 2134, 2143, 2265, 2434
Landel	2410
Lasonic	2043
Lawson	2443
Lenco	2434, 2437, 2439
Lenoxx	2142
Lexia	2437, 2443, 2568, 2569
Lexicon	2402
LG	2016, 2101, 2266, 2267, 2268, 2400, 2413, 2441, 2479
Lifetec	2434
Limit	2443
Liquid Video	2143
Liteon	2063, 2158, 2269, 2270
Lodos	2439
Loewe	2398, 2432, 2441, 2576, 2577
Logik	2439
Logix	2438, 2444
Lumatron	2436, 2438, 2439, 2441
Lunatron	2441
Luxman	2433, 2573
Luxor	2439
Magnasonic	2434
Magnavox	2010, 2024, 2054, 2060, 2104, 2132, 2147, 2234, 2432, 2439
Magnex	2440
Malata	2408, 2439
Manhattan	2438, 2439
Marantz	2023, 2060, 2271, 2432
Mark	2439
Matsui	2434, 2435, 2436, 2439, 2563, 2567
Maxdorf	2445
Maxim	2439
MDS	2439
Medion	2434, 2444
Memorex	2021, 2058, 2272, 2273, 2436, 2449, 2480
Metz	2439
MiCO	2440
Micromedia	2432
Micromega	2432
Microsoft	2062
Minax	2439, 2554, 2557, 2558, 2559
Minerva	2438
Mintek	2075, 2152, 2234, 2411, 2529, 2531, 2532
Mitsubishi	2011, 2146, 2148, 2274, 2275, 2439
Momitsu	2425
Mx Onda	2434
NAD	2038, 2044, 2441
Nakamichi	2045
NEC	2000, 2441
Nesa	2152
Next Base	2410
NexxTech	2428, 2460
Norcent	2027, 2138, 2276, 2277, 2513, 2514
Olidata	2435
Onkyo	2022, 2133, 2147, 2178, 2179, 2180
Oppo	2399, 2462, 2469
Orion	2436
Oritron	2134, 2143, 2434
Ormond	2439
Pacific	2436, 2439, 2443
Palladium	2436, 2439, 2515, 2516, 2517
Palsonic	2435
Panasonic	2003, 2056, 2077, 2080, 2081, 2102, 2103, 2128, 2147, 2165, 2166, 2181, 2182, 2183, 2184, 2185, 2186, 2207, 2208, 2220, 2221, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2481
Philco	2404, 2445
Philips	2002, 2010, 2054, 2057, 2060, 2104, 2116, 2129, 2147, 2187, 2188, 2234, 2235, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2402, 2432, 2482, 2487
Phonotrend	2437
Pioneer	2009, 2072, 2131, 2144, 2149, 2167, 2189, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319
Polaroid	2031, 2046, 2126, 2157, 2320, 2321, 2322
Polk Audio	2060, 2432
Portland	2407
Presidian	2054, 2129
Prima	2416, 2442, 2468
Prima Elec	2442, 2510, 2511
Princeton	2403
Prism	2438
Proceed	2151, 2435
Proline	2434, 2435
Proscan	2062, 2323, 2324, 2522, 2524
Proson	2439
Prosonic	2437
ProVision	2437
PYE	2432, 2464
Qwestar	2047, 2134, 2434
Radionette	2441
RCA	2008, 2019, 2062, 2076, 2105, 2122, 2135, 2149, 2152, 2190, 2227, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332
REC	2442
Redstar	2445, 2512, 2525, 2526
Regent	2142
Reoc	2443
Revoy	2437
Rio	2413
Roadstar	2435, 2437, 2439
Rotel	2150
Rowa	2136
Saba	2434, 2509, 2518, 2519, 2520
Salora	2441
Sampo	2333, 2527, 2528, 2530
Samsung	2005, 2056, 2059, 2082, 2106, 2107, 2108, 2109, 2120, 2124, 2127, 2191, 2192, 2193, 2194, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2433, 2483
Sansui	2033, 2058, 2110, 2344, 2345, 2436, 2443
Sanyo	2048, 2058, 2111, 2195, 2436, 2439, 2521, 2523
Scan	2438
Schaub Lorenz	2445
Schneider	2432, 2434, 2438, 2439, 2444, 2445
Scientific Labs	2443
Scott	2434, 2435, 2446
SEG	2439
Sensory Science	2158
Shanghai	2435
Sharp	2012, 2054, 2073, 2112, 2113, 2114, 2168, 2169, 2346, 2347, 2348, 2349, 2350, 2439
Sharper Image	2427
Sherwood	2049, 2196, 2407, 2441
Shinco	2019
Shinsonic	2145, 2411
Sigma Designs	2403
Silva	2445
Singer	2443
Sistemas	2435, 2533, 2534, 2535
Skantic	2432, 2439
Skymaster	2443
Skysonic	2442, 2544, 2566
Skyworth	2443
SM Electronic	2443
Smart	2438, 2439
Sonic Blue	2413, 2433, 2444
Sony	2001, 2055, 2115, 2125, 2145, 2197, 2198, 2199, 2200, 2201, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2433, 2434, 2484
Soundmaster	2443
Soundmax	2443
Soundwave	2444
Standard	2434, 2443, 2445
Strong	2439, 2502, 2503
Sungale	2050
Sunwood	2445
Superscan	2132, 2374
Supervision	2443
SVA	2412, 2435
Sylvania	2018, 2054, 2064, 2116, 2129, 2132, 2170, 2372, 2373, 2374, 2375
Symphonic	2018, 2054, 2129
Synn	2443, 2504, 2505, 2507
Tandberg	2439
Tchibo	2441
TCM	2441
Teac	2075, 2135, 2441, 2443
Technics	2056, 2220, 2572, 2574, 2575
Technosonic	2405
Techwood	2051, 2439
Tedelex	2443
Teletech	2439, 2443
Tensai	2434
Terapin	2419
Tevion	2434, 2443, 2446, 2501, 2506, 2508
Theta Digital	2149
Tivo	2429
Tokai	2445
Toshiba	2002, 2016, 2033, 2058, 2079, 2117, 2118, 2121, 2147, 2159, 2160, 2161, 2162, 2163, 2164, 2202, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2429, 2432, 2433, 2436, 2450, 2485
Tredex	2409
Trutech	2006, 2499
TYT	2438
United	2436, 2437, 2439, 2445
Universum	2439, 2441, 2540, 2541, 2545
Urban Concepts	2147, 2432
US Logic	2135, 2203
Venturer	2439
Vestel	2439
Vieta	2438
Vizio	2421, 2486
Vocopro	2418
Wellington	2439
Weltstar	2439
Wesder	2437, 2500
Westinghouse	2454
Windsor	2439
Windy Sam	2433
Xbox	2062
XLogic	2443
XMS	2445, 2498
Xwave	2415
Yamaha	2003 2052 2056 2060 2065 2204 2205 2392 2393 2394 2395 2396 2432
Zenith	2002 2016 2053 2061 2119 2147 2266 2397 2400 2413 2441

Video Cassette Recorder (VCR) Digital Video Recorder (DVR)

ABS	3184
Adventura	3045, 3152
Aiwa	3045, 3090, 3091, 3152, 3153
Akai	3052, 3132, 3154
Alienware	3184
Allegro	3161
American High	3042
Apex Digital	3084
Asha	3044
Audio Dynamics	3047
Audiovox	3036, 3043, 3153
Bang & Olufsen	3162, 3164, 3196
Beaumark	3044
Bell & Howell	3046
Broksonic	3017, 3054, 3078, 3150, 3158, 3165
Calix	3043, 3153
Candle	3043, 3044
Canon	3042
Changhong	3163
CineVision	3161, 3167
Citizen	3043, 3044, 3149, 3153
Colortyme	3047
Craig	3043, 3044, 3153, 3160
Curtis Mathes	3003, 3042, 3044, 3047, 3154
Cybernex	3044
CyberPower	3184
Daewoo	3015, 3045, 3055, 3134, 3149, 3161
DBX	3047
Dell	3184
Denon	3155
DiamondVision	3168
DigiFusion	3176
Dimensia	3003
DirecTV	3194, 3195, 3197
Durabrand	3049
Dynatech	3045, 3152
Electrohome	3043, 3153
Electrophonic	3043, 3153
Emerson	3018, 3042, 3043, 3045, 3050, 3056, 3131, 3149, 3150, 3152, 3153, 3158
ESA	3027, 3161
Fisher	3012, 3046, 3160
Fuji	3042, 3052
Funai	3029, 3045, 3048, 3050, 3152, 3163
Garrard	3045, 3152
Gateway	3184
GE	3003, 3042, 3044, 3051, 3092, 3147
Go Video	3016, 3038, 3039, 3057, 3058, 3060, 3061, 3085, 3161
Goldstar	3043, 3047, 3059, 3148, 3153, 3161
Gradiente	3045, 3152, 3161
Grundig	3159
Harley Davidson	3045, 3048, 3152
Harman/Kardon	3047, 3157
Headquarter	3046
Hewlett Packard	3184
HI-Q	3160
Hitachi	3018, 3048, 3056, 3062, 3093, 3152, 3154, 3155
Howard Computers	3184
HP	3184
Hughes Network	3155, 3194
Humax	3189, 3194
Hush	3184
iBUYPOWER	3184
iLO	3190
Insignia	3088
Instant Replay	3042
JC Penney	3042, 3043, 3044, 3046, 3047
JCL	3042
Jensen	3154
JVC	3002, 3019, 3031, 3041, 3046, 3047, 3063, 3064, 3065, 3066, 3067, 3094, 3095, 3103, 3104, 3105, 3106, 3154
KEC	3153
Kenwood	3046, 3047, 3154
Kodak	3042, 3043, 3153
LG	3043, 3059, 3088, 3153, 3161, 3191
Linksys	3184
LiteON	3190
Lloyd's	3045, 3048, 3152
LXI	3043, 3153
Magnasonic	3149
Magnavox	3004, 3014, 3020, 3042, 3048, 3049, 3131, 3135, 3137, 3152
Magnin	3043, 3051
Marantz	3042, 3046, 3047
Marta	3043, 3153
Matsushita	3042
Media Center PC	3184
Medion	3190
MEI	3042
Memorex	3013, 3042, 3043, 3044, 3045, 3046, 3049, 3078, 3107, 3126, 3148, 3152, 3153, 3160
MGA	3051
MGN Technology	3044
Microsoft	3184
Mind	3184
Minolta	3155
Mitsubishi	3009, 3108, 3147, 3157
Motorola	3042
MTC	3044, 3152
Multitech	3044, 3045, 3152
NEC	3046, 3047, 3154
Nikko	3043, 3153
Niveus Media	3184
Noblex	3044
Northgate	3184
Olympus	3042
Optimus	3043, 3153
Optonica	3156
Orion	3013, 3150, 3158
Panasonic	3000, 3021, 3037, 3042, 3068, 3069, 3086, 3087, 3117, 3120, 3123, 3124, 3125, 3127, 3133, 3136, 3144, 3145, 3172, 3186
Penney	3051, 3148, 3153, 3155
Pentax	3155
Philco	3042
Philips	3004, 3022, 3042, 3050, 3137, 3138, 3156, 3171, 3181, 3187, 3194
Philips Magnavox	3004
Pilot	3043, 3153
Pioneer	3023, 3193
Polaroid	3024, 3084, 3118
Presidian	3050
Proscan	3003, 3011, 3109
Pulsar	3049
Pye	3166
Quarter	3046
Quartz	3046
Quasar	3042, 3145
Radio Shack	3042, 3043, 3044, 3045, 3046, 3048, 3152
Radix	3043, 3153
Randex	3043, 3153
RCA	3003, 3025, 3040, 3042, 3044, 3051, 3080, 3089, 3096, 3097, 3110, 3111, 3128, 3147, 3155, 3174, 3195, 3197
Realistic	3042, 3043, 3044, 3045, 3046, 3152, 3153, 3156, 3160
ReplayTV	3173, 3185, 3186
Ricoh	3053
Rio	3161
Runco	3049
Salora	3157
Samsung	3016, 3026, 3038, 3044, 3070, 3081, 3085, 3098, 3121, 3192, 3194
Sanky	3049
Sansui	3013, 3028, 3048, 3078, 3150, 3152, 3154
Sanyo	3012, 3030, 3044, 3046, 3051, 3160
Scott	3158
Sears	3042, 3043, 3046, 3048, 3148, 3152, 3153, 3155, 3160
Sharp	3005, 3032, 3071, 3072, 3112, 3113, 3122, 3139, 3156
Shintom	3052
Shogun	3044
Singer	3042, 3053
Sonic Blue	3161, 3173, 3185, 3186
Sony	3001, 3007, 3033, 3048, 3052, 3073, 3082, 3083, 3114, 3116, 3140, 3151, 3152, 3170, 3178, 3179, 3180, 3182, 3183, 3184, 3188
Stack 9	3184
StreamTV	3190
Superscan	3119, 3131
Sylvania	3018, 3034, 3042, 3045, 3050, 3099, 3129, 3130, 3131, 3135, 3143, 3152
Symphonic	3029, 3045, 3048, 3050, 3152
Systemax	3184
Tagar Systems	3184
Tandy	3046
Tashiko	3043
Tatung	3154
Teac	3045, 3152, 3154
Technics	3042
Teknika	3042, 3043, 3045, 3152, 3153
Thomas	3048, 3152
Tivo	3169, 3178, 3179, 3180, 3181, 3182, 3183, 3187, 3188, 3189, 3193, 3194
TMK	3044
Toshiba	3010, 3035, 3074, 3075, 3076, 3077, 3079, 3100, 3101, 3115, 3141, 3175, 3184
Totevision	3043, 3044, 3153
Touch	3184
UltimateTV	3195, 3197
Unitech	3044
Uplus	3146
Vector Research	3047
Video Concepts	3047
Videomagic	3153
Videosonic	3044
Viewsonic	3184
Villain	3152
Voodoo	3184
Wards	3042, 3043, 3044, 3045, 3152, 3155, 3156, 3160
White Westinghouse	3029
XR-1000	3042, 3045, 3152
Yamaha	3046, 3047
Zenith	3006, 3008, 3048, 3049, 3052, 3053, 3059, 3088, 3102, 3142, 3150, 3152, 3161, 3177
ZT Group	3184

Home Theatre In Box (HTIB)

Audiovox	4015, 2172, 4031, 2206
BOSE	4001, 4017, 2070
Cambridge SoundWorks	4014, 2173
Classic	4013, 2174
Coby	4010, 2071
Curtis	4011
Denon	4026, 2069
Emerson	4006, 2066
iLive	4012
Insignia	4009, 2175
JBL	4005, 2176
JVC	4018, 2252, 4034, 2177, 4048, 2253, 4049, 2067, 4050, 2255, 4051, 2256
Koss	4003, 2068, 4003, 2265
Onkyo	4022, 2178, 4035, 2179, 4036, 2180
Panasonic	4023, 2183, 4028, 4030, 2184, 4037, 2181, 4038, 2186, 4039, 2182, 4040, 2185, 4041, 2183, 4046, 2208, 4047, 2207
Philips	4000, 2187, 4033, 2188
Pioneer	4004, 2189, 4052, 2072
RCA	4019, 2190
Samsung	4002, 2192, 4002, 2193, 4032, 2194, 4042, 2191
Sanyo	4007, 2195
Sharp	4021, 2073
Sherwood	4020, 2196, 4053
Sony	4024, 2199, 4027, 2200, 4029, 2201, 4043, 2197, 4044, 2198
Toshiba	4016, 2202
Venturer	4008, 2203
Yamaha	4025, 2204, 4045, 2205

Receiver / Tuner

Adcom	5026
Aiwa	5007, 5033, 5038, 5070, 5071, 5072, 5078, 5083, 5128, 5169
Apple	5028, 5170
B & K	5024
Bang & Olufsen	5020
BOSE	5042
Denon	5006, 5048, 5054, 5085, 5129, 5130, 5131, 5132, 5133, 5134, 5152, 5159, 5160, 5168
GE	5043, 5171
Gradiente	5025
Harman/Kardon	5018, 5039, 5110
iBOX	5175, 5178, 5179
Insignia	5013, 5157
JBL	5039
JVC	5004, 5031, 5032, 5073, 5086, 5087, 5088, 5089, 5090, 5091, 5092, 5101, 5103, 5104, 5124, 5125, 5135, 5136, 5137
Kenwood	5001, 5053, 5093, 5094, 5138, 5139, 5140, 5141, 5142, 5161
Marantz	5009
Mitsubishi	5008, 5150
NAD	5021, 5185, 5186
Nakamichi	5022, 5158
Onkyo	5003, 5079, 5105, 5106, 5107, 5108, 5119, 5120, 5143, 5144, 5153, 5154, 5155
Optimus	5027, 5176, 5177
Panasonic	5019, 5030, 5034, 5036, 5049, 5055, 5056, 5057, 5058, 5059, 5080, 5084, 5121, 5145, 5162, 5164, 5165, 5166
Pioneer	5000, 5040, 5098, 5099, 5109, 5146, 5156
Polaroid	5016, 5023
Polk Audio	5014, 5183
Proscan	5043, 5180, 5182
RCA	5043, 5045, 5046, 5050, 5060, 5074, 5095, 5096
RCA & Dimensia	5066, 5067, 5068, 5069
Rotel	5012, 5172, 5173
Sharp	5015, 5047
Sherwood	5010, 5082
Sony	5011, 5029, 5035, 5037, 5041, 5044, 5051, 5052, 5061, 5062, 5063, 5064, 5065, 5075, 5076, 5081, 5097, 5111, 5112, 5113, 5114, 5115, 5116, 5117, 5118, 5122, 5123, 5151, 5163
Sylvania	5017, 5174
Technics	5005, 5019, 5080, 5147, 5148
Wards	5040, 5181, 5184
Yamaha	5002, 5040, 5077, 5100, 5102, 5126, 5127, 5149, 5167, 5187, 5188

Amplifier

Aiwa	6001, 6011
Audiovox	6000
Carver	6001
Denon	6010
GE	6000
Harman/Kardon	6001
JBL	6004
Krell	6005
Linn	6001
Magnavox	6001
Marantz	6001, 6008, 6014
McIntosh	6006
Panasonic	6013
Parasound	6003
Philips	6001
Pioneer	6007
Proscan	6000
RCA	6000
RCA & Dimensia	6000
Sansui	6001
Soundmatters	6002
Technics	6013
Wards	6001
Yamaha	6009, 6012

TV-DVD Combo

Aiwa	1155, 2209
Akai	1247, 2210, 1248, 2211, 1257, 2033, 1267, 2058
Apex	1156, 2074, 1268, 2216
Audiovox	1249, 2078
Broksonic	1157, 2033, 1267, 2058
Coby	1158, 2217, 1250, 2218
Emerson	1251, 2226, 1271, 2129
Ilo	1020, 2075
Initial	1020, 2234
JVC	1159, 2257
LG	1036, 2268, 1160, 2267
Magnavox	1020, 2234
Mintek	1020, 2234
Panasonic	1122, 2289, 1215, 2292, 1215, 2291, 1252, 2290, 1253, 2290, 1270, 2295
Philips	1020, 2075, 1020, 2234, 1099, 2372, 1124, 2309
Polaroid	1038, 2320
RCA	1000, 2076, 1161, 2329, 1162, 2325, 1269, 2332
Samsung	1176, 2343
Sansui	1157, 2345, 1163, 2344, 1257, 2033, 1267, 2058, 1272, 2033
Sony	1259, 2371
Sylvania	1099, 2372, 1255, 2373, 1271, 2129
Toshiba	1256, 2390, 1257, 2033, 1267, 2058, 1272, 2033

TV-VCR Combo

Aiwa	1164, 3090, 1164, 3091
Broksonic	1291, 3150
Citizen	1039, 3149
Daewoo	1039, 3149, 1277, 3134
Emerson	1039, 3149, 1291, 3150
Funai	1287, 3048
GE	1165, 3092, 1288, 3051, 1289, 3147
Goldstar	1290, 3148
Harley Davidson	1287, 3048
Hitachi	1166, 3093, 1287, 3048
JVC	1167, 3094, 1168, 3095
Lloyd's	1287, 3048
Magnasonic	1039, 3149
Magnavox	1279, 3135, 1281, 3137, 1287, 3048
Magnin	1288, 3051
Memorex	1290, 3148
MGA	1288, 3051
Mitsubishi	1289, 3147
Orion	1291, 3150
Panasonic	1274, 3145, 1275, 3145, 1276, 3145, 1285, 3144, 1292, 3136
Panavision	1280, 3136
Penney	1288, 3051, 1290, 3148
Philips	1278, 3138, 1281, 3137
Quasar	1274, 3145, 1285, 3144
RadioShack	1287, 3048
RCA	1000, 3096, 1169, 3097, 1170, 3097, 1288, 3051, 1289, 3147
Samsung	1171, 3098
Sansui	1287, 3048, 1291, 3150
Sanyo	1288, 3051
Sears	1287, 3048, 1290, 3148
Sharp	1282, 3139
Sony	1141, 3140, 1287, 3048
Sylvania	1172, 3099, 1279, 3135
Symphonic	1287, 3048
Thomas	1287, 3048
Toshiba	1173, 3100, 1173, 3141, 1174, 3101
Zenith	1175, 3102, 1283, 3142, 1287, 3048, 1291, 3150

TV-DVD-VCR Combo

Akai	1265, 2288, 3120
Emerson	1264 ,2132, 3131
Magnavox	1264 ,2274, 3123
Memorex	1260, 2077, 3121
Panasonic	1224, 2374, 3134, 1241, 2375, 3119, 1243, 2374, 3123, 1244, 2132, 3131, 1245, 2331, 3129, 1246, 2294, 3125, 1246, 2321, 3124, 1261, 2374, 3122, 1266, 2288, 3118
Polaroid	1225, 2288, 3117
RCA	1162, 2132, 3132
Samsung	1137, 2212, 3125
Sharp	1242, 2350, 3131
Superscan	1226, 2288, 3128, 1264, 2288, 3124
Sylvania	1262, 2342, 3143, 1262, 2132, 3126, 1264, 2293, 3131, 1284, 2391, 3127
Toshiba	1263, 2286, 3130

DVD-VCR Combo

Apex	2126, 3084
Broksonic	2033, 3017, 2058, 3088, 2083, 3054
Daewoo	2084, 3068
Emerson	2085, 3128, 2094, 3060, 2129, 3050
Funai	2129, 3050
Go Video	2086, 3024, 2087, 3000, 2088, 3020, 2089, 3034, 2090, 3035, 2092, 3071, 2120, 3079, 2123, 3082, 2127, 3085
Goldstar	2091, 3059
Hitachi	2093, 3018, 2094, 3060, 2095, 3062
Insignia	2130, 3074
JVC	2096, 3066, 2097, 3023, 2098, 3028, 2099, 3032, 2100, 3070, 2247, 3073, 2247, 3076
LG	2016, 3059, 2101, 3078, 2266, 3065
Magnavox	2104, 3075
Memorex	2058, 3088
Panasonic	2102, 3019, 2103, 3018, 2103, 3055, 2128, 3050
Philips	2104, 3025, 2129, 3050
Pioneer	2131, 3078
Polaroid	2046, 3056, 2126, 3085
Presidian	2129, 3050
RCA	2105, 3016, 2122, 3081, 2326, 3056, 2327, 3017, 2331, 3059
Samsung	2106, 3022, 2107, 3061, 2108, 3069, 2109, 3016, 2120, 3080, 2124, 3083, 2127, 3086
Sansui	2058, 3088, 2110, 3078
Sanyo	2111, 3030
Sharp	2112, 3016, 2113, 3072, 2114, 3038
Sony	2115, 3077, 2115, 3116, 2125, 3084, 2145, 3088, 2370, 3057, 2370, 3041
Sylvania	2094, 3040, 2116, 3018, 2129, 3050
Symphonic	2129, 3033
Toshiba	2117, 3067, 2118, 3026, 2118, 3089, 2121, 3039, 2376, 3063, 2385, 3064
Zenith	2091, 3059, 2119, 3058, 2266, 3038

TV-DVD-Tuner Combo

Panasonic	1239, 2287, 5162
Polaroid	1258, 2322, 5023
Sony	1259, 2371, 5163

Rev 0210