

# Connect your *Cordless Phone* Base Station to your Battery Backup


A

- Unplug your W-Fi Gateway power cord from the AC wall outlet
- Leave existing cables in place



B

- Plug in your Battery Backup into the electrical outlet
- Plug your Wi-Fi Gateway power cord into the Battery Backup. If provided, plug the Optic Network Terminal (ONT) power
- Your Wi-Fi Gateway is now powering up (up to 10 minutes)
- **Do not** unplug the power cord or green data cable, as this can permanently damage the Wi-Fi Gateway and significantly delay your service activation.

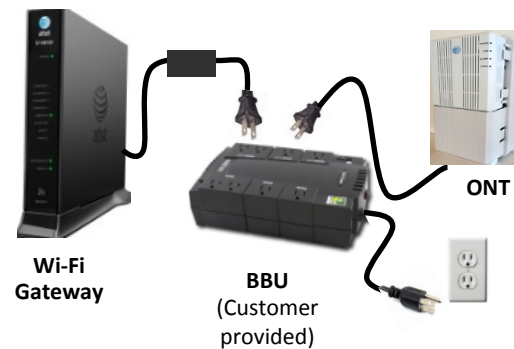

C

- Connect your base station phone line into the phone port on your Wi-Fi Gateway
- Plug your base station phone power cord into the Battery Backup



## Need Help?

- **Check Power:** Check your Wi-Fi Gateway to ensure the Power and Service lights are green
- If your TV is not responding, reset your TV receiver by pressing the Power button and holding for 10 seconds, then release. The TV receiver should restart within 5 minutes.
- For additional assistance contact the Battery Backup manufacturer

